

OMEGA™

4K / UHD

Multi-format 5x2 Matrix Switcher
for HDMI, USB-C, DisplayPort, and HDBaseT™
with USB and Wireless Link



Version Information

Version	Release Date	Notes
1	Jul 2020	Initial release
2	Nov 2020	Updated for 2.9.0 firmware. See Release Notes for more information.

Welcome to Atlona!

Thank you for purchasing this Atlona product. We hope you enjoy it and will take a extra few moments to register your new purchase.

Registration only takes a few minutes and protects this product against theft or loss. In addition, you will receive notifications of product updates and firmware. Atlona product registration is voluntary and failure to register will not affect the product warranty.

To register your product, go to <http://atlona.com/registration>

Sales, Marketing, and Customer Support

Main Office

Atlona Incorporated
70 Daggett Drive
San Jose, CA 95134
United States

Office: +1.877.536.3976 (US Toll-free)
Office: +1.408.962.0515 (US/International)

Sales and Customer Service Hours
Monday - Friday: 6:00 a.m. - 4:30 p.m. (PST)

<http://atlona.com/>

International Headquarters

Atlona International AG
Ringstrasse 15a
8600 Dübendorf
Switzerland

Office: +41.43.508.4321

Sales and Customer Service Hours
Monday - Friday: 09:00 - 17:00 (UTC +1)

Operating Notes



IMPORTANT: Visit <http://atlona.com/product/AT-OME-MS52W> for the latest firmware updates and User Manual.

Atlona, Inc. (“Atlona”) Limited Product Warranty

Coverage

Atlona warrants its products will substantially perform to their published specifications and will be free from defects in materials and workmanship under normal use, conditions and service.

Under its Limited Product Warranty, Atlona, at its sole discretion, will either:

- repair or facilitate the repair of defective products within a reasonable period of time, restore products to their proper operating condition and return defective products free of any charge for necessary parts, labor and shipping.

OR

- replace and return, free of charge, any defective products with direct replacement or with similar products deemed by Atlona to perform substantially the same function as the original products.

OR

- refund the pro-rated value based on the remaining term of the warranty period, not to exceed MSRP, in cases where products are beyond repair and/or no direct or substantially similar replacement products exist.

Repair, replacement or refund of Atlona products is the purchaser's exclusive remedy and Atlona liability does not extend to any other damages, incidental, consequential or otherwise.

This Limited Product Warranty extends to the original end-user purchaser of Atlona products and is non-transferrable to any subsequent purchaser(s) or owner(s) of these products.

Coverage Periods

Atlona Limited Product Warranty Period begins on the date of purchase by the end-purchaser. The date contained on the end-purchaser's sales or delivery receipt is the proof purchase date.

Limited Product Warranty Terms – New Products

- 10 years from proof of purchase date for hardware/electronics products purchased on or after June 1, 2013.
- 3 years from proof of purchase date for hardware/electronics products purchased before June 1, 2013.
- Lifetime Limited Product Warranty for all cable products.

Limited Product Warranty Terms – Refurbished (B-Stock) Products and Discontinued Products

- 3 years from proof of purchase date for all Refurbished (B-Stock) and Discontinued hardware and electronic products purchased on or after June 1, 2013.

Remedy

Atlona recommends that end-purchasers contact their authorized Atlona dealer or reseller from whom they purchased their products. Atlona can also be contacted directly. Visit atlona.com for Atlona's contact information and hours of operation. Atlona requires that a dated sales or delivery receipt from an authorized dealer, reseller or end-purchaser is provided before Atlona extends its warranty services. Additionally, a return merchandise authorization (RMA) and/or case number, is required to be obtained from Atlona in advance of returns.

Atlona requires that products returned are properly packed, preferably in the original carton, for shipping. Cartons not bearing a return authorization or case number will be refused. Atlona, at its sole discretion, reserves the right to reject any products received without advanced authorization. Authorizations can be requested by calling 1-877-536-3976 (US toll free) or 1-408-962-0515 (US/international) or via Atlona's website at atlona.com.

Exclusions

This Limited Product Warranty excludes:

- Damage, deterioration or malfunction caused by any alteration, modification, improper use, neglect, improper packaging or shipping (such claims must be presented to the carrier), lightning, power surges, or other acts of nature.

Atlona, Inc. (“Atlona”) Limited Product Warranty

- Damage, deterioration or malfunction resulting from the installation or removal of this product from any installation, any unauthorized tampering with this product, any repairs attempted by anyone unauthorized by Atlona to make such repairs, or any other cause which does not relate directly to a defect in materials and/or workmanship of this product.
- Equipment enclosures, cables, power supplies, batteries, LCD displays, and any accessories used in conjunction with the product(s).
- Products purchased from unauthorized distributors, dealers, resellers, auction websites and similar unauthorized channels of distribution.

Disclaimers

This Limited Product Warranty does not imply that the electronic components contained within Atlona’s products will not become obsolete nor does it imply Atlona products or their electronic components will remain compatible with any other current product, technology or any future products or technologies in which Atlona’s products may be used in conjunction with. Atlona, at its sole discretion, reserves the right not to extend its warranty offering in instances arising outside its normal course of business including, but not limited to, damage inflicted to its products from acts of god.

Limitation on Liability

The maximum liability of Atlona under this limited product warranty shall not exceed the original Atlona MSRP for its products. To the maximum extent permitted by law, Atlona is not responsible for the direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or under any other legal theory. Some countries, districts or states do not allow the exclusion or limitation of relief, special, incidental, consequential or indirect damages, or the limitation of liability to specified amounts, so the above limitations or exclusions may not apply to you.

Exclusive Remedy

To the maximum extent permitted by law, this limited product warranty and the remedies set forth above are exclusive and in lieu of all other warranties, remedies and conditions, whether oral or written, express or implied. To the maximum extent permitted by law, Atlona specifically disclaims all implied warranties, including, without limitation, warranties of merchantability and fitness for a particular purpose. If Atlona cannot lawfully disclaim or exclude implied warranties under applicable law, then all implied warranties covering its products including warranties of merchantability and fitness for a particular purpose, shall provide to its products under applicable law. If any product to which this limited warranty applies is a “Consumer Product” under the Magnuson-Moss Warranty Act (15 U.S.C.A. §2301, ET SEQ.) or other applicable law, the foregoing disclaimer of implied warranties shall not apply, and all implied warranties on its products, including warranties of merchantability and fitness for the particular purpose, shall apply as provided under applicable law.

Other Conditions

Atlona’s Limited Product Warranty offering gives legal rights, and other rights may apply and vary from country to country or state to state. This limited warranty is void if (i) the label bearing the serial number of products have been removed or defaced, (ii) products are not purchased from an authorized Atlona dealer or reseller. A comprehensive list of Atlona’s authorized distributors, dealers and resellers can be found at atlona.com.

Safety and Certification



CAUTION: TO REDUCE THE RISK OF
ELECTRIC SHOCK
DO NOT OPEN ENCLOSURE OR EXPOSE
TO RAIN OR MOISTURE.
NO USER-SERVICEABLE PARTS
INSIDE REFER SERVICING TO
QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the product.



The information bubble is intended to alert the user to helpful or optional operational instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by Atlona.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
13. Unplug this product during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC Statement



FCC Compliance and Advisory Statement: This hardware device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI licensing Administrator, Inc.

Table of Contents

Introduction	9
Features	9
Package Contents	9
Panel Description	10
Front Panel	10
Rear Panel	11
Installation	12
Connectors	12
RS-232	12
Audio	12
Relay	13
Trigger I/O	13
Connection Instructions	14
Connection Diagram	16
IP Configuration	17
Getting the IP Address	17
Getting the IP Address without a Display	17
Switching the IP Mode	18
Auto IP Mode	18
Setting the IP Address using the Web Server	19
Resetting to Factory-Default Settings	20
Device Operation	21
LED Indicators	21
Logging in to the Web Server	22
Login Registration	22
Logging in after registration	23
Setting the System Date and Time	24
Automatic Adjustment	24
Setting Local Date and Time	25
Using an NTP Server	25
Selecting the Input	26
Switching Modes	27
Matrix Mode	27
Matrix Mode w/ Static Route	29
Auto-Switching	31
Enabling / Disabling Auto Switching	31
USB Modes	32
Manual	32
Auto Switch	33
Follow Video Input	34
The Splash Screen	36
Customizing Text	36
Displaying Metadata	39
Displaying the Wireless Password	40
Cycling Background Images	41
Uploading Custom Images	42
HTML Splash Screens	43
Resetting the HTML Splash Screen	46
Wireless Configuration	47
Access Point Mode	47
Firewall Mode	50
Connect to WiFi Mode	51
Changing the SSID	54

Table of Contents

802.1X Authentication	55
Ethernet Connections	55
WiFi Connections	57
Casting	58
iOS Devices	58
OS X Devices	59
Microsoft Miracast	61
Google Chrome	61
Audio Management	63
Using External Audio Sources	63
Controlling Audio Output Volume	63
AirPlay Bluetooth Discovery	64
AirPlay / Miracast P2P PIN Codes	65
Changing the PIN Timeout	67
Moderator Mode	68
Display Control Methods	71
Active Video Presence	71
Active Video Presence with Occupancy Sensor	73
Occupancy Sensor	74
Day and Time	75
Access Point	76
Changing the Password	77
Configuration and Management Interfaces	78
Web Server	78
Login Register page	78
Login page	79
Info page	80
General page	81
System page	82
Status page	85
Splash Screen page	86
Routing page	89
USB Routing page	90
Display page	91
EDID page	97
Administration > Telnet page	98
Administration > Moderator page	99
Administration > Networking page	100
Administration > Debug page	106
Administration > User Accounts page	107
Administration > Advanced page	108
Administration > Pre-Release page	113
Administration > Audio page	114
Administration > Event Viewer page	115
Appendix	116
Updating the Firmware	116
Mounting Instructions	118
Single-unit Rack Installation	118
Dual-unit Rack Installation	119
Flat Surface	120
Specifications	121

Introduction

The Atlona **AT-OME-MS52W** is a 5x2 matrix switcher with HDMI, USB-C, DisplayPort, and wireless AV inputs, plus HDMI and HDBaseT outputs. It features wireless presentation capability and native screen mirroring for iOS®, Android™, Mac®, Chromebook™, and Windows®. Part of the Omega™ Series of integration products for modern AV communications and collaboration, the OME-MS52W is HDCP 2.2 compliant and features HDBaseT extension for video up to 4K/60 4:2:0, plus embedded audio, control, Ethernet, and USB over distances up to 330 feet (100 meters). All inputs and the local HDMI output support 4K HDR and 4K/60 4:4:4 at HDMI data rates up to 18 Gbps. The integrated USB extension addresses the challenge of connecting between USB devices at remote locations, and is ideal for software video conferencing and touch or interactive displays. The OME-MS52W includes USB 2.0 and USB-C interfaces for three host PCs, plus two peripheral ports for devices such as a camera, microphone, speakerphone, or keyboard and mouse.

Features

- 5x2 AV matrix switcher
- USB-C input for AV, data, and device charging
- HDBaseT and HDMI outputs with selectable AV switching modes
- Wireless AV gateway
- Native platform-based, wireless interfacing
- Moderator mode for wireless AV presentations
- Video, audio, power, and data over category cable utilizing HDBaseT technology⁽¹⁾
- USB 2.0 interfacing and extension over HDBaseT
- Automatic input selection and automatic display control
- Contact closure for screen or display lift control
- Trigger I/O ports for occupancy sensing
- Award-winning 10 year limited product warranty


Package Contents

1 x AT-OME-MS52W
1 x Captive screw connector, 5-pin
1 x Captive screw connector, 3-pin
2 x Wi-Fi antenna modules
1 x USB-C cable
2 x Mounting plate
4 x Mounting screw
1 x Long rack ear
1 x Short rack ear
4 x Feet w/rubber grips
1 x 24 V DC power supply
1 x IEC power cord
1 x Installation Guide

⁽¹⁾ Maximum 120 Mbps data rate supported over HDBaseT.


Panel Description

Front Panel

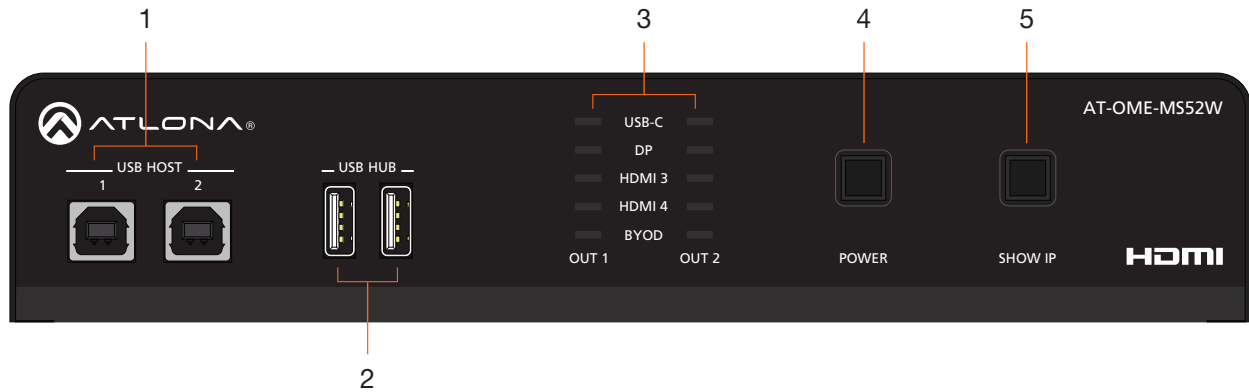

- 1 USB HOST**
Connect a USB cable from each of these ports to host computers.
- 2 USB HUB**
Connect up to two USB devices (e.g. mouse, keyboard, etc.) to these ports. These ports provide 2.5 W per USB device interface.
- 3 OUT 1 / OUT 2 LED Indicators**
Each set of LED indicators displays the output being used: **OUT 1 = HDMI OUT, OUT 2 = HDBaseT OUT.**
- 4 POWER**
Press this button to power-on or power off the AT-OME-MS52W and/or the connected displays.
- 5 SHOW IP**
Press this button to display the IP address of the AT-OME-MS52W on the connected display.

Rear Panel

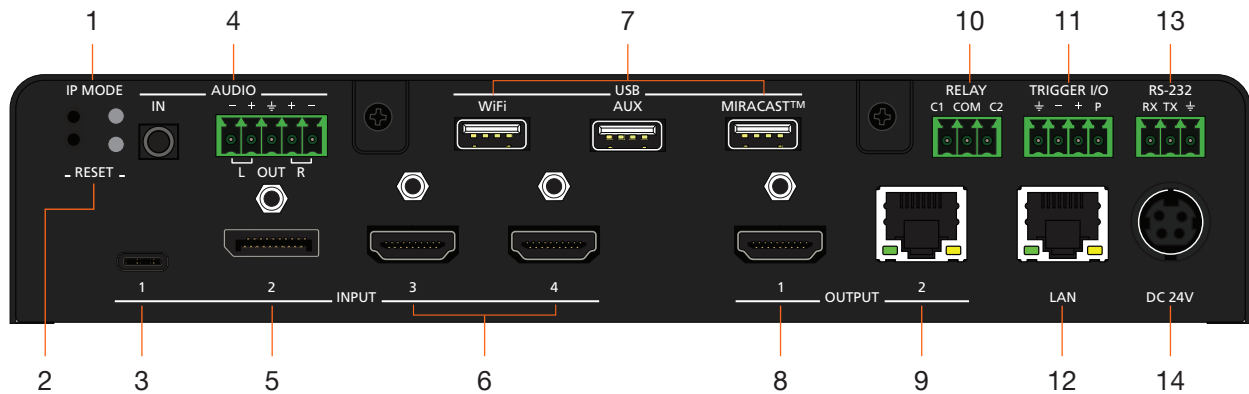

1 IP MODE

Press and release this button to set the IP mode of the AT-OME-MS52W. Refer to [IP Configuration \(page 17\)](#) for more information.

2 RESET

Press and release this button to reset the unit to factory-default settings. Refer to [Resetting to Factory-Default Settings \(page 20\)](#) for more information.

3 INPUT (USB-C)

Connect a USB-C cable from this port to a USB-C source.

4 AUDIO

Connect a 3.5 mm mini-stereo cable from an analog audio source to the **IN** port, to provide optional embedded analog audio on the output. Connect a balanced stereo audio output device to the **OUT** port using the included captive screw block for audio de-embedding. Refer to [Audio \(page 12\)](#) for wiring information.

5 INPUT (DisplayPort)

Connect a DisplayPort device to this port.

6 INPUT (HDMI)

Connect an HDMI cable from each of these ports to a UHD/HD source.

7 USB HUB

Connect the included WiFi antenna to these ports. The **MIRACAST** port is reserved for the Miracast casting protocol. The **AUX** port is reserved for system use.

8 OUTPUT (HDMI)

Connect an HDMI cable from this port to an HD/UHD display.

9 OUTPUT (HDBaseT)

Connect to a locally powered HDBaseT receiver such as the AT-OME-EX-RX.

10 RELAY

Connect one of the included 3-pin captive screw connectors to this port to control screens, drapes, lights, or other devices.

11 TRIGGER I/O

Connect voltage-controlled device to this port. A 4-pin captive screw connector is required.

12 LAN

Connect an Ethernet cable from this port to the network.

13 RS-232

Use the included 3-pin captive screw connector to connect an RS-232 controller or automation system.

14 DC 24V

Connect the included 24 V DC power supply from this power receptacle to an available AC electrical outlet.


Installation

Connectors

RS-232

The AT-OME-MS52W provides an RS-232 port which can be used to control a display connected to the HDMI output. Atlona recommends controlling the AT-OME-MS52W using IP and reserving the RS-232 port for local display control.

1. Use wire strippers to remove a portion of the cable jacket.
2. Remove at least 3/16" (5 mm) of insulation from each of the wires.
3. Insert the wires into correct terminal using the included 3-pin captive screw connector.
4. Attach the 3-pin connector block to the **RS-232** port on the AT-OME-MS52W.

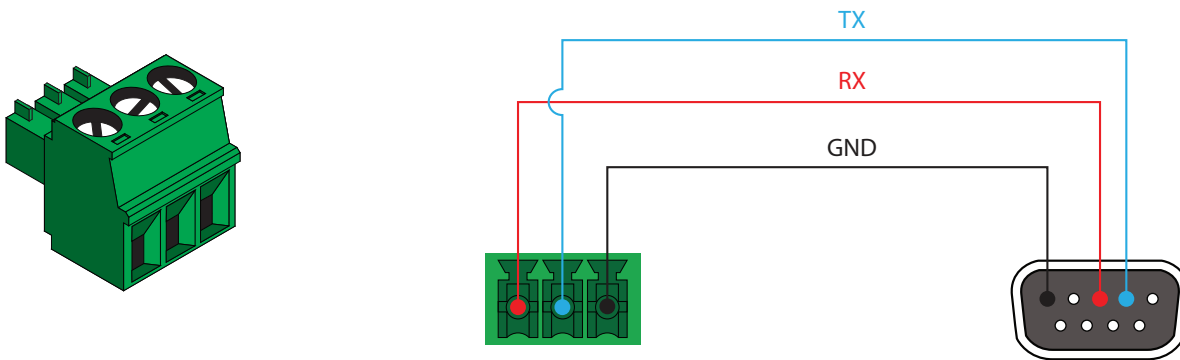


Audio

The AT-OME-MS52W provides the ability to output two-channel balanced analog audio on the **AUDIO OUT** port, using the included 5-pin captive screw connector.

Use wire strippers to remove enough insulation to allow each wire to be securely fastened to each terminal of the captive screw connector block and connect the wires as shown.


Balanced XLR audio

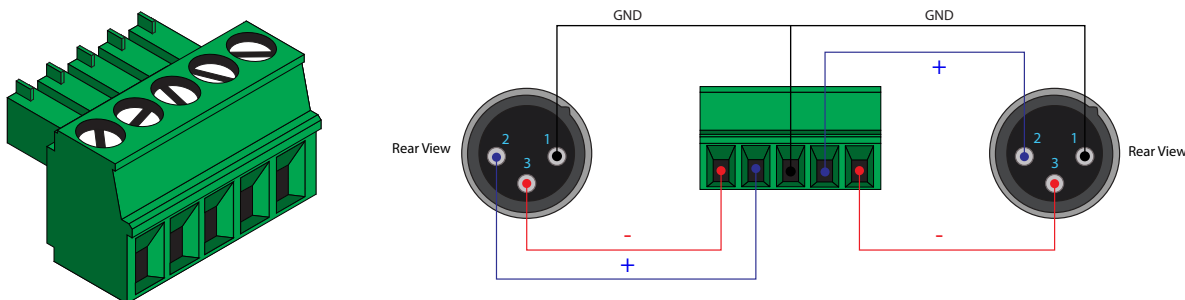

Relay


The AT-OME-MS52W provides a **RELAY** port, allowing the control of screens, curtains, and other devices. Use a 48 V DC relay with no more than 1 A current draw.

When the AT-OME-MS52W is powered-on or rebooted, **C1** and **C2** are set to the Normally Open (NO) state.

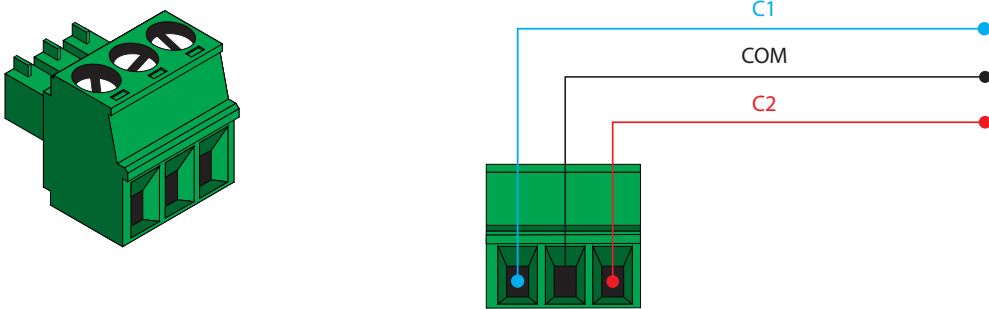


Trigger I/O

The **TRIGGER I/O** port allows voltage-controlled devices, such as an occupancy sensor, to be connected to the AT-OME-MS52W. Use the included 4-pin captive screw connector to connect the device. Voltage range is 3 to 30 V DC.

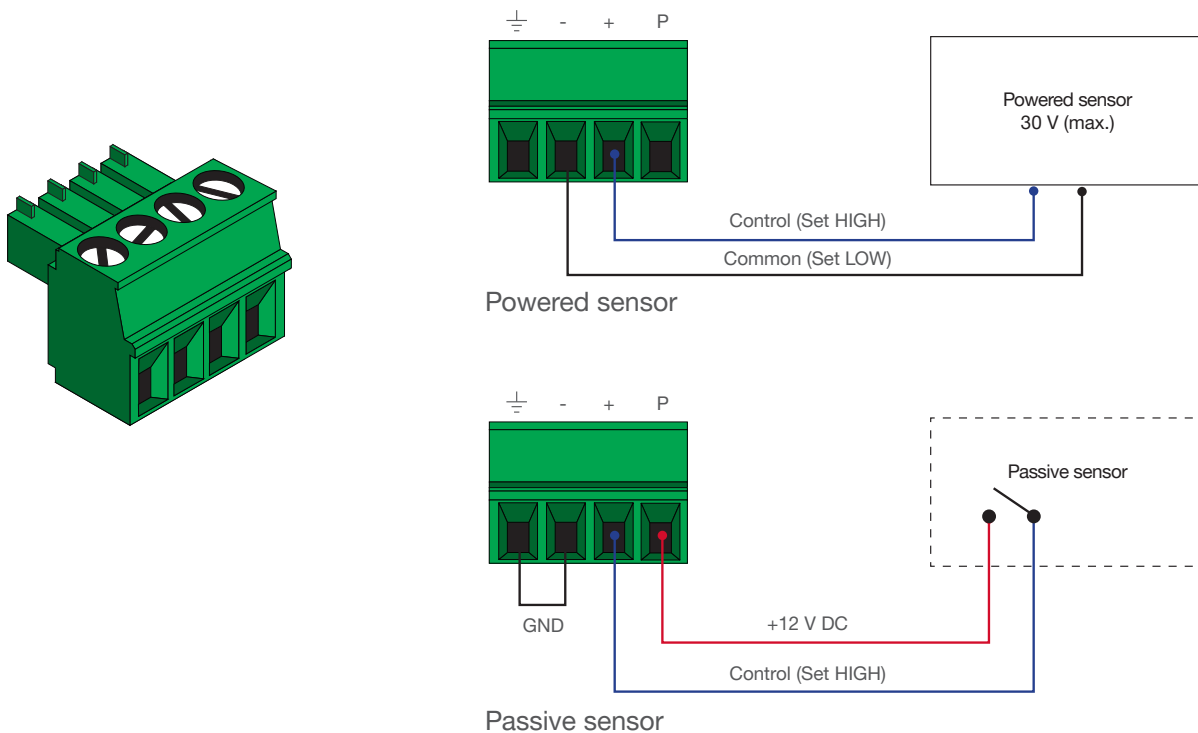

Connection Instructions

1. Connect up to two USB host computers to the **USB HOST** ports on the front panel.
2. Connect two USB devices, such as a speakerphone, to the **USB HUB** ports on the front panel.

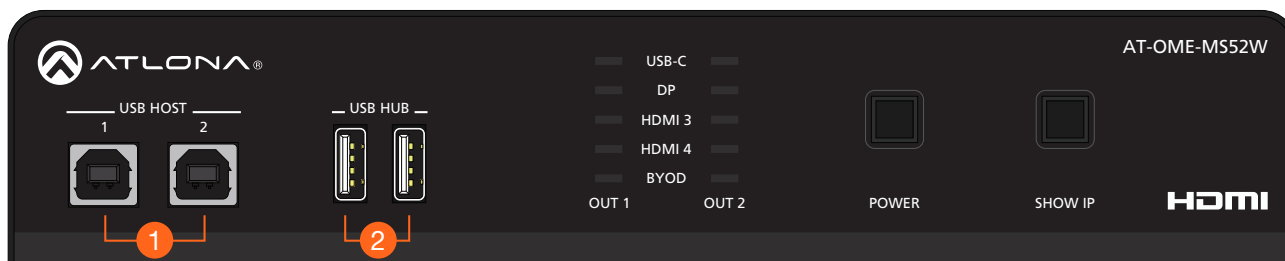


3. Connect a USB-C cable from a source to the **USB-C (1)** port.
4. Connect a DisplayPort cable from a source to the **DP IN (2)** port.
5. Connect up to two UHD/HD sources, using HDMI cables, to the **HDMI IN (3)** and **HDMI IN (4)** ports.
6. Connect an HDMI cable from the **HDMI OUT** port to a UHD/HD display.
7. Connect a category cable (CAT-5e or better), up to 330 feet (100 meters), from the **HDBaseT OUT** port to a compatible receiver, such as the AT-OME-EX-RX.
8. Connect an Ethernet cable from the **LAN** port to the Local Area Network (LAN). Atlona recommends this step and provides access to the built-in web server, which can be used to control and manage the AT-OME-MS52W.

Core	Shielding	CAT5e	CAT6	CAT6a	CAT7
Solid	UTP (unshielded)	■	■ ■ ■	■ ■ ■ ■	N/A
	STP (shielded)	■ ■	■ ■ ■ ■	■ ■ ■ ■ ■	■ ■ ■ ■ ■

Cable	Max. Distance @ 4K	Max. Distance @ 1080p
CAT5e	295 feet (90 meters)	330 feet (100 meters)
CAT6a / CAT6a / CAT7	330 feet (100 meters)	330 feet (100 meters)



IMPORTANT: Stranded or patch cable is not recommended due to performance issues. Shielded cables are strongly recommended to minimize signal noise and interference.

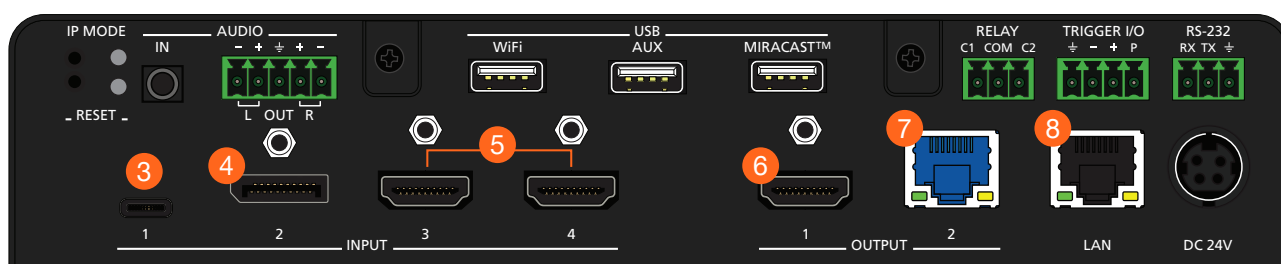

9. Connect the included USB wireless antennas to the **WiFi** and **MIRACAST™** ports. The **WiFi** port supports Google Cast™ and Apple AirPlay®. The **MIRACAST™** only supports Miracast.




IMPORTANT: Only use Atlona WiFi USB modules. Other WiFi modules may not be supported by this product.


10. OPTIONAL: Connect a 3.5 mm analog audio cable from an analog source to the **AUDIO IN** port. This audio source can be used to embed analog audio on any of the input sources.
11. OPTIONAL: Connect the included green 5-pin captive screw connector to the **AUDIO OUT** connector. Refer to [Audio \(page 12\)](#) for wiring information.
12. OPTIONAL: Connect the relay leads from the control motors of the projection screen, blinds, or curtains, to the relay outputs to the **RELAY** port, using the included 3-pin captive screw connector. Use a 48 V DC relay with no more than 1 A current draw. Refer to [Relay \(page 13\)](#) for wiring information.
13. OPTIONAL: Connect a trigger device, such as an occupancy sensor switch, to the **TRIGGER I/O** port. A 4-pin captive screw connector is required. Voltages from 3 to 30 V are supported. Refer to [Trigger I/O \(page 13\)](#) for wiring information.
14. OPTIONAL: Use the included captive screw connector to connect a serial cable from the **RS-232** port on the AT-OME-MS52W, to the RS-232 port on the display. Refer to [RS-232 \(page 12\)](#) for wiring information.
15. Connect the included power supply to the **DC 24V** connector and connect the power cord to an available electrical outlet. Connect the included power supply to the **DC 24V** connector and connect the power cord to an available electrical outlet.



NOTE: The AT-OME-MS52W may take up to five minutes to complete the initial boot process.

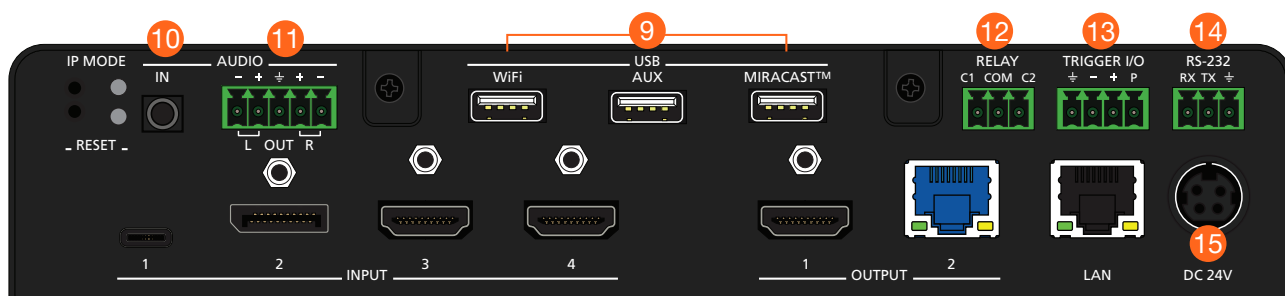

Connection Diagram

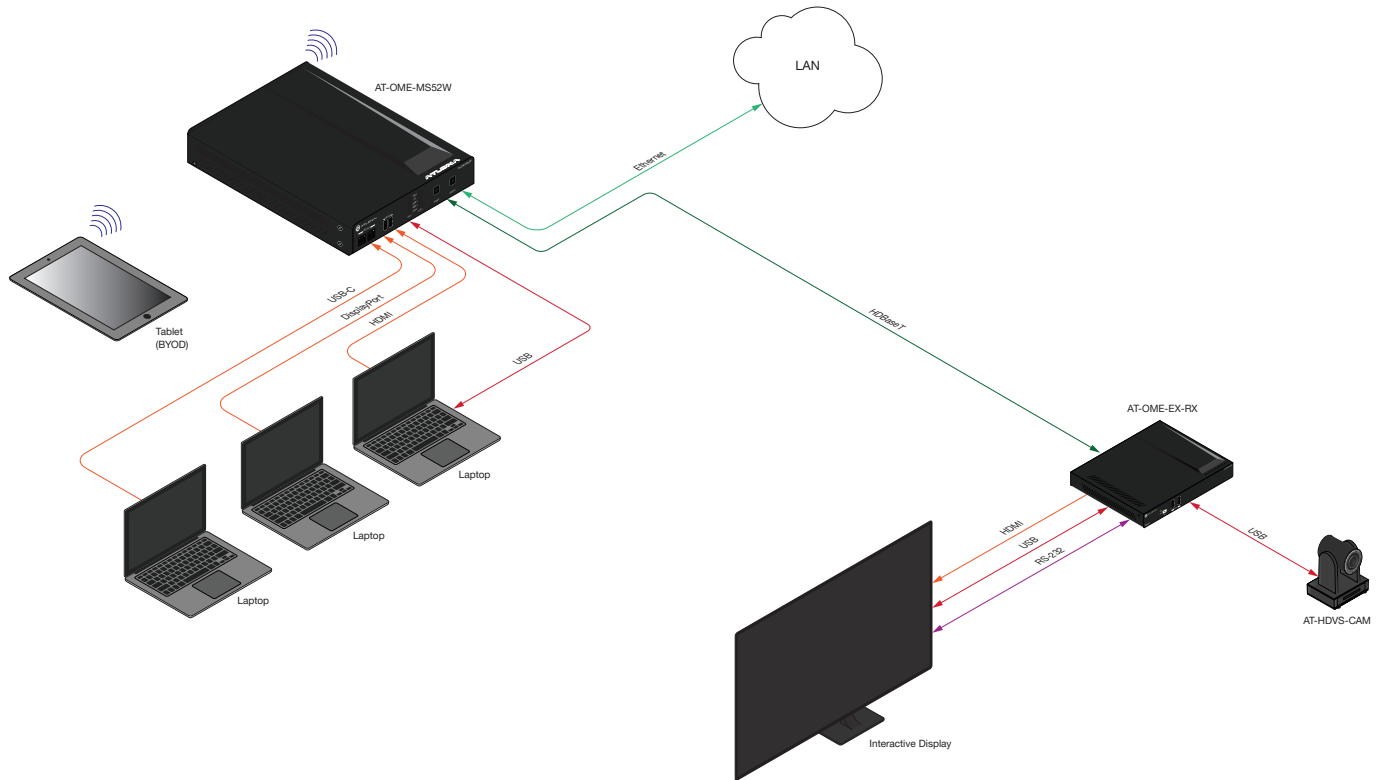


IP Configuration

The AT-OME-MS52W is shipped with DHCP enabled. Once connected to a network, the DHCP server (if available), will automatically assign an IP address to the unit. Pressing the SHOW IP button will display the current IP address of the AT-OME-MS52W. Alternatively, an IP scanner, along with the MAC address on the bottom of the unit, can also be used to identify the unit on the network.

Getting the IP Address

1. Make sure the AT-OME-MS52W is powered.
2. Connect a display to the HDMI output (**OUTPUT 1**). Make sure the display is powered.
3. Press and release the **SHOW IP** button on the front panel. The IP address of the AT-OME-MS52W will be displayed on the screen.

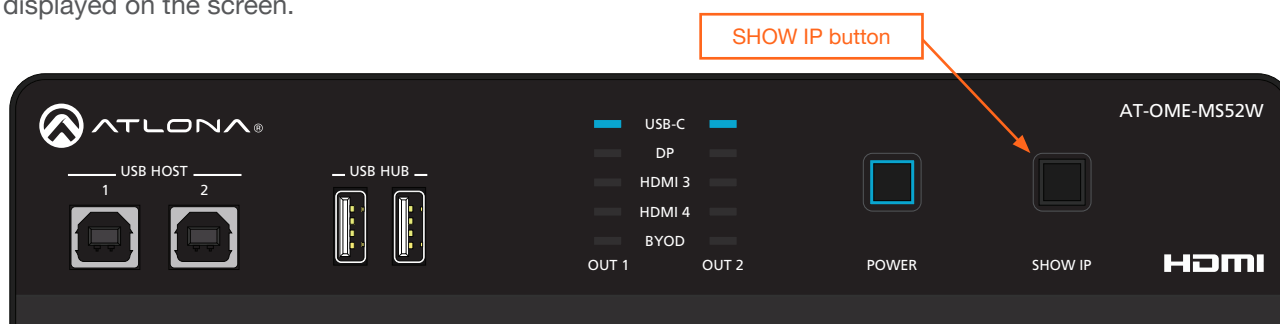

Getting the IP Address without a Display

If a display device is unavailable, use the following procedure to obtain the IP address of the AT-OME-MS52W.

1. Make sure the AT-OME-MS52W is powered and ready for operation.
2. Insert a USB drive into the **AUX** port and wait approximately 10 seconds, then remove the USB drive from the **AUX** port insert the drive into an available USB port on a computer.
3. Two files will be present on the USB drive. One file is formatted for Windows and the other is formatted for Linux.

Windows: AtlonaReport-Win-GWB-20170821200241.txt


Linux: AtlonaReport-Unix-GWB-20170821200241.txt

4. Double-click the desired file to open it. The IP address of the AT-OME-MS52W is listed under Ethernet #1. An example is shown below.

Ethernet #1

IP : 192.168.41.68


MAC : B8:98:B0:05:7E:73

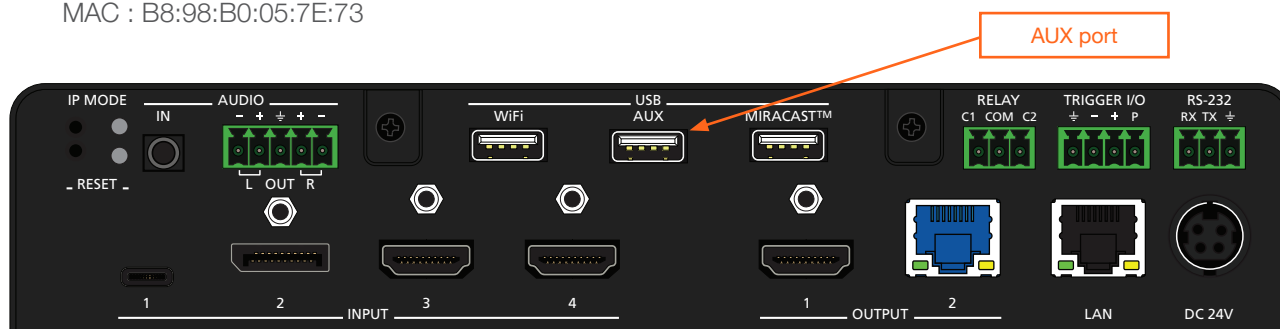

Switching the IP Mode

If a static IP address is desired, the unit can be switched to static IP mode. Use one of the following procedures to switch between DHCP and static IP mode. The default static IP address of the AT-OME-MS52W is 192.168.1.254. If the AT-OME-MS52W is unable to detect a DHCP server within 15 seconds, then the unit will use a self-assigned IP address within the range of 169.254.xxx.xxx. If this occurs, refer to [Auto IP Mode \(page 18\)](#) for more information.

1. Make sure the AT-OME-MS52W is powered.
2. Press and hold the **IP MODE** button for at least 15 seconds.

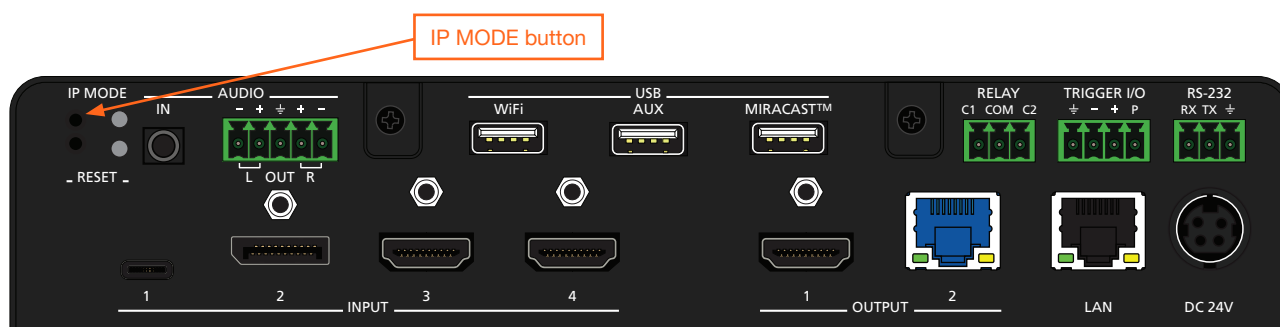

3. Release the **INPUT** button once all the front-panel LED indicators begin to flash. This will cause the unit to reboot which may take up to five minutes. The number of flashes will indicate the currently selected IP mode:

Input LED Indicators flash	Description
Two	DHCP mode
Four	Factory Static IP mode (IP address set to 192.168.1.254)

Auto IP Mode

If the AT-OME-MS52W is unable to detect a DHCP server within 15 seconds, then the unit will use a self-assigned IP address within the range of 169.254.xxx.xxx. If this occurs, connect an Ethernet cable directly from the **LAN** port of the AT-OME-MS52W to the LAN port of a computer, then do the following:

1. Click **Start > Settings > Control Panel > Network and Sharing Center**.
2. Click **Change adapter settings**.
3. Right-click on the adapter that is used to establish a wired connection to the network, and select **Properties** from the context menu.
4. Under the **Ethernet Properties** dialog box, select **Internet Protocol Version 4** and then click the **Properties** button. Click the **Use the following IP address** radio button.



IMPORTANT: Before continuing, write down the current IP settings in order to restore them, later. If **Obtain an IP address automatically** and **Obtain DNS server automatically** are selected, then this step is not required.

5. Enter the desired static IP address or the IP address provided by the network administrator. If the computer does not require Internet access or if a statically-assigned IP address is being used, then an IP address of 169.254.xxx.xxx can be entered.
6. Set the subnet mask to 255.255.0.0.
7. Click the **OK** button then close all **Control Panel** windows.

Setting the IP Address using the Web Server

The IP mode of the AT-OME-MS52W can also be set using the built-in web server. In order to access the web server, the IP address of the AT-OME-MS52W must be known. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.

1. Open the desired web browser and enter the IP address of the AT-OME-MS52W.
2. Login using the required credentials.
3. Click **Administration > Networking**.
4. Under the **Ethernet** window group, click the **Mode** drop-down list to select **DHCP**, **Static**, or **Factory Static**. If set to **Static**, the **IP**, **Network Mask**, **Gateway** fields can be modified.

If set to **Factory Static**, then the IP settings will be set to the following values:


IP Address	192.168.1.254
Network Mask	255.255.0.0
Gateway	192.168.1.1

Both **DNS Server** fields can be modified when set to either **Static** or **Factory Static** mode.

5. Under the Save window group, click the **Save** button, next to **Save Changes**, to commit changes.




NOTE: When saving network settings, the AT-OME-MS52W may prompt for a reboot.

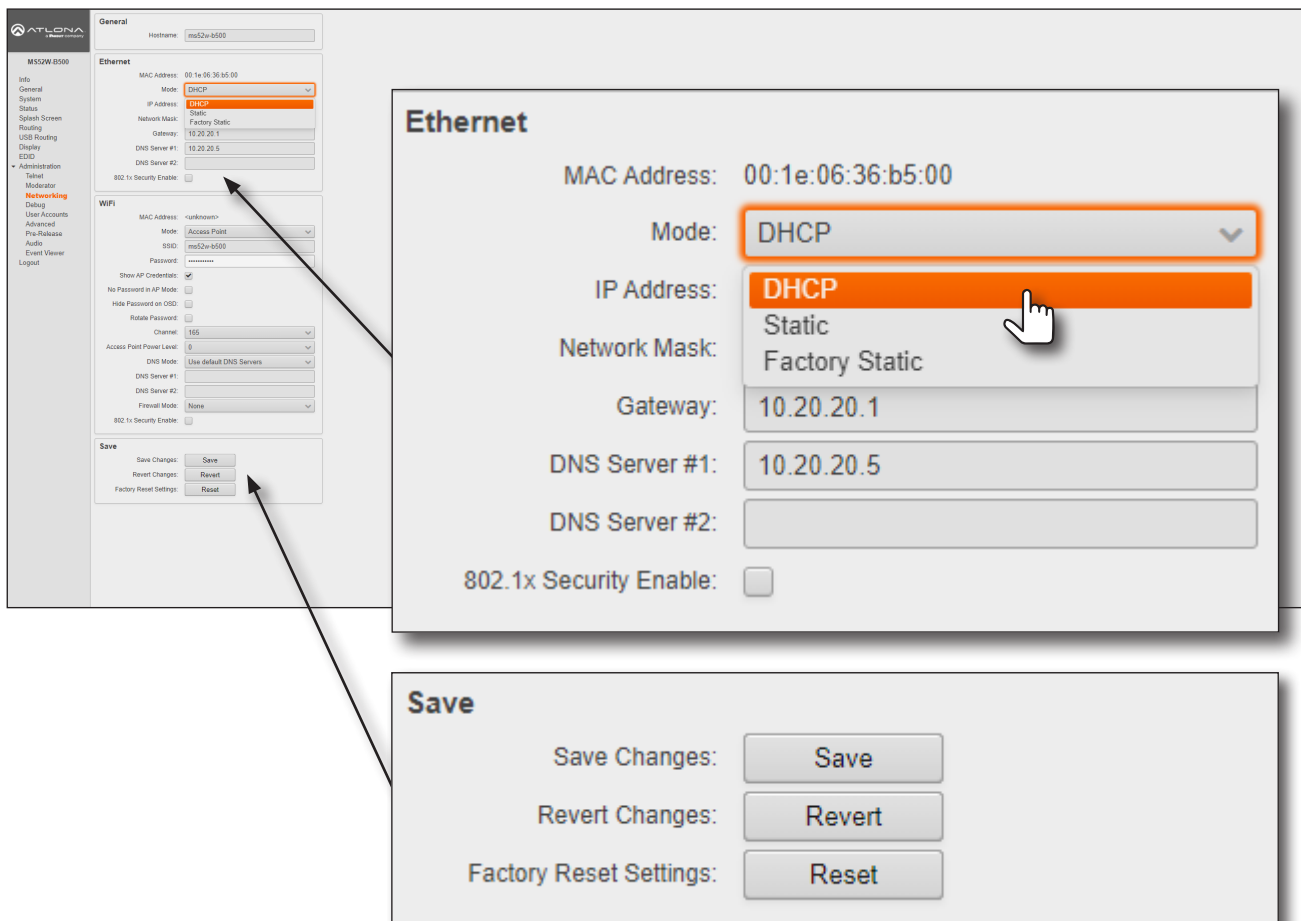

The screenshot displays the AT-OME-MS52W web interface. On the left, the 'Administration > Networking' menu is visible. The main content area shows the 'Ethernet' settings. The 'Mode' dropdown is set to 'DHCP'. Below it, the 'IP Address' is set to 'DHCP', and the 'Network Mask' is set to 'Static'. The 'Gateway' is set to '10.20.20.1'. The 'DNS Server #1' is set to '10.20.20.5'. The '802.1x Security Enable' checkbox is unchecked. At the bottom, the 'Save' dialog is open, showing three buttons: 'Save Changes', 'Revert Changes', and 'Factory Reset Settings'. The 'Save Changes' button is highlighted with a red box, and a mouse cursor is pointing at it.

Resetting to Factory-Default Settings

1. Press and hold the **RESET** button for five seconds.
2. Release the **RESET** button once the **RESET** LED indicator begins to flash. The LED indicator will flash three times to indicate that the unit has been reset to factory-default settings.

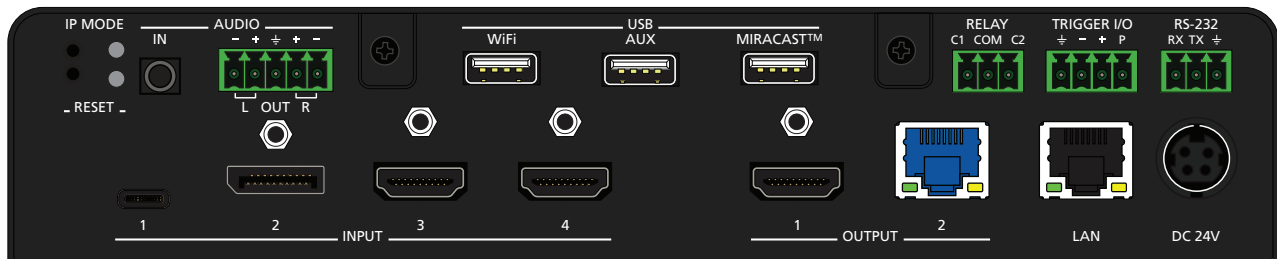

Device Operation

LED Indicators

The LED indicators on both the front and rear of the unit provide basic information on the current status of the AT-OME-MS52W. The **POWER** button has a backlit LED indicator.


LED	Description	
POWER	Solid blue 	• Unit is powered and is in normal operating mode.
	Solid red 	• Unit is powered and is in standby mode.
	Off 	• Unit is not powered.
USB-C DP HDMI 3 HDMI 4 BYOD	Solid blue 	• The input is the currently selected (active) input.
	Off 	• The input is not active.
IP MODE	Flash green (4x) 	• Flashes four times to indicate that the unit is being set to DHCP mode. Refer to IP Configuration (page 17) for more information.
	Flash green (2x) 	• Flashes twice to indicate that the unit is being set to static IP mode and will be assigned the IP address of 192.168.1.254.
	Off 	• Normal operating mode.
RESET	Flash green (3x) 	• Unit is being set to factory-default settings. Refer to Resetting to Factory-Default Settings (page 20) for more information.
	Off 	• Normal operating mode.

Logging in to the Web Server

Most of the AT-OME-MS52W operation is handled through the built-in web server. In order to access the web server, the IP address of the unit must be known. Refer to [IP Configuration \(page 17\)](#) for more information.

Login Registration

1. Launch the desired web browser and enter the IP address of the AT-OME-MS52W in the address bar.
2. The AT-OME-MS52W **Login Registration** page will be displayed.

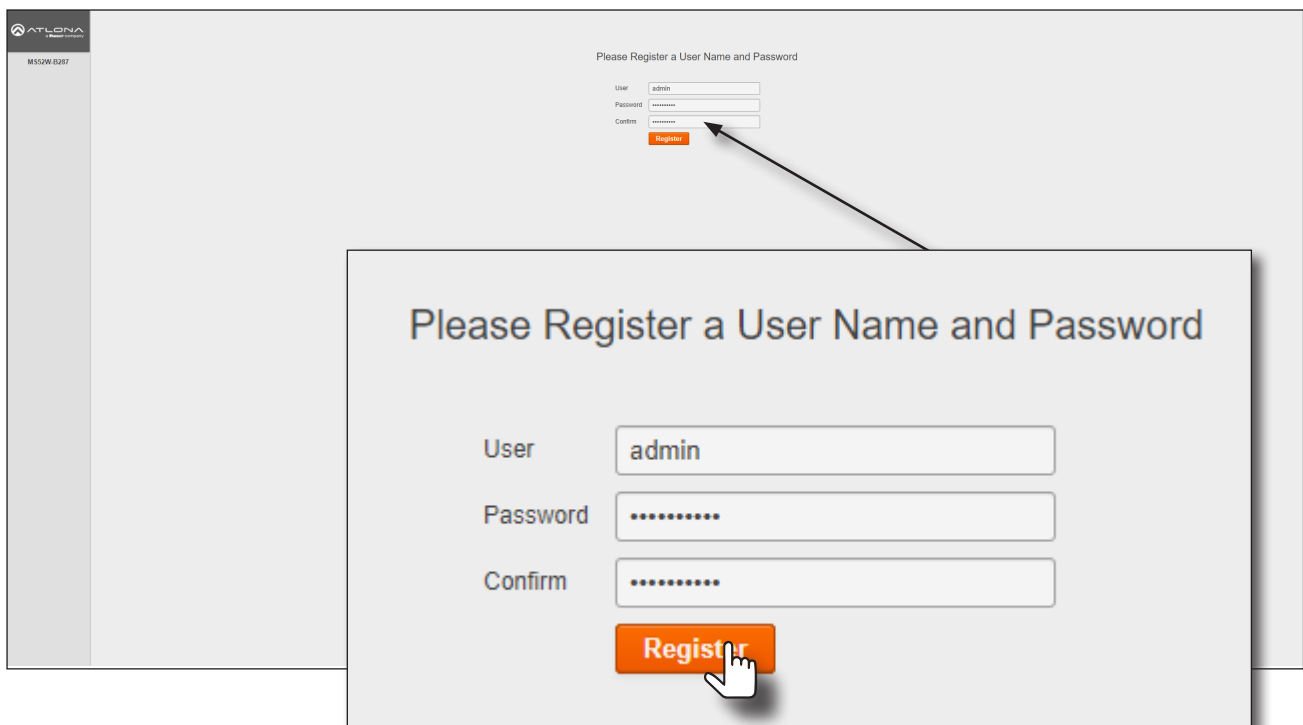

3. Enter the desired username in the **User** field. In the example below, the username `admin` is used.
4. Enter the desired password in the **Password** field.



IMPORTANT: The password must contain a minimum of 8 characters, including: 1 uppercase character, 1 lowercase character, and 1 number. Note that the **Password** and **Confirm** fields will be masked when enter the password.


5. Verify the password by entering it in the **Confirm** field.
6. Click the **Register** button.
7. The **Info** screen will be displayed. Refer to [Info page \(page 80\)](#) for more information.
8. The login registration process is complete.

Logging in after registration

1. Launch the desired web browser and enter the IP address of the AT-OME-MS52W in the address bar.
2. Enter the correct username and password in the respective fields.
3. Click the **Login** button.



NOTE: If using a secure connection, click the **Secure Login** button.

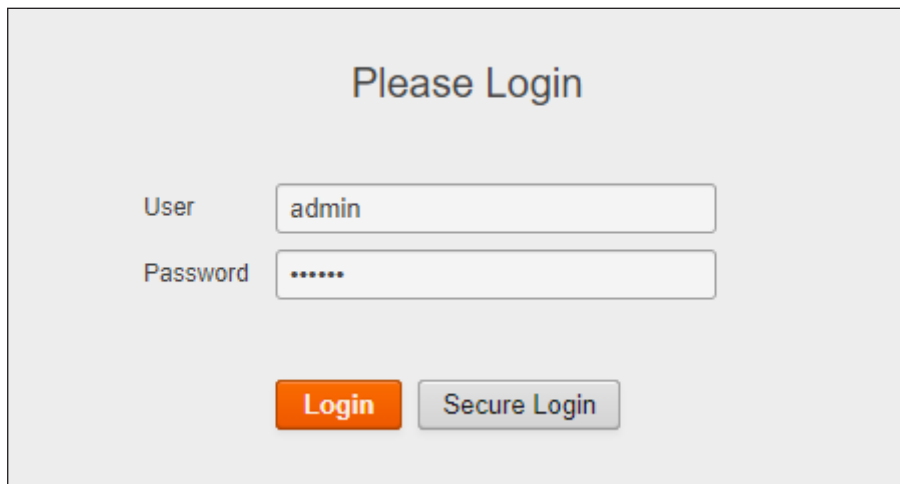

The screenshot shows a web interface titled "Please Login". It contains two input fields: "User" with the text "admin" and "Password" with masked characters ".....". Below the fields are two buttons: "Login" (orange) and "Secure Login" (gray).

4. The **Info** page will be displayed and the login process is complete. Refer to [Info page \(page 80\)](#) for more information.

Setting the System Date and Time

The AT-OME-MS52W uses the internal clock to store the current date and time. When setting the time and date, Universal Coordinated Time (UTC) must be used.




IMPORTANT: In order for proper unit operation, it is critical that the AT-OME-MS52W be set to the correct UTC time setting.

Automatic Adjustment

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **System** in the side menu bar.
3. Under the **Time** window group, click the [here](#) link to launch a web browser and obtain the current UTC. Both the current local time and date will be set.



NOTE: Date and time can also be manually adjusted by clicking the **Set** button. However, this is not recommended.

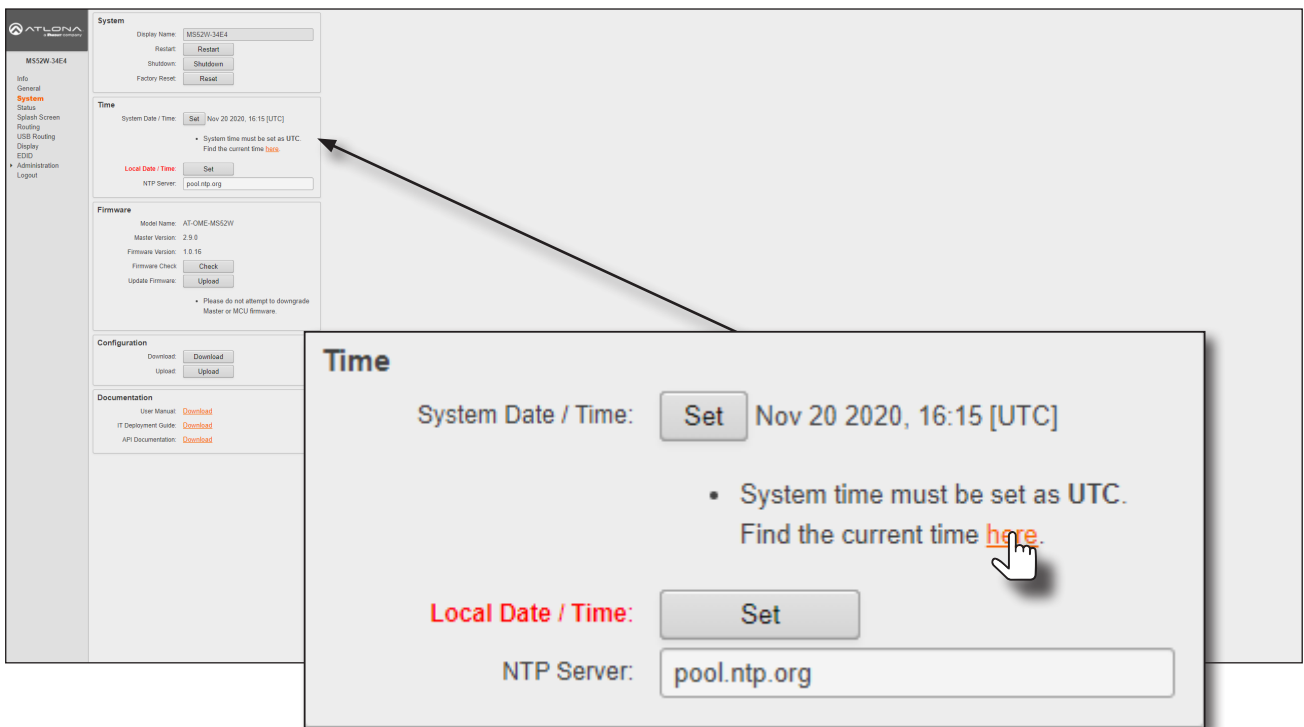

The screenshot displays the AT-OME-MS52W web interface. The left sidebar shows the 'System' menu item selected. The main content area shows the 'System' configuration page. The 'Time' section is highlighted with a black arrow. A modal window titled 'Time' is overlaid on the right side of the page. The modal contains the following information:

- System Date / Time:** Set Nov 20 2020, 16:15 [UTC]
- Local Date / Time:** Set
- NTP Server:** pool.ntp.org
- Instructions:** System time must be set as UTC. Find the current time [here](#).

Setting Local Date and Time




IMPORTANT: If the Local Date / Time field appears highlighted in **red** (shown above), then this task must be performed to ensure proper functionality of the AT-OME-MS52W.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **System** in the side menu bar.
3. Under the **Time** window group, next to **Local Date / Time**, click the **Set** button. Both the current local time and date will be set.

Using an NTP Server


If NTP is functioning correctly, then the date and time will be set automatically. However, the local time will need to be set.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **System** in the side menu bar.
3. Under the **Time** window group, enter the desired server in the NTP Server field. The default NTP server is `pool.ntp.org`.
4. Click the **Set** button, next to **Local Date / Time**.

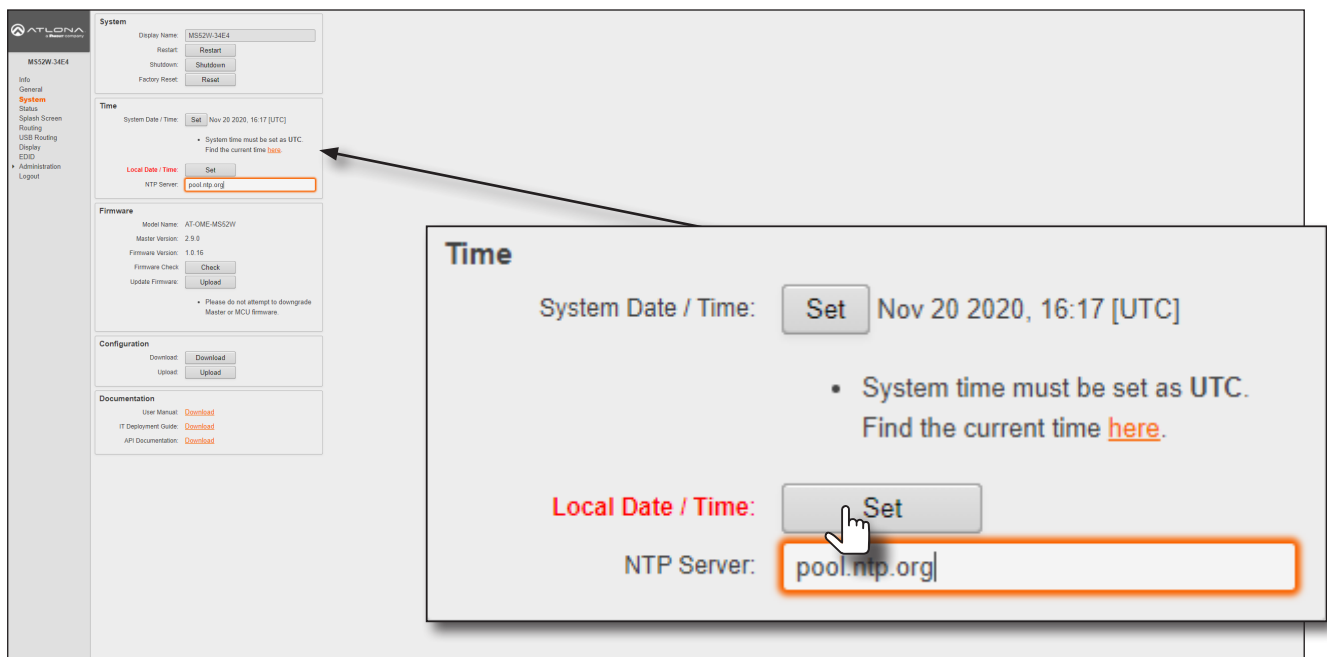


Selecting the Input

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Routing** in the side menu bar.
3. Under the **Input Selection** window group, click the desired input.

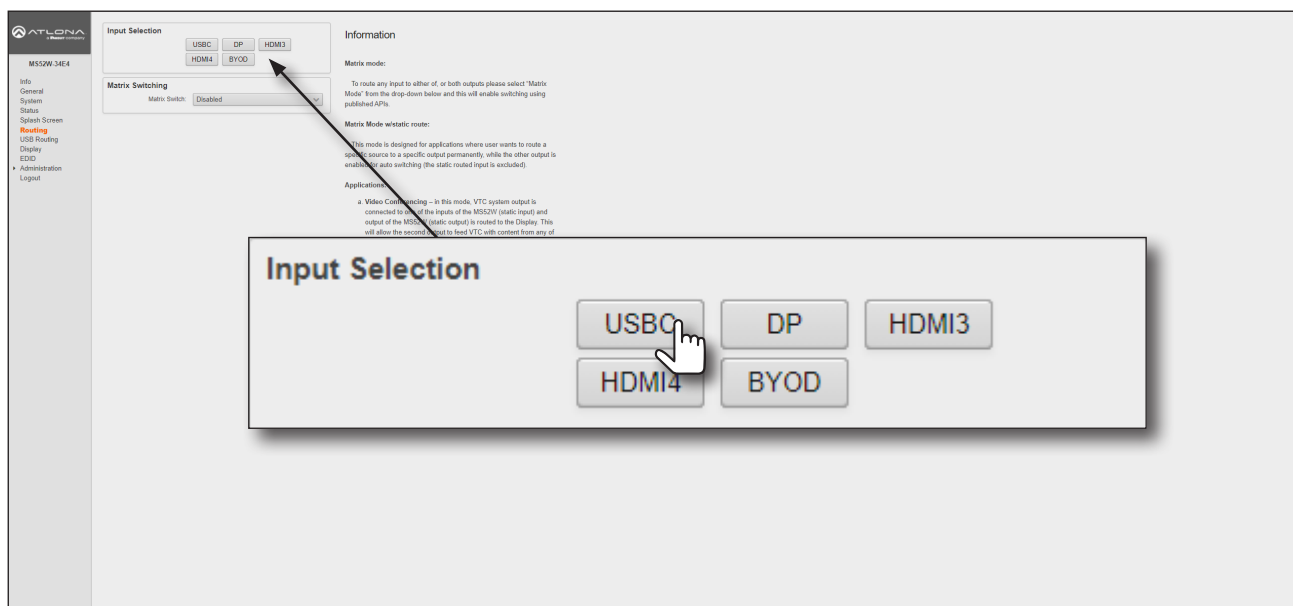

The diagram below, shows each input on the AT-OME-MS52W, and its associated **Input Selection** button within the web server.

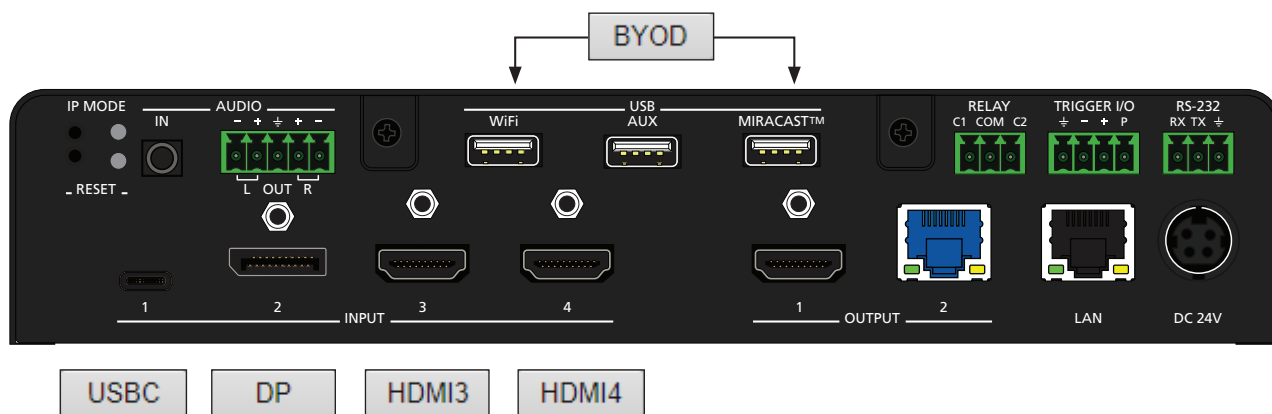

Switching Modes

The AT-OME-MS52W features two switching modes: **Matrix Mode** and **Matrix Mode with static route**. Each of these modes will be covered in the following section and are configured using the built-in web server.


Matrix Mode

This mode allows the AT-OME-MS52W to independently switch between any input to any output. Auto switching and display control is disabled in Matrix Mode.


1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Routing** in the side menu bar.
3. Click the **Switching Mode** drop-down list and select **Matrix Mode**.




IMPORTANT: When the AT-OME-MS52W is set to Matrix Mode, both auto-switching and display control will be disabled.

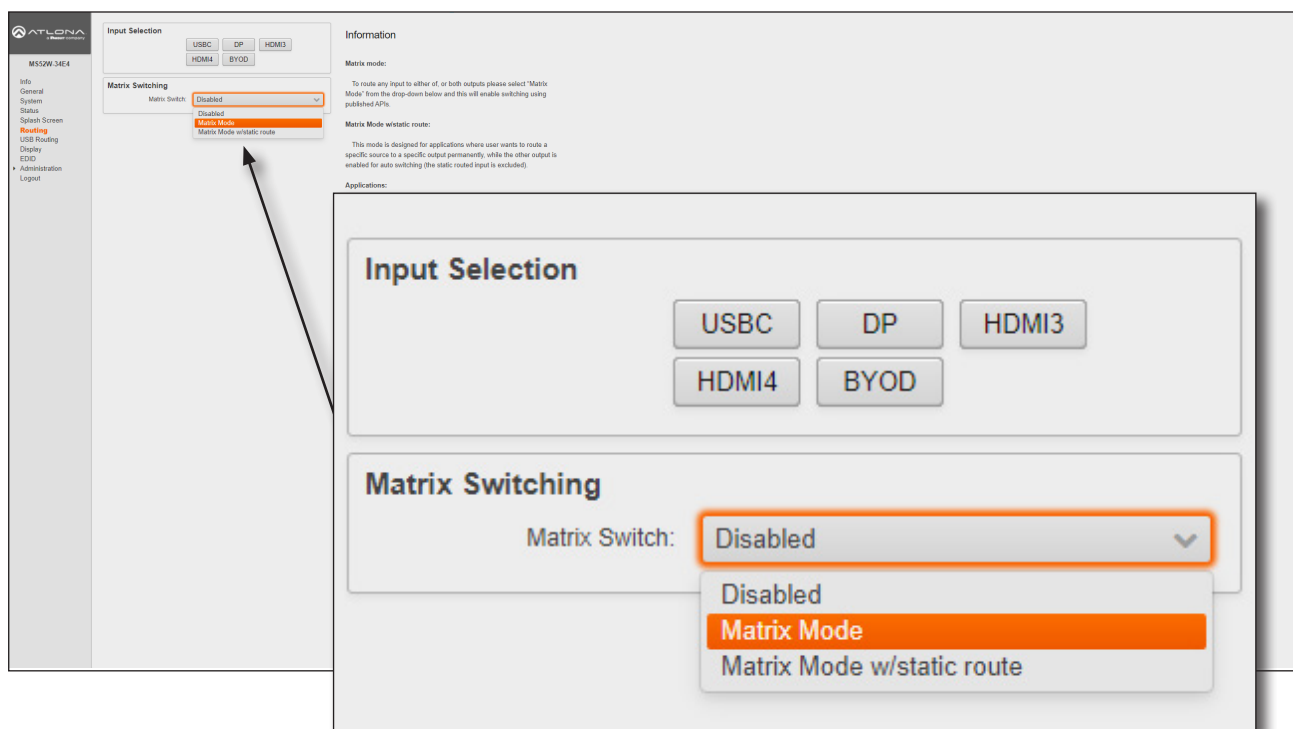


4. The **Matrix Switching** window group now contains the following options:

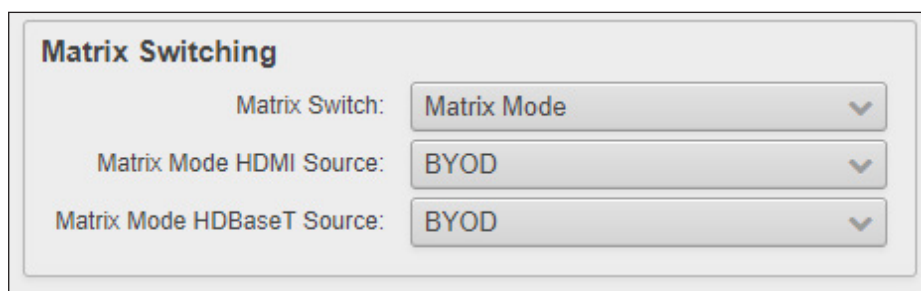

- Click the **Matrix Mode HDMI Source** drop-down list and select the input to be routed to the **HDMI OUT** port.

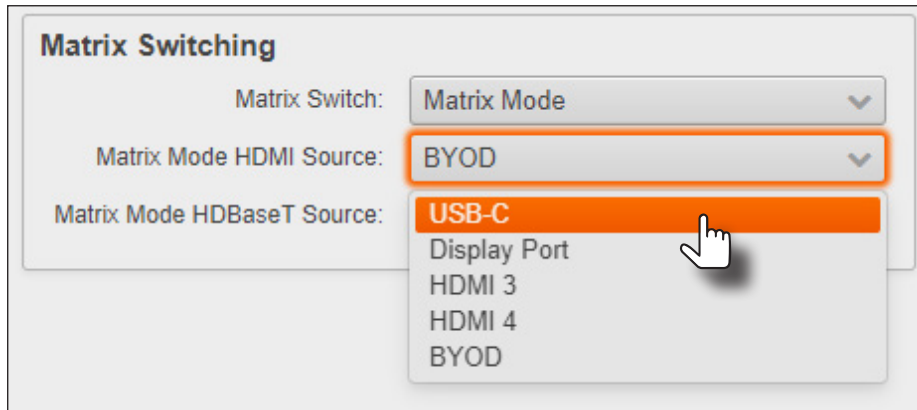

- Click the **Matrix Mode HDBaseT Source** drop-down list and select the input to be routed to the **HDBaseT OUT** port.

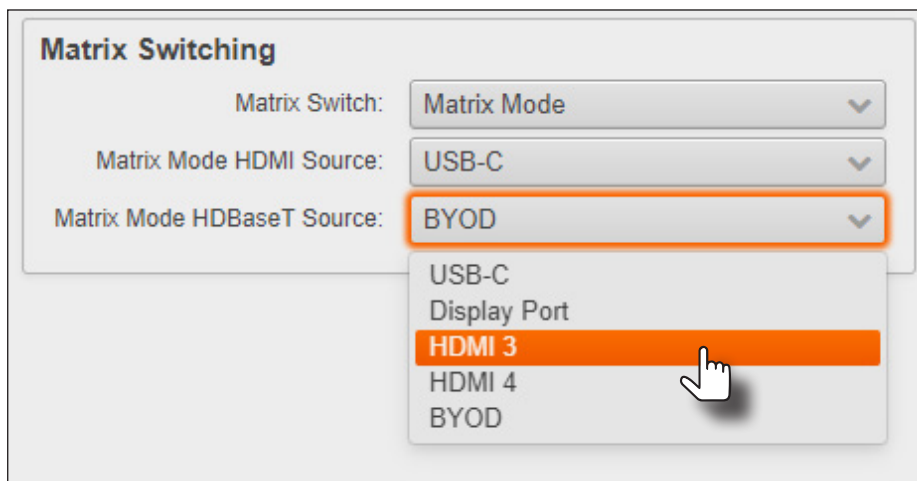

- Matrix Mode configuration is complete.




NOTE: If the input for **Matrix Mode HDBaseT Source** is not selected, then the input that was selected for the **Matrix Mode HDMI Source** will be also output on the **HDBaseT OUT** port.

Matrix Mode w/ Static Route

This mode is desirable when integrating the AT-OME-MS52W with a video conference system and allows for auto switching and display control. In this mode, both static input and output routing are specified. **Auto-Switching** (page 31) must be enabled. However, the specified static input will be removed from the auto-switching pool. For example, if the **HDMI IN 3** port is specified as a static input, then auto-switching will “skip” this port when auto-switching.

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Routing** in the side menu bar.
3. Click the **Matrix Switch** drop-down list and select **Matrix Mode w/static route**.

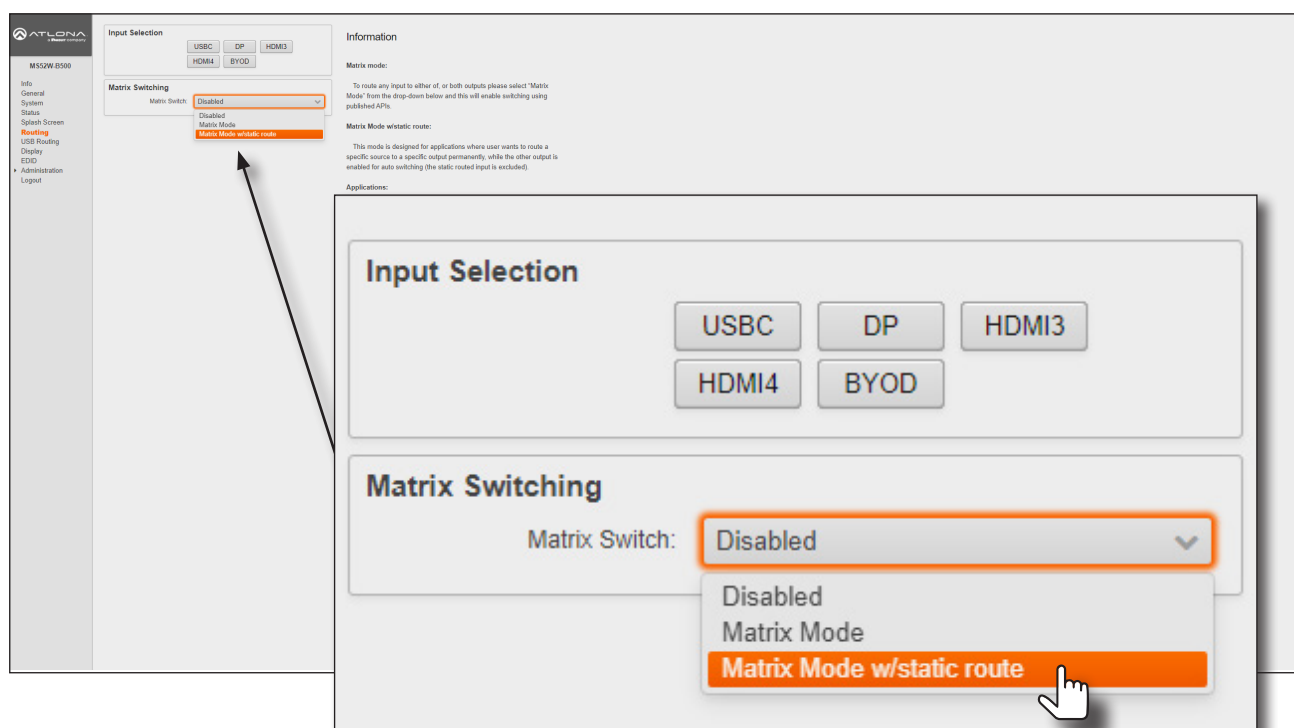

4. The **Matrix Switching** window group now contains the following options:


Matrix Switching

Matrix Switch:
Matrix Mode w/static route

Matrix Mode Static Output:
HDBaseT

Matrix Mode Static Source:
BYOD

- Click the **Matrix Mode Static Output** drop-down list and select the output that will be “static”. This is the output that will not change.

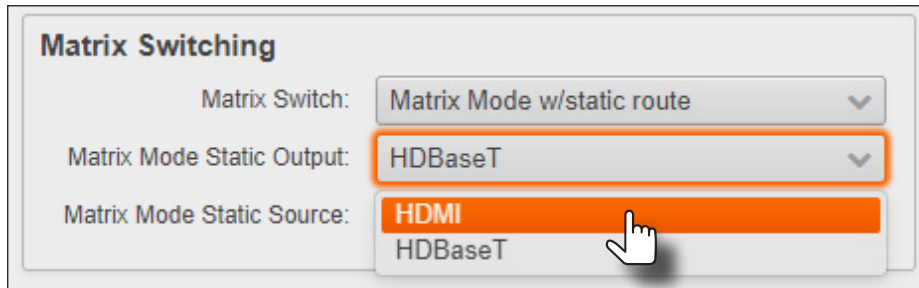

Matrix Switching

Matrix Switch: Matrix Mode w/static route


Matrix Mode Static Output: HDBaseT

Matrix Mode Static Source: HDMI

- Click the **Matrix Mode Static Source** drop-down to select the source that will be assigned as a “static” source. This source will be routed to the output selected in the **Matrix Mode Static Output** drop-down list.

In this example, the source connected to the Display port input, will be output to the HDMI output port.

INPUT 2 (DisplayPort) is the static source and **OUTPUT 1** (HDMI) is the static output. This particular configuration will allow the **USB-C** and both **HDMI IN** ports to be routed to the **HDBaseT OUT** port, as needed.

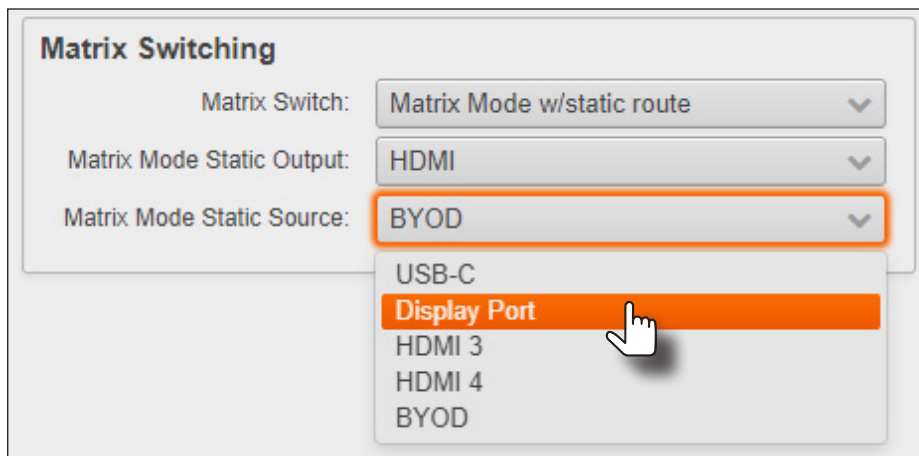

Matrix Switching

Matrix Switch: Matrix Mode w/static route

Matrix Mode Static Output: HDMI

Matrix Mode Static Source: BYOD

USB-C

Display Port

HDMI 3

HDMI 4

BYOD

- Matrix with static route configuration is complete.

Auto-Switching

The AT-OME-MS52W provides auto-switching capability, which is enabled by default. This feature will automatically switch the input to the most recently-connected source. If a source is disconnected, then the input will automatically be switched to the previously-connected source.



IMPORTANT: The auto-switching feature is only available when the **Switching Mode** is set to **Matrix mode with static route** or **Disabled**. Refer to [Switching Modes \(page 27\)](#) for more information.


Enabling / Disabling Auto Switching

By default, auto-switching is enabled on the AT-OME-MS52W, allowing the unit to automatically switch between inputs when sources are connected or disconnected. Auto-switching is always enabled when set to **Matrix mode with static route** and cannot be disabled.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Display** in the side menu bar.
3. Under the **Control** window group, the **AutoSwitch** checkbox will be checked, indicating that auto-switching is enabled. If the **AutoSwitch** checkbox is grayed out, verify that the **Switching Mode** is set to either **Disabled** or **Matrix mode with static route**.
4. Click the **AutoSwitch** checkbox to remove the check mark to disable auto-switching. Note that if the previously active input is no longer available that it will fallback to any available input.



NOTE: The AT-OME-MS52W retains the currently selected input, even after the unit is powered-off then powered-on. The system should re-evaluate the auto switching logic after power on and select an input.

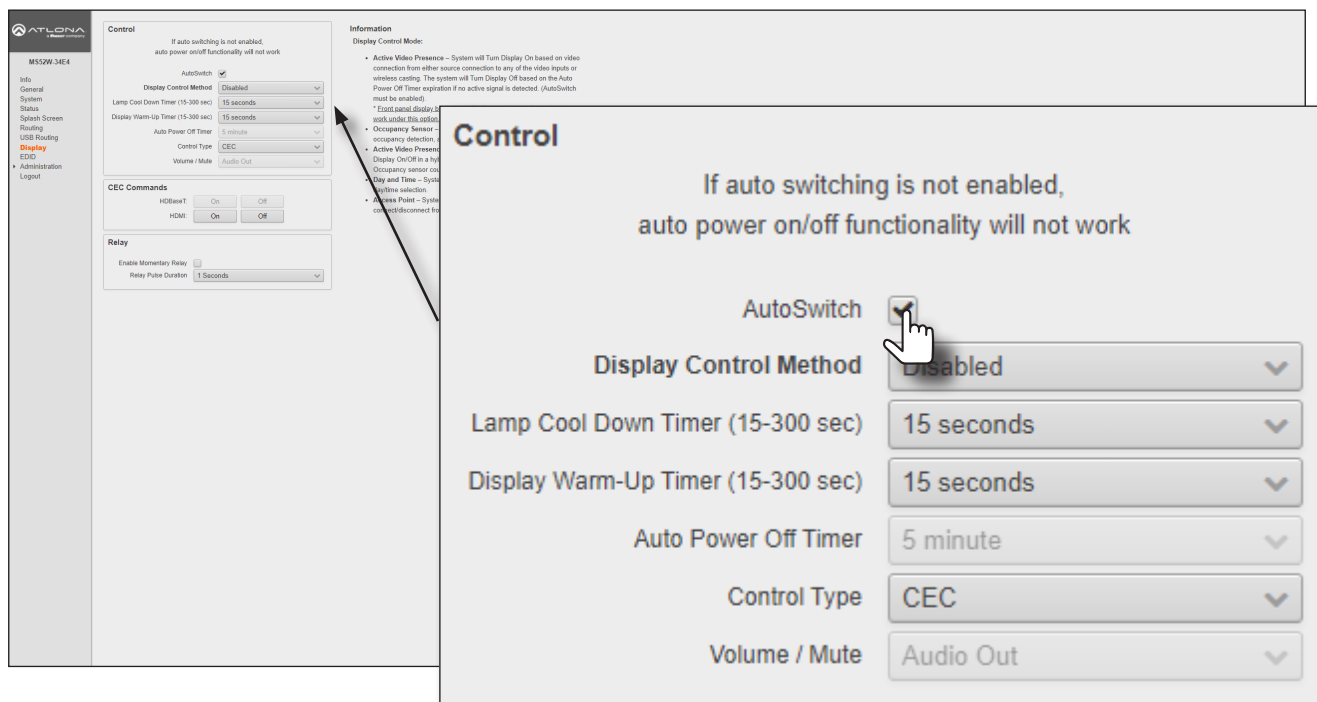


The screenshot shows the web interface for the AT-OME-MS52W. On the left is a sidebar menu with options: Info, General, System, Status, Splash Screen, Routing, USB Routing, **Display**, ESD, Administration, and Logout. The main area is titled 'Control' and contains several settings. At the top, a message states: 'If auto switching is not enabled, auto power on/off functionality will not work'. Below this, the 'AutoSwitch' checkbox is checked. The 'Display Control Method' is set to 'Disabled'. Other settings include 'Lamp Cool Down Timer (15-300 sec)' set to '15 seconds', 'Display Warm-Up Timer (15-300 sec)' set to '15 seconds', 'Auto Power Off Timer' set to '5 minute', 'Control Type' set to 'CEC', and 'Volume / Mute' set to 'Audio Out'. A callout box with a hand cursor points to the 'AutoSwitch' checkbox and the 'Display Control Method' dropdown. The callout box contains the text: 'If auto switching is not enabled, auto power on/off functionality will not work'.

5. Auto switching configuration is complete.

USB Modes


The AT-OME-MS52W provides three USB modes: **Manual**, **Follow USB**, and **Follow Video**. Each mode provides different method of selecting the USB host ports. Note that the **USB-C** port also serves as a host port.

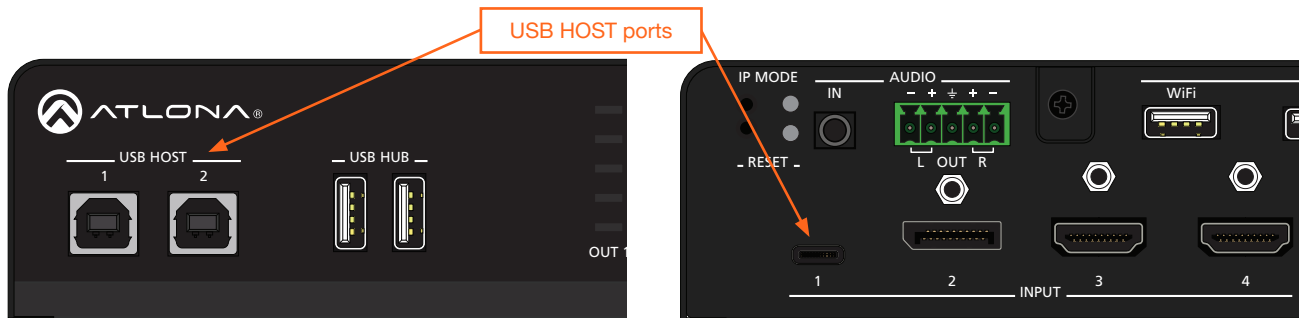


Manual

This is the default mode and provides manual selection of the USB host port to be used, when switching video inputs.

1. Connect the host computers to the USB host ports, as desired. Note that it is not required that both USB host ports be connected to host devices.
2. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
3. Click **USB Routing** in the menu bar.
4. Click the **USB Routing Mode** drop-down list and select **Manual**.

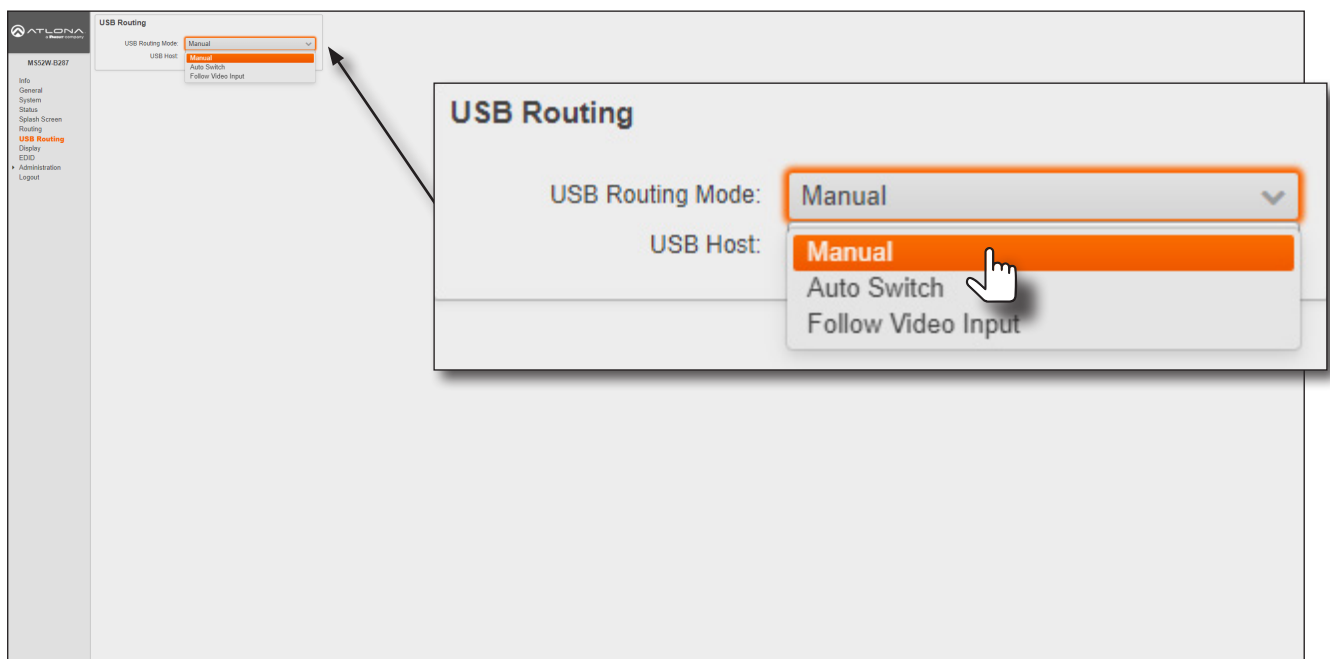

- Click the **USB Host** drop-down list and select the desired USB port.

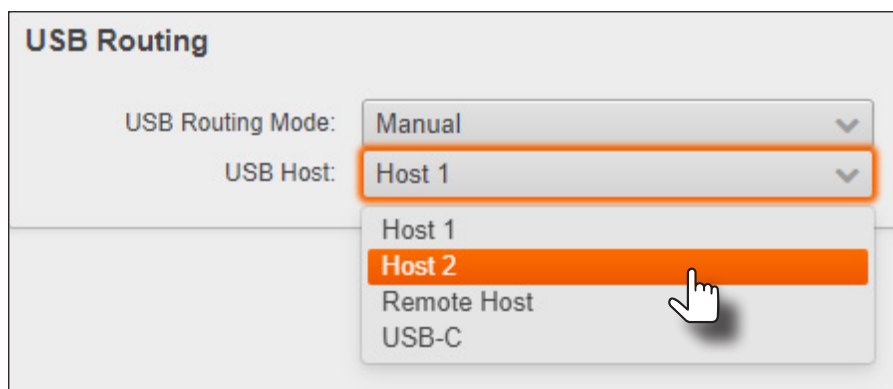

USB Routing

USB Routing Mode: Manual

USB Host: Host 1

Host 1

Host 2

Remote Host

USB-C


USB Host	Description
Host 1	USB HOST 1 port
Host 2	USB HOST 2 port
Remote Host	Uses the USB host port on the HDBaseT receiver
USB-C	USB-C port

- Manual USB configuration is complete.

Auto Switch

In this mode, the AT-OME-MS52W will detect which USB ports are connected to a host device. If all USB host ports are connected to host devices, then the AT-OME-MS52W will set the last-connected USB host device as the “active” USB host. Use the procedure below to enable Follow USB mode.

- Connect the host computers to the USB host ports, as desired. Note that it is not required that both USB host ports be connected to host devices.
- Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
- Click **USB Routing** in the menu bar.
- Click the **USB Routing Mode** drop-down list and select **Auto Switch**.

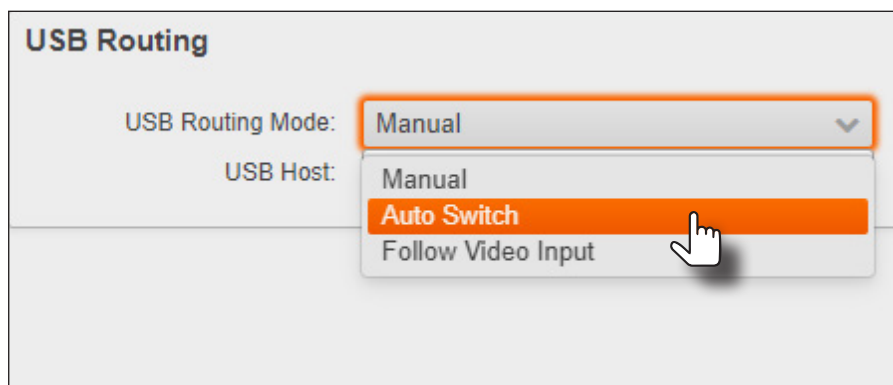

USB Routing

USB Routing Mode: Manual

USB Host: Manual

Manual

Auto Switch

Follow Video Input

Once set to **Auto Switch** mode, the AT-OME-MS52W will exhibit the following behavior:


- If only one USB host device is connected to the USB host ports, then the AT-OME-MS52W will use the USB host device connected to that port.
- If another USB host device is connected to a vacant USB host port, then the AT-OME-MS52W will automatically switch to that USB host device.
- If **USB 1**, **USB 2**, and **USB-C** host ports are connected, then the AT-OME-MS52W will switch to the USB port that was connected last.
- If **USB 1**, **USB 2**, and **USB-C** host ports are connected, and one USB host port is *disconnected*, then the AT-OME-MS52W will automatically switch to the USB host port that was connected last.

5. Follow USB configuration is complete.


Follow Video Input

In this mode, a video input can be paired with **USB 1**, **USB 2**, or a remote USB host port on a receiver. When a video input switch event occurs, the assigned USB host port will follow. Note in this mode that the USB-C port is not considered a *host* (data) port.


1. Connect the host computers to the USB host ports. Note that it is not required that both USB host ports be connected to host devices.
2. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
3. Click **USB Routing** in the menu bar.
4. Click the **USB Routing Mode** drop-down list and select **Follow Video Input**.

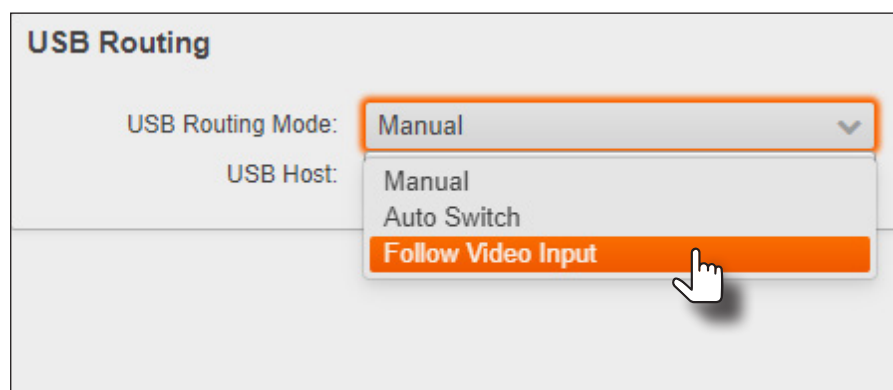

5. The factory-default **USB Host** assignments for each input is shown below.

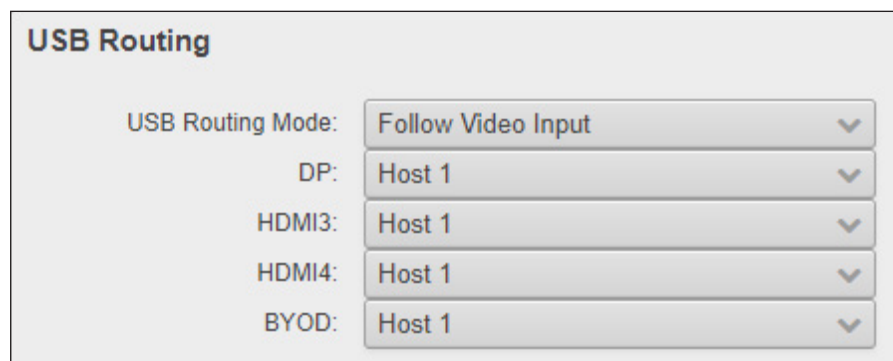


- Click the drop-down list, next to the desired input, to assign the USB host port to the input. In the example below, the HDMI3 (**INPUT 3**) is being assigned to Host 1 (**USB HOST 1**).

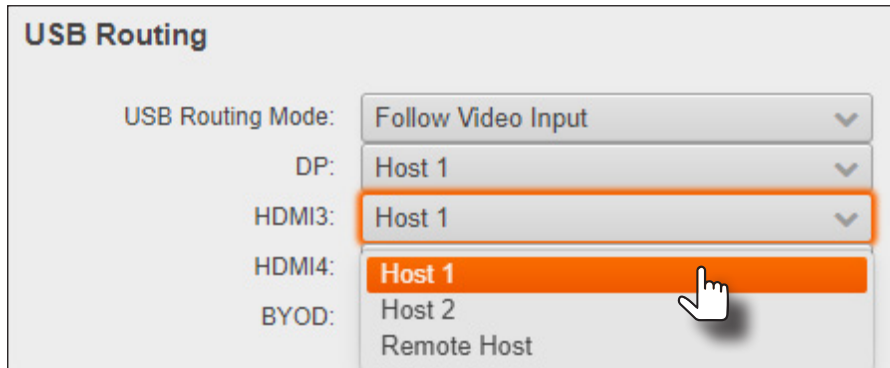

- Configure other inputs as required.
- Follow Video configuration is complete.

Figure 1.1 - EXAMPLE - HDMI 3 is selected as the active video input and USB HOST 1 is now the active USB host, providing access to Laptop 1, which has access to the speaker/mic and the AT-HDVS-CAM. Black signal lines indicate that the AT-OME-MS52W is not switched to that input.

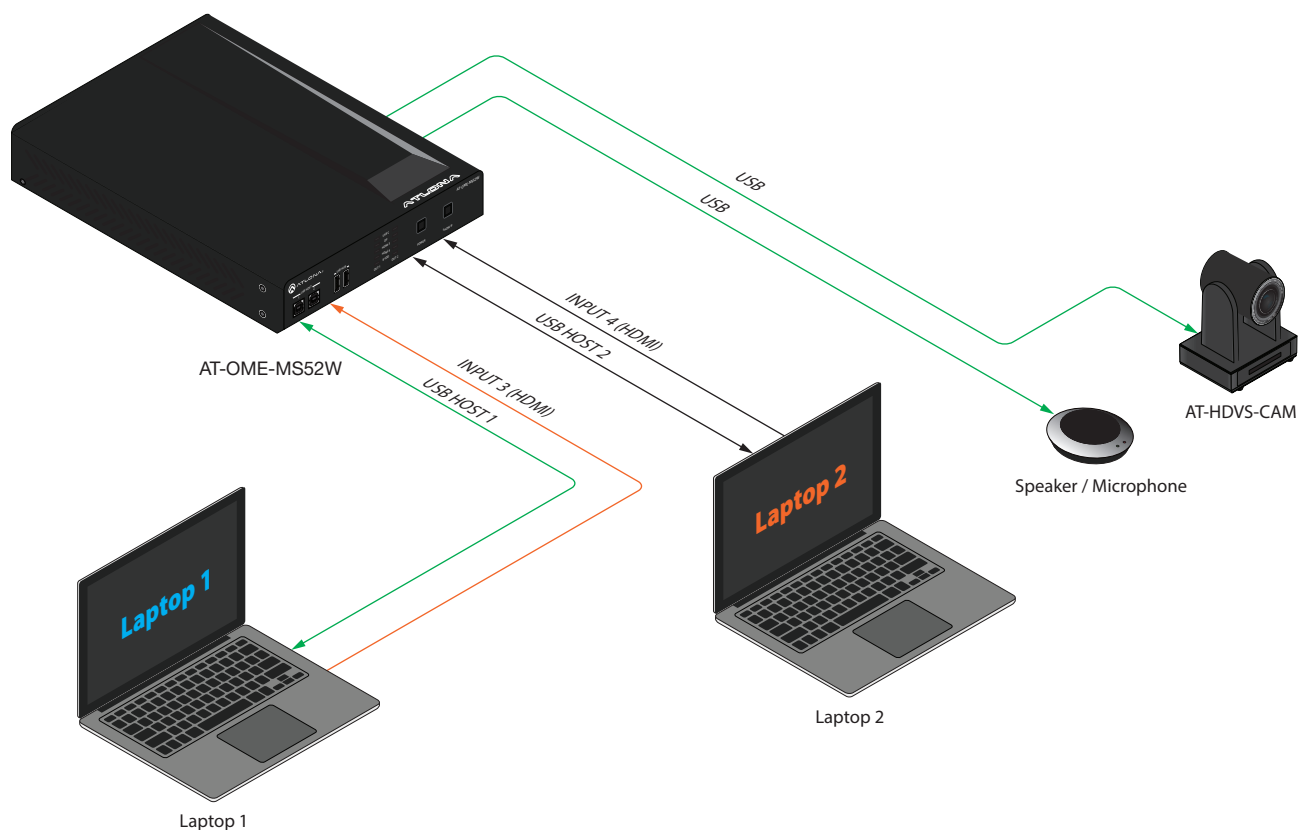


The Splash Screen

The splash screen is displayed after the AT-OME-MS52W has completed the boot-up process, and indicates that the unit is ready for use. To view the splash screen, connect an HDMI cable to **OUTPUT 1** (HDMI) or **OUTPUT 2** (HDBaseT) on the AT-OME-MS52W to the HDMI input of a display.

Customizing Text

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Splash Screen** in the side menu bar.

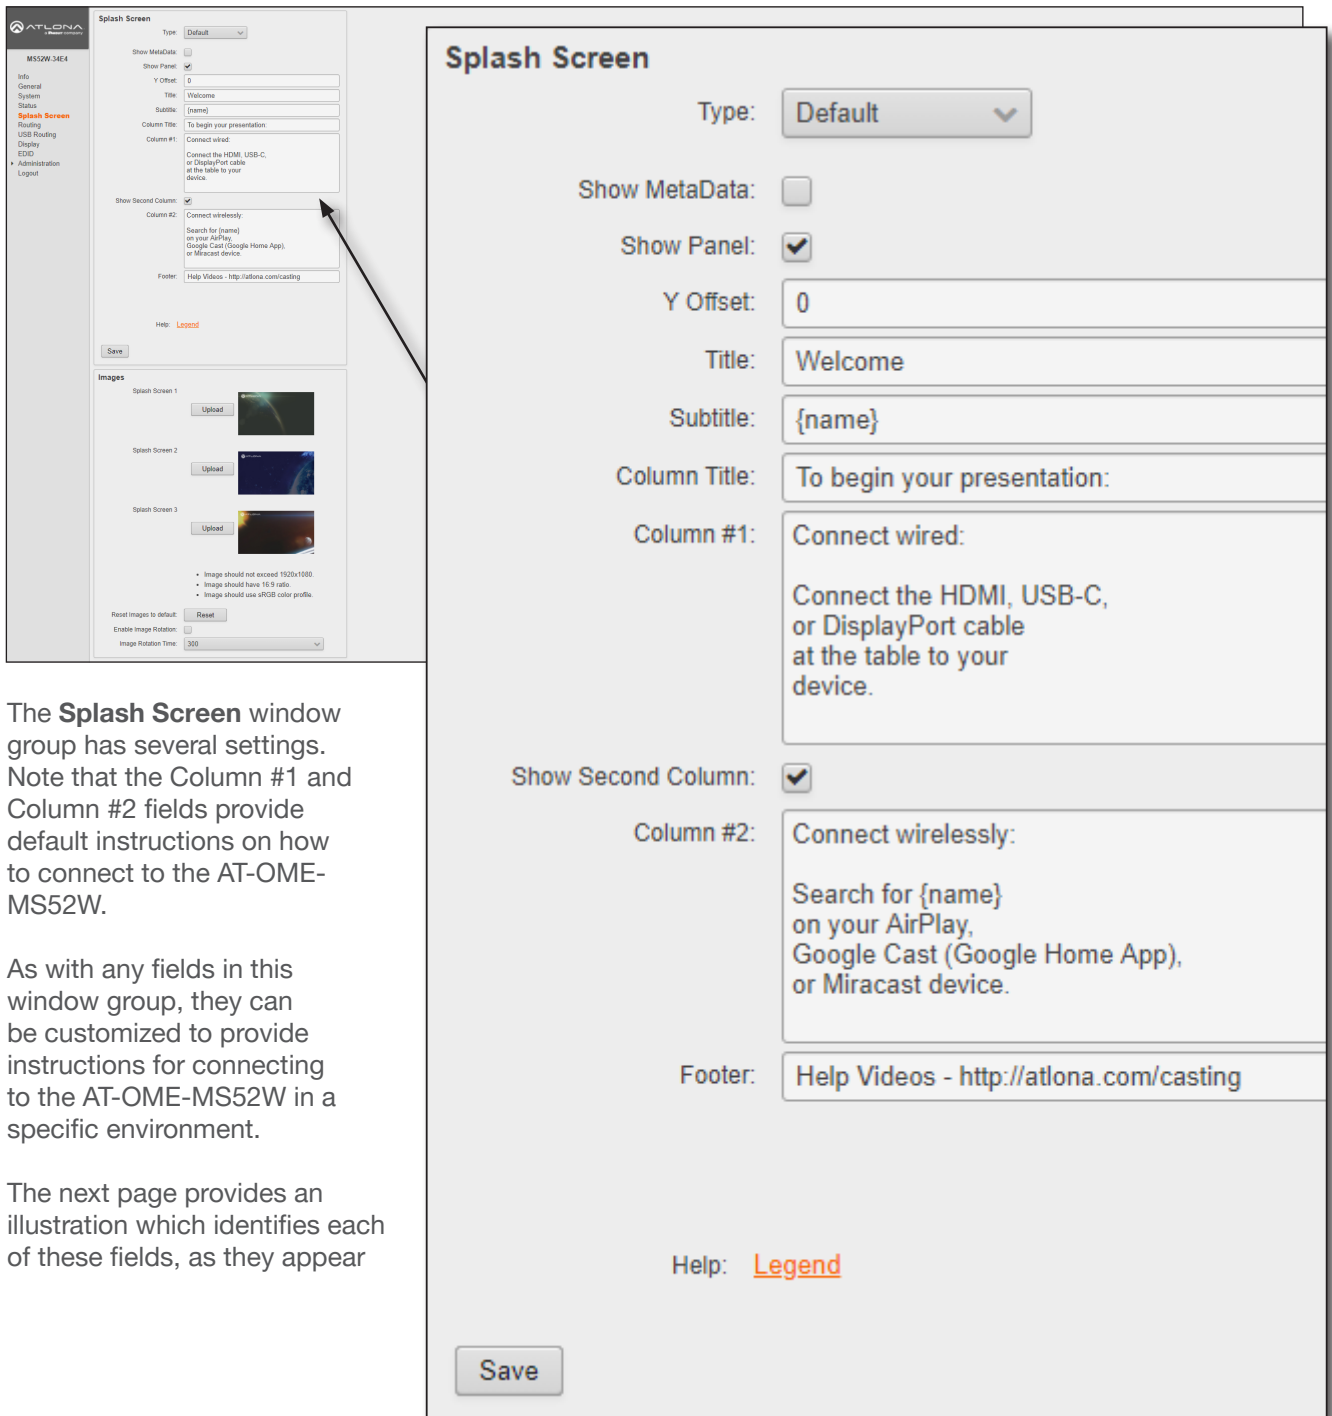

Splash Screen

Type: **Default**

Show MetaData: ☐

Show Panel: ☒

Y Offset: **0**

Title: **Welcome**

Subtitle: **{name}**

Column Title: **To begin your presentation:**

Column #1: **Connect wired:**

Connect the HDMI, USB-C, or DisplayPort cable at the table to your device.

Show Second Column: ☒

Column #2: **Connect wirelessly:**

Search for {name} on your AirPlay, Google Cast (Google Home App), or Miracast device.

Footer: **Help Videos - <http://atlona.com/casting>**

Help: [Legend](#)

Save

Images

Splash Screen 1: 

Splash Screen 2: 

Splash Screen 3: 

• Image should not exceed 1920x1080.
 • Image should have 16:9 ratio.
 • Image should use sRGB color profile.

Reset Images to default:


Enable Image Rotation: ☐

Image Rotation Time: **300**

3. The **Splash Screen** window group has several settings. Note that the Column #1 and Column #2 fields provide default instructions on how to connect to the AT-OME-MS52W.

As with any fields in this window group, they can be customized to provide instructions for connecting to the AT-OME-MS52W in a specific environment.

The next page provides an illustration which identifies each of these fields, as they appear

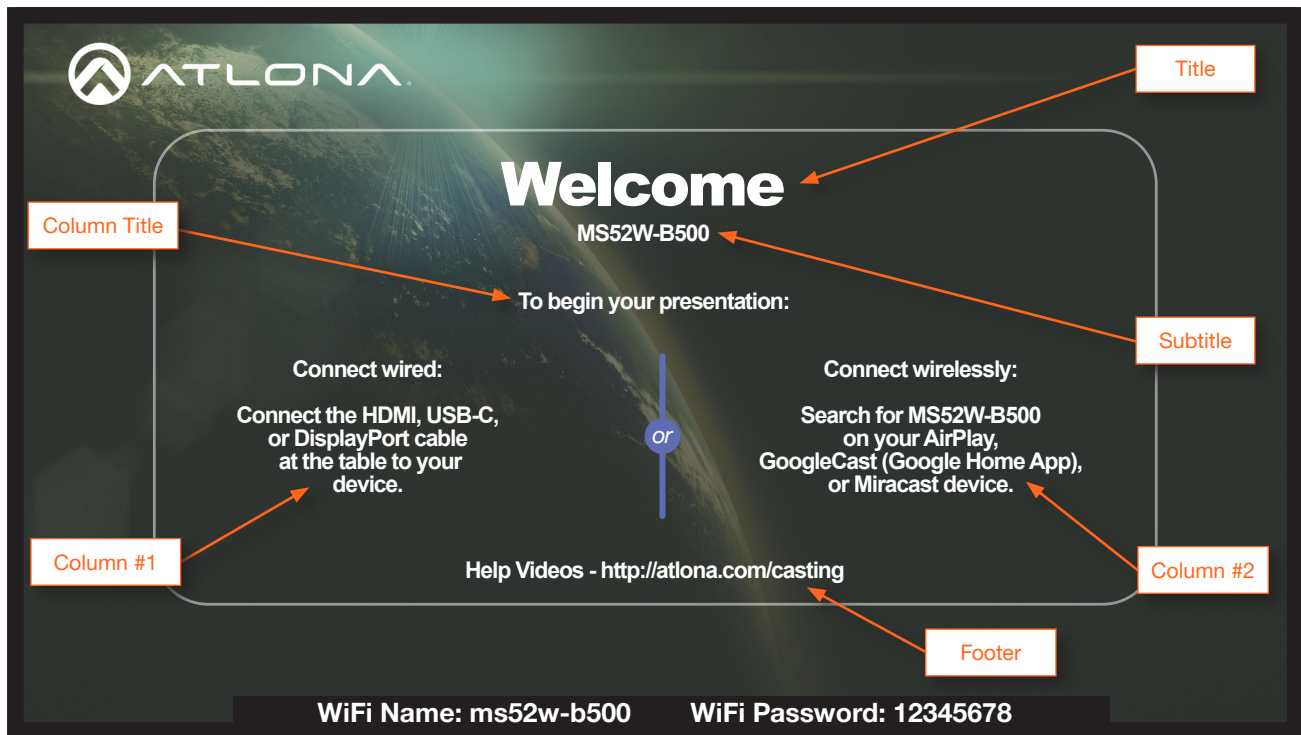

- Refer to the previous page and make any desired changes to each field. Note that the “tag” {name} is present in the **Subtitle** field, by default. The value of {name} is a system value cannot be changed, as it identifies this specific device: MS52W. However, the {name} tag can be removed from the **Subtitle** field and replaced with other text.

Other tags, and a description of their values, are listed in the table below.

Tag	Description
{name}	This is the system name, and is usually the conference room/classroom name.
{ssid}	The name of the device when the AT-OME-MS52W is configured as an Access Point. Refer to Access Point Mode (page 47) for more information.
{eth0}	The IP address of the AT-OME-MS52W when connected to a network using an Ethernet cable.
{wlan0}	The IP address of the AT-OME-MS52W when using a wireless connection.
{version}	Displays the Master Firmware version.
{password}	Displays the Access Point password, when the AT-OME-MS52W is configured as an Access Point. If configured as an Access Point, this tag will be populated with the selected password. The password can be either static or dynamic. When set to dynamic, this field will be constantly updated. Refer to Access Point Mode (page 47) for more information.
{status}	The status of the AT-OME-MS52W.
{image:status}	The graphical status of the device (when using HTML splash screens).
{url:status}	The URL of image status (when using HTML splash screens).

- Click the **Legend** link to display a list of these tags at any time.

Splash Screen

Type: Default

Show MetaData: ☐

Show Panel: ☒

Y Offset:

Title:

Subtitle:

Column Title:

Column #1:

Show Se

Help: [Legend](#)

{name}: Copy "Name" from General tab

{ssid}: Derived Name from General tab

{eth0}: IP address from Wired Ethernet

{wlan0}: IP address from Wireless Connection

{version}: Master Firmware Version

{password}: WiFi Access Point Mode Password

{status}: Textual status of the device

{image:status}: Graphical status of the device (For use in HTML)


{url:status}: URL of Image status (For use in HTML)

- The **Y Offset** field is used to adjust the horizontal centering of the panel. The default value is 0 (center). Positive values will shift the panel to the right. Negative values will shift the panel to the left. Adjusting the **Y Offset** does not move the background image of the splash screen.
- Click the **Save** button to commit all changes within the **Splash Screen** window group.

Displaying Metadata

Click the **Meta Data** checkbox to display metadata information on the splash screen. Metadata includes the name of the unit, model, current date, wired IP address, current firmware version, and some image references used by the AT-OME-MS52W.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Splash Screen** in the side menu bar, then click the **Show Meta Data** checkbox. A check mark in this box indicates that the feature is enabled, and metadata will be displayed on top of the splash screen.

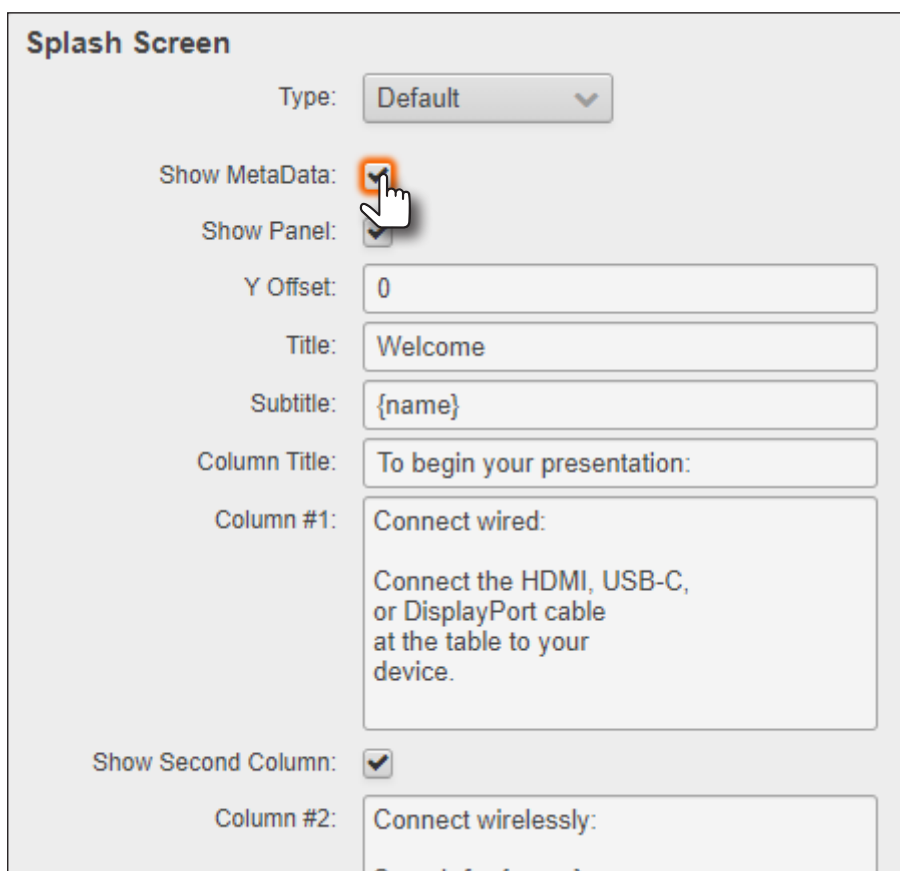

An example of metadata is shown below.

```

Name: SW52W-B287
Model: SW52W
Date: 06/19/2020
Wired IP: 10.0.1.83
Version: 2.3.3
LED - Grey: /opt/tomcat/webapps/ROOT/static/images/icons/led_grey_small.png
LED - Grey: <image src="{url:led_grey}">
LED - Green: /opt/tomcat/webapps/ROOT/static/images/icons/led_green_small.png
LED - Green: <image src="{url:led_green}">
LED - Red: /opt/tomcat/webapps/ROOT/static/images/icons/led_red_small.png
LED - Red: <image src="{url:led_red}">
LED - Status: {image:led_green}
LED - Status: {url:led_green}
Status: Ready
  
```

3. Click the **Save** button, at the bottom of the **Splash Screen** window group, to commit changes. To hide the metadata, uncheck the **Show MetaData** checkbox and click the **Save** button.

Displaying the Wireless Password

This feature is applicable only when the AT-OME-MS52W is configured as an *access point*. The wireless password can be displayed as part of any text field on the splash screen, by inserting the `{password}` tag as part of a text string. For example:

“To begin your presentation, connect using the SSID and enter the following password: `{password}`.”


Note that when the AT-OME-MS52W is configured as an *access point*, the wireless password will automatically be displayed by default, at the bottom of the screen, as shown below. In addition to the password, the WiFi Name field represents the SSID of the AT-OME-MS52W and is used to identify the unit as an available access point. Refer to [Wireless Configuration \(page 47\)](#) for information on setting up a WiFi connection.



Cycling Background Images

Background image cycling can prevent image persistence, which is the equivalent of image burn-in on CRT and plasma computer monitors.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Splash Screen** in the side menu bar.
3. Under the Images window group, click the **Enable Image Rotation** checkbox.

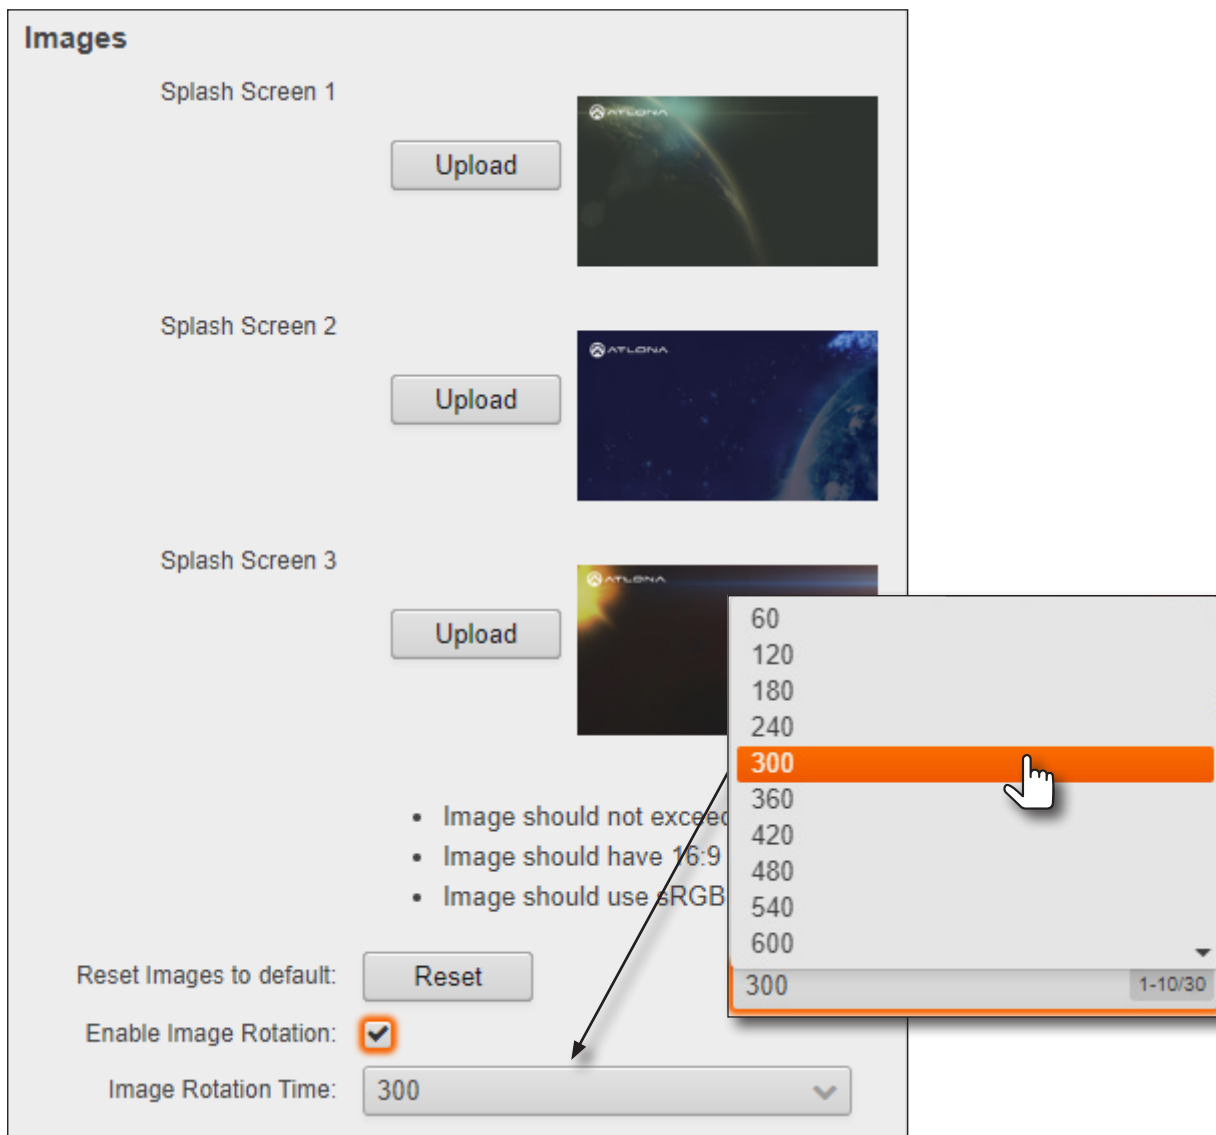

4. Click the **Image Rotation Time** drop-down list to select the desired time interval. Range: 1 - 10 minutes. The default image cycling time is 5 minutes (300 seconds). To disable image cycling, uncheck the **Enable Image Rotation** checkbox.


Uploading Custom Images

Custom images may be uploaded and used instead of the factory splash screens.



IMPORTANT: Custom images should not exceed 1920 x 1080. All common image types, such as JPG, BMP, PNG, TIF, GIF, are supported.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Splash Screen** in the side menu bar.
3. Under the **Images** window group, click the **Upload** button next to the image to be changed.

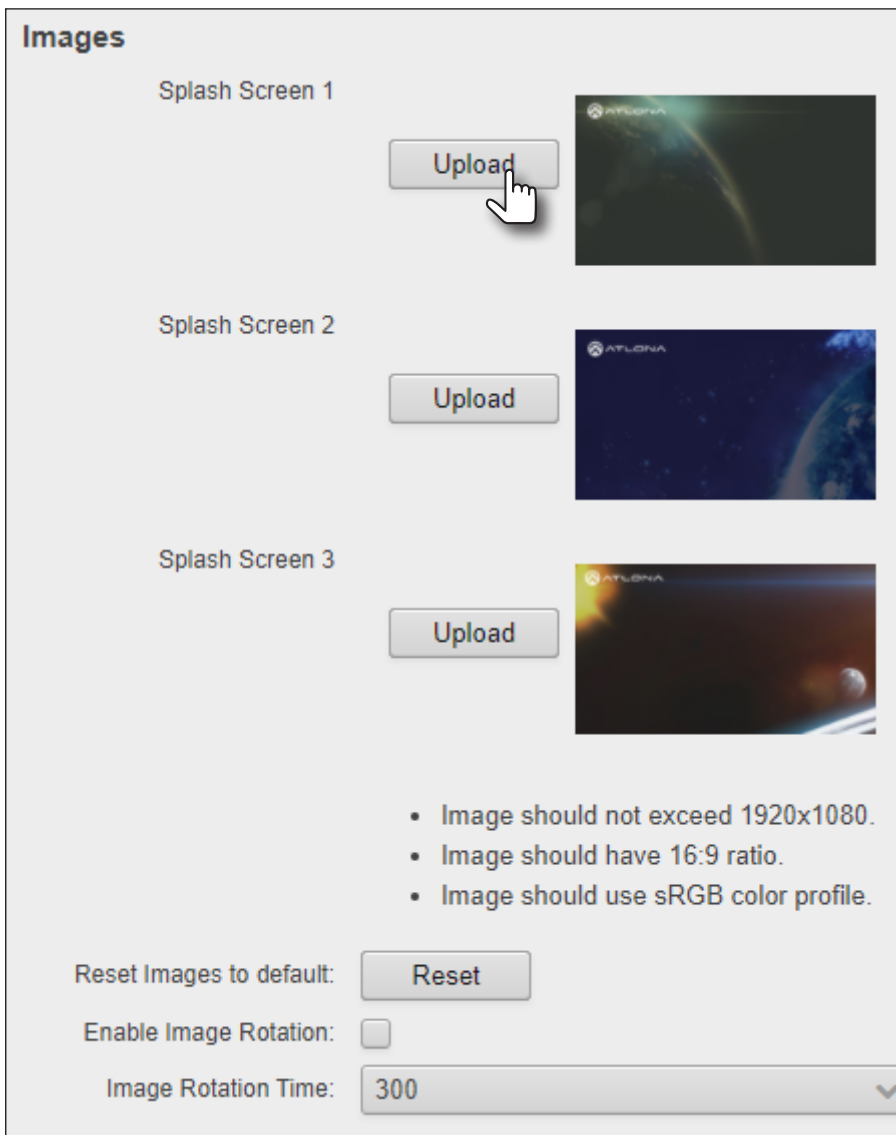

Images

Splash Screen 1

Upload

Splash Screen 2

Upload

Splash Screen 3

Upload

- Image should not exceed 1920x1080.
- Image should have 16:9 ratio.
- Image should use sRGB color profile.

Reset Images to default: Reset

Enable Image Rotation: ☐

Image Rotation Time: 300

4. Select the new image file and click the **Open** button on the dialog box. If viewing the currently active splash screen, the splash screen will be replaced with the uploaded image.
5. Repeat steps 3 and 4, as desired.

HTML Splash Screens

HTML-based splash screens can be used to create content-rich splash screens. This section provides details on creating and uploading an HTML splash screen. Familiarity with HTML is assumed. The AT-OME-MS52W comes with a default HTML splash screen, which can be downloaded from within the web server.


The following table provides a list of supported / unsupported features:

Feature	Supported	Not Supported
HTML5	●	---
Relative / absolute references	●	---
Dynamic images (e.g. animated GIF files)*	---	●
CSS	●	---
PHP, JavaScript, ASP (client/server-side processing)	---	●


* If a dynamic image is used, only the first frame of the image will be displayed on the splash screen.

Downloading the default splash screen

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Splash Screen** in the side menu bar.
3. Under the **Splash Screen** window group, click the **Type** drop-down list and select **HTML**.

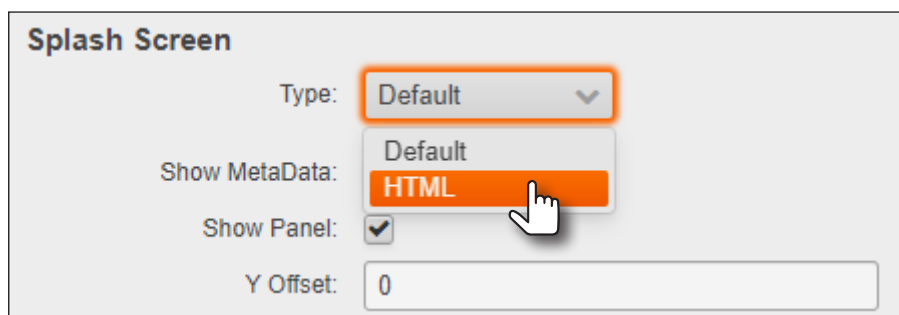

4. Click the **Download** button and save the `html.zip` file to a desired location on the computer.

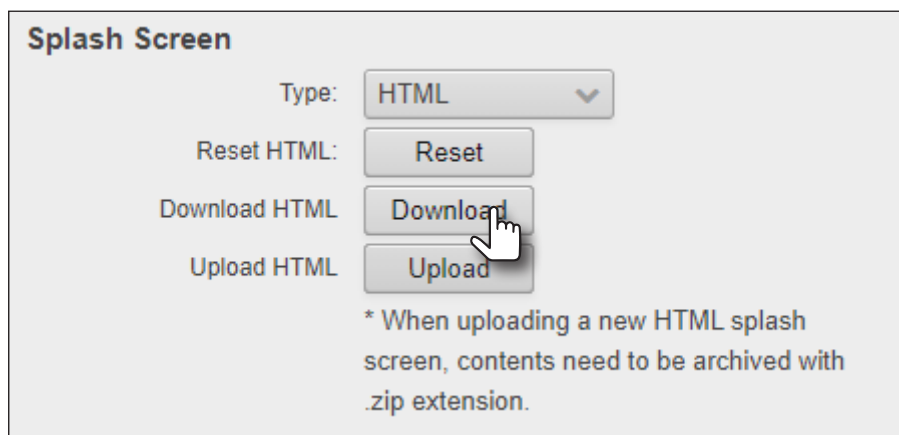

Once the file has downloaded, extract the contents to the desired folder. The included HTML file can be modified, as required, or a different HTML file may be used. The next page provides instructions and guidelines on creating a custom HTML file.

Using a custom HTML file

1. Create the HTML file, along with any links to the desired images. The AT-OME-MS52W also comes with a default HTML file (refer to the previous page), and can be used as a starting point when creating a custom HTML splash screen. The example below, is a partial listing of the HTML code within the default HTML file.



NOTE: When creating an HTML splash screen, it must be designed to fit a 1920x1080p display.

```
<HTML>
  <head>
    <style>
      .container {
        position: relative;
      }

      .bottomleft {
        position: absolute;
        bottom: 64px;
        left: 64px;
        font-size: 25px;
      }

      .bottomright {
        position: absolute;
        bottom: 64px;
        right: 64px;
        font-size: 25px;
      }

      .icon {
        width: auto;
        height: 35px;
        vertical-align: middle;
      }

      .OutlineText {
        font: Tahoma, Geneva, sans-serif;
        font-size: 64px;
        color: white;
        text-shadow:
          ...
          ...
      }
    ...
  ...
</HTML>
```

2. Save the file as `index.html_template`. Do not add a file extension.
3. Combine the `index.html_template` file along with all required external images/files into a .zip file called `html.zip`.




IMPORTANT: The `index.html_template` file **must** reside in the root directory, within the `html.zip` file. Other files (.css, images, etc.) can be placed in folders, if desired, or can also be left in the root directory.

The file structure for the default `html.zip` file, located on the AT-OME-MS52W, is as follows:

```
airplay.png
cast.png
chrome.png
devices.png
index.html_template
wifi.png
windows.png
```

4. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
5. Click **Splash Screen** in the side menu bar.
6. Under the **Splash Screen** window group, click the **Type** drop-down list and select **HTML**.

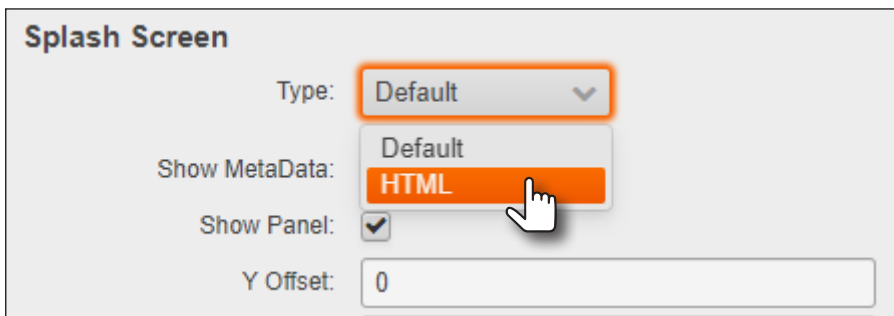

Splash Screen


Type: Default ▼

Show MetaData: ☐

Show Panel: ☒

Y Offset:

7. Click the **Upload** button.

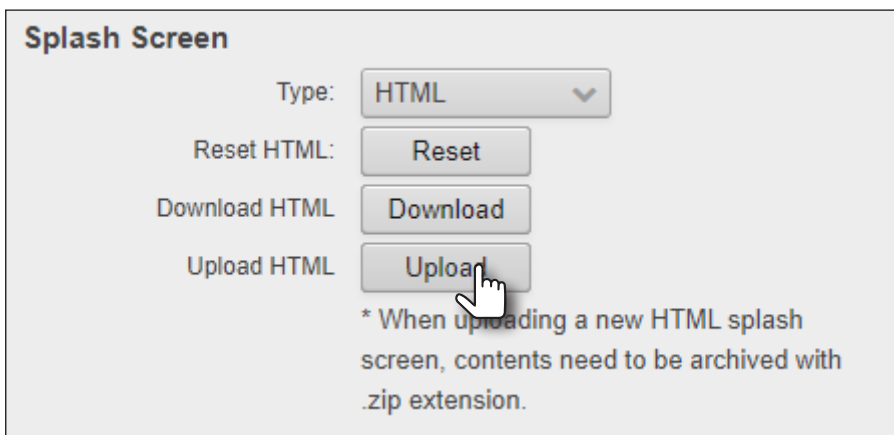

Splash Screen

Type: HTML ▼

Reset HTML: Reset

Download HTML: Download

Upload HTML: Upload

* When uploading a new HTML splash screen, contents need to be archived with .zip extension.


8. Select the `html.zip` file, then click **Open**, to upload the file to the AT-OME-MS52W.
9. Click the **Save** button, at the bottom of the **Splash Screen** window group, to commit changes.

Resetting the HTML Splash Screen



IMPORTANT: The Reset (Reset HTML) button will delete any loaded HTML data and replace it with the default HTML page that comes with the AT-OME-MS52W.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Splash Screen** in the side menu bar.
3. Click the **Type** drop-down list and select **HTML**.
4. Under the **Splash Screen** window group, click the **Reset** button.

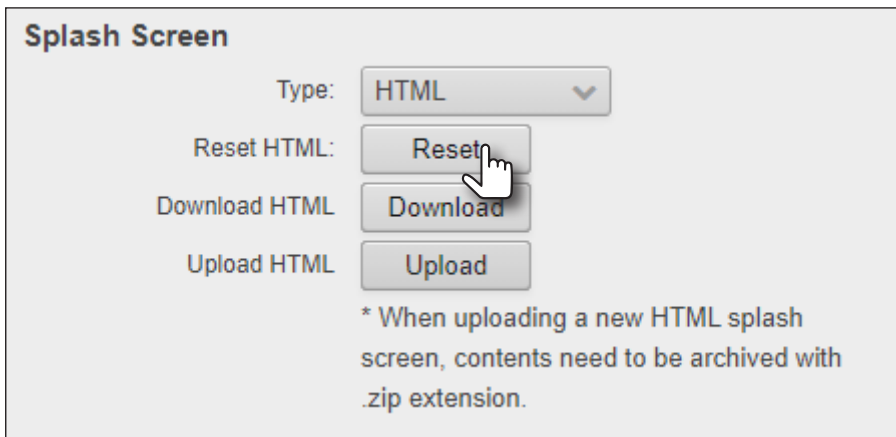

Splash Screen

Type: **HTML** ▼

Reset HTML: **Reset**

Download HTML: **Download**

Upload HTML: **Upload**

* When uploading a new HTML splash screen, contents need to be archived with .zip extension.


Wireless Configuration

The AT-OME-MS52W features a wireless gateway, providing convenient Wi-Fi® connectivity to iOS, Android, Mac, Chromebook, or Windows-based devices. In addition, the AT-OME-MS52W can be configured as a wireless access point (AP). The addition of a built-in firewall provides filtering of outbound traffic from WAP to Ethernet.

Access Point Mode

When configured as an Access Point (AP), wireless devices can be connected to the AT-OME-MS52W.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Administration** > **Networking** in the side menu bar.
3. Under the **WiFi** window group, click the **Mode** drop-down list and select **Access Point**.

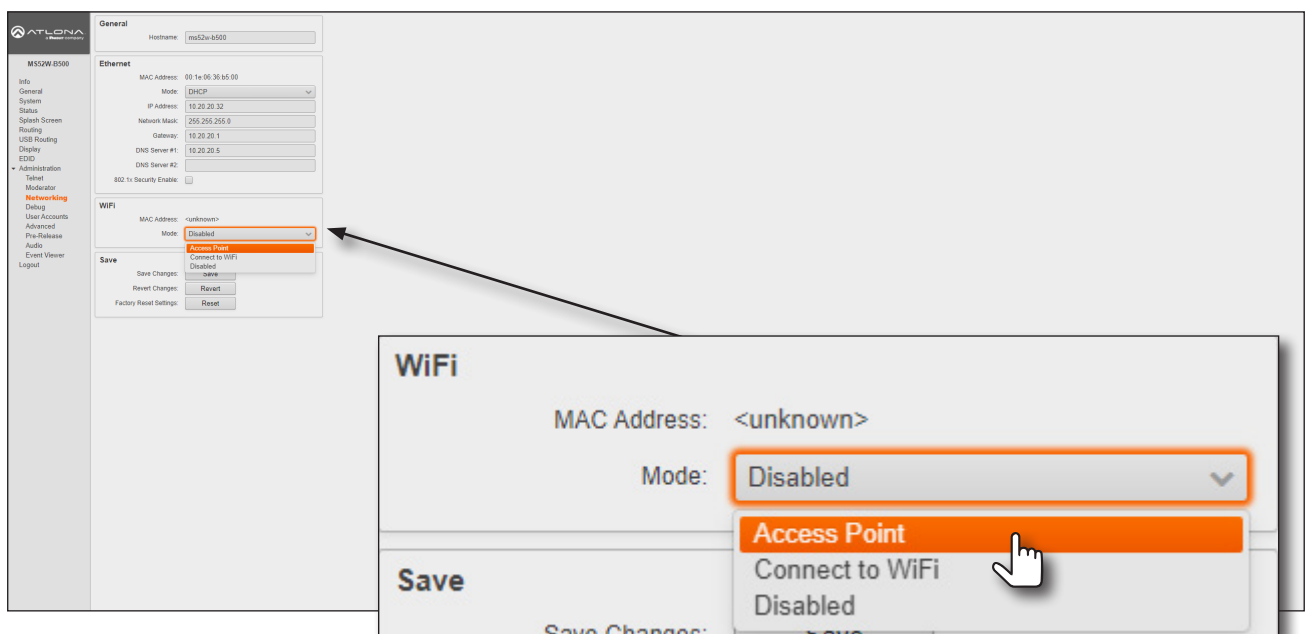

4. The name of the wireless network will appear in the **SSID** field. This name is identical to the text in the **Derived** field, under the [General page \(page 81\)](#). To change the SSID, go to the **General** page and modify the **Name** field.
5. Enter the password in the **Password** field. The password will be required by clients connecting to the AT-OME-MS52W. The default password is 12345678. Make sure to clear this value and provide a secure password.



IMPORTANT: If no password is supplied in Access Point mode, then any client will be able to connect to the AT-OME-MS52W without credentials. Make sure this is the desired operation before continuing. Also, if the Access Point is not secured, then the Miracast Infrastructure will not function, as it requires encryption of traffic.

WiFi

MAC Address: 74:da:38:ef:d9:58


Mode: Access Point

SSID: ms52w-34e4

Password:

6. The **Show AP Credentials** checkbox is enabled by default. Enabling this feature will display the **WiFi Name** and **WiFi Password** fields to be displayed on the splash screen, as shown below. Uncheck this box to hide the name and password.

Show AP Credentials:	☒
No Password in AP Mode:	☐
Hide Password on OSD:	☐
Rotate Password:	☐

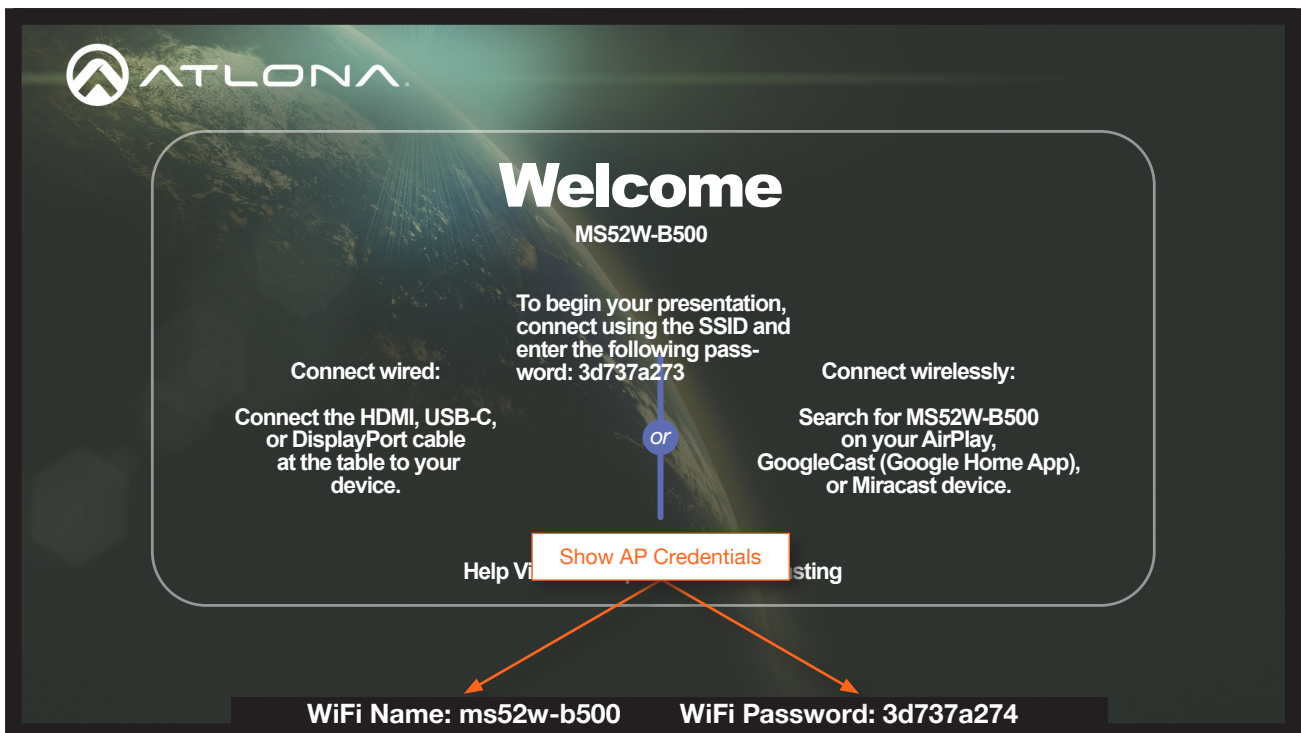

7. Check the **No Password in AP Mode** checkbox if no password credential is desired.
8. Click the **Hide Password on OSD** checkbox to prevent the **WiFi Password** field from being displayed.
9. Click the **Rotate WiFi Password** checkbox to allow the AT-OME-MS52W to generate a new random password.

This feature can be used to provide an extra level of security. Dynamically rotating the password decreases the risk that unauthorized clients will not have access to the AT-OME-MS52W, if the current password is “leaked” or observed on the splash screen, outside of a meeting space or other environment. It should be noted that the system will not change the password, once content is being presented, and will wait until the presentation is finished to begin password rotation. Check the **Hide Rotated Password** checkbox to hide rotated passwords.


10. Click the **Password Rotation Interval** drop-down list to select the rotation time interval for new password generation. The default setting is 1 hour.

Rotate Password:	☒
Hide Rotated Password:	☐
Password Rotation Interval:	1 hour ▼

11. Enter the wireless channel number in the **Channel** field. Channels 1 through 11 are 2.5 GHz channels. Channels 36 and above are 5 GHz channels. Contact the network administrator if necessary.
12. Click the **Access Point Power Level** drop-down list to select the desired power level of the WiFi USB antenna. Available values are integers 0 through 13. Lower values will reduce transmission power of the USB WiFi antenna, thus limiting the range of the Access Point on the AT-OME-MS52W.
13. If a different set of DNS servers are desired, click the **DNS Mode** drop-down list and select the desired mode:

Feature	Description
Use default DNS Servers	Uses the default DNS provided by the DHCP server. This is the default setting.
Inherit from wired Network	Uses the same DNS provided by the wireless network.
Static	Enter the primary and secondary DNS addresses in the DNS Server #1 and DNS Server #2 fields, respectively.

14. The Firewall Mode drop-down list allows filtering of outgoing network traffic, from/to a network that is connected to the **LAN** port on the AT-OME-MS52W. Refer to [Firewall Mode \(page 50\)](#) for more information.
15. Click the **802.1x Security Enable** checkbox to enable 802.1x. Refer to [802.1X Authentication \(page 55\)](#) for more information.

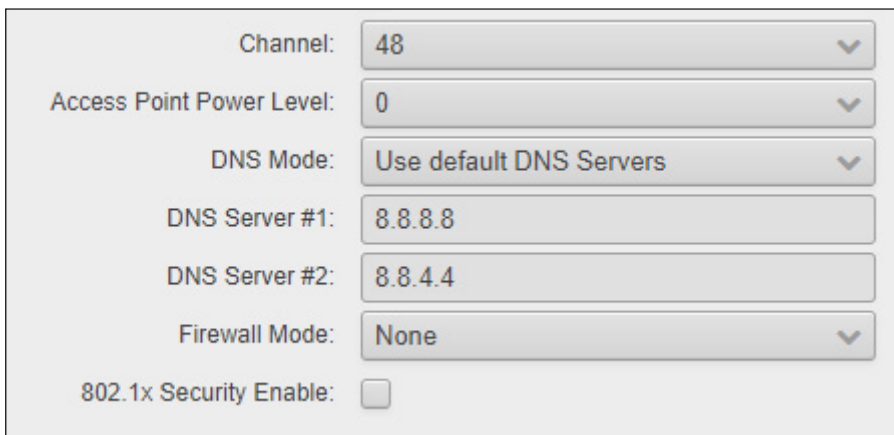

Channel: 48

Access Point Power Level: 0

DNS Mode: Use default DNS Servers

DNS Server #1: 8.8.8.8

DNS Server #2: 8.8.4.4

Firewall Mode: None

802.1x Security Enable: ☐

16. To commit changes, click the **Save** button, located under the **Save** window group.



Save

Save Changes:


Revert Changes:

Factory Reset Settings:

Firewall Mode

This feature allows filtering of outgoing network traffic, from/to a network that is connected to the **LAN** port on the AT-OME-MS52W. The AT-OME-MS52W provides the following firewall modes: **Block Private Network**, **Block Internet**, **Block All**, and **None**. If this feature is not desired, then the following steps can be skipped. The firewall can be configured or disabled at any time. The default setting is **None**.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Administration** > **Networking** in the side menu bar.
3. Under the **WiFi** window group, click the **Mode** drop-down list and select **Access Point**.
4. Click **Firewall Mode** drop-down list and select the desired option.

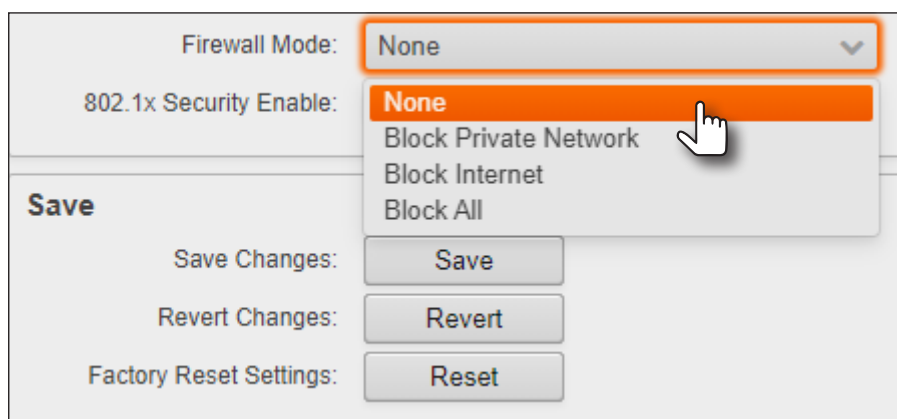

Setting	Description
None (default)	Select this option to disable the firewall on the AT-OME-MS52W and allow all outgoing network traffic.
Block Private Network	This option will globally block all private IP address ranges and traffic to the internal network on the LAN, except Internet access.
Block Internet	Allows wireless access to the AT-OME-MS52W and communication with the internal network, but prevents Internet access (Google, YouTube, etc).
Block All	All outbound network traffic is blocked. Wireless traffic to the AT-OME-MS52W is permitted, but no wireless data will be sent to the Ethernet port of the AT-OME-MS52W.


5. Click the **Save** button, under the **Save** window group, to commit changes.




Connect to WiFi Mode

Use this mode to connect the AT-OME-MS52W to another wireless network.

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Administration** > **Networking** in the side menu bar.
3. Under the **WiFi** window group, click the **Mode** drop-down list and select **Connect to WiFi**.

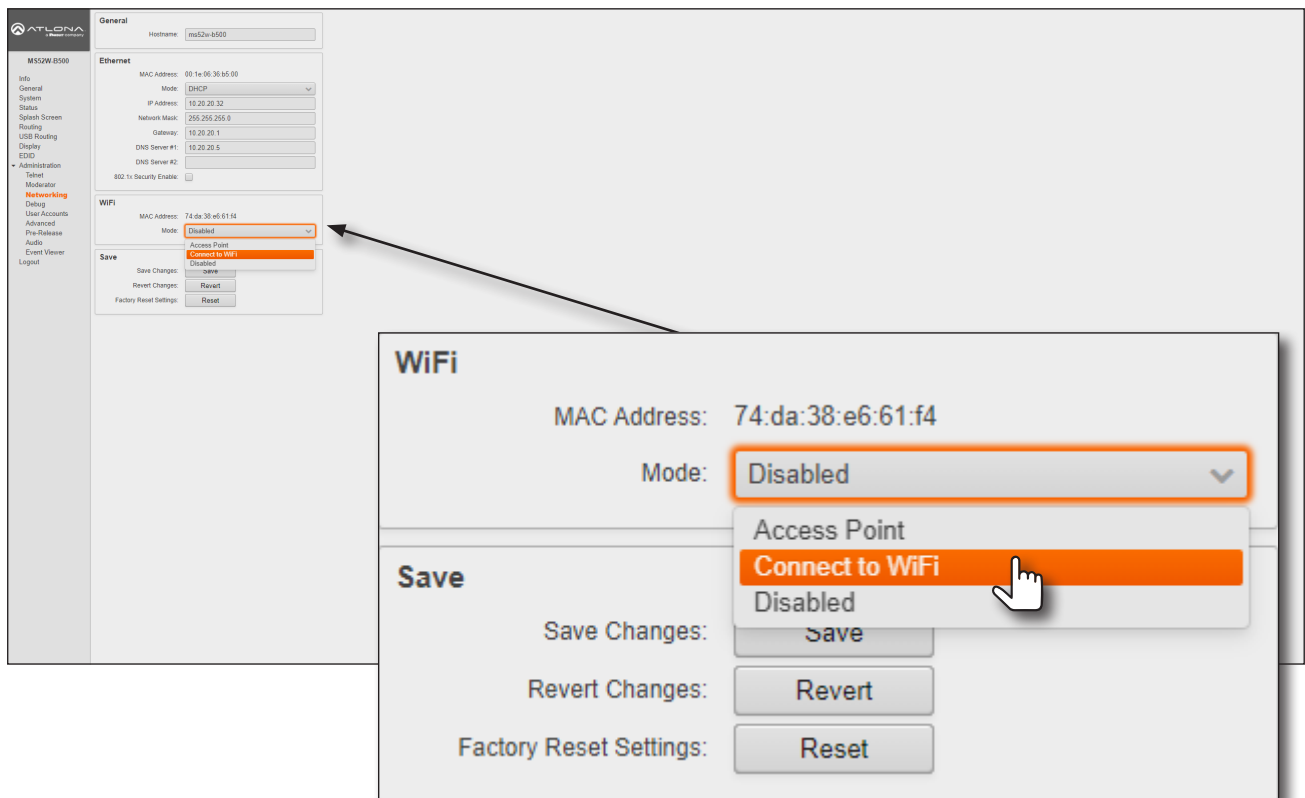

4. Click the **Preferred Gateway** drop-down list and select the desired gateway. When set to **Connect to WiFi** mode, the AT-OME-MS52W can only be accessed through the same network, over Ethernet or WiFi, not both. For example, if **Ethernet** is selected, then the AT-OME-MS52W can only be accessed from the same network over Ethernet. However, it should be noted that casting is supported on *both* interfaces, simultaneously.
5. Click the **Pick** button to display a listing of available WiFi networks.

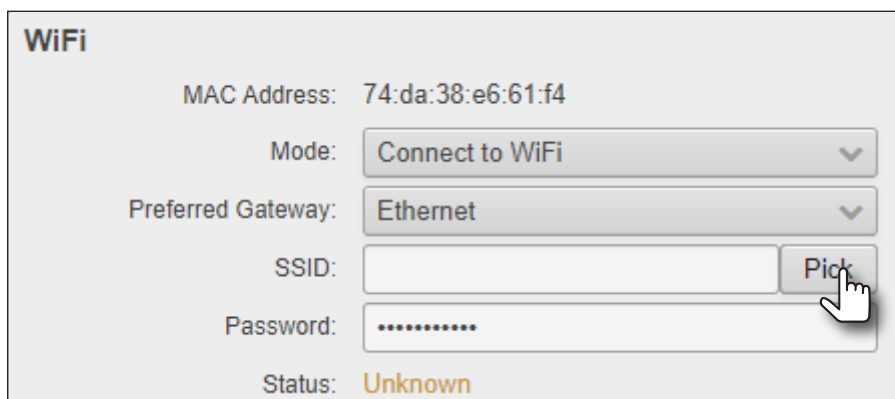

- Click the desired WiFi network from the list and click the **OK** button to accept the selection or click **Cancel** to return to the **WiFi** window group.

Pick a Wifi Network

Pick a Wifi Network to Connect

SSID: SSID

SSID	Str ▼
NETGEAR91	4
NachoWiFi	4
HP-Print-OfficeJet Pro 8600	3
MK-WAP	3
HuddleRm	3
ConferenceRm-Main	3
HuddleRm-5Ghz	3
Lobby-Display	3

OK Cancel

- Enter the password for the wireless network in the **Password** field.

WiFi

MAC Address: 74:da:38:e6:61:f4

Mode: Connect to WiFi ▼

Preferred Gateway: Ethernet ▼

SSID: HuddleRm Pick

Password:

Status: Unknown

- Click the **Save** button near the bottom of the screen to commit changes.


Save

Save Changes: Save


Revert Changes: Revert

Factory Reset Settings: Reset

9. The system will prompt to be rebooted, as shown below. Click **Yes** to perform a reboot. To reboot at a later time, click the **Later** button.

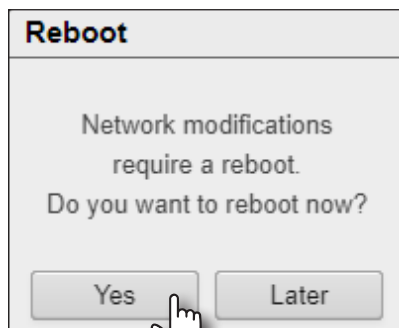

Once the connection has been established, the **Status** field will display *Connected*, as shown below.

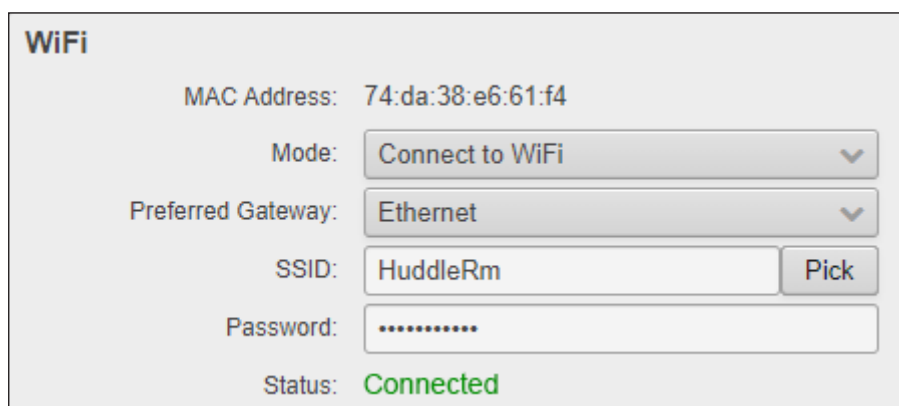
 A WiFi configuration screen with a light gray background. It displays the following information:

- MAC Address:** 74:da:38:e6:61:f4
- Mode:** A dropdown menu showing "Connect to WiFi".
- Preferred Gateway:** A dropdown menu showing "Ethernet".
- SSID:** A text field containing "HuddleRm" and a "Pick" button.
- Password:** A text field with masked characters (dots).
- Status:** Displayed in green text as "Connected".


The following table provides a description of status messages.

State	Description
Connected	The AT-OME-MS52W is connected to the wireless network.
Not Connected	Unsuccessful connection. Check to make sure the password was entered correctly. This state will also occur if the wireless network, to which the AT-OME-MS52W is connected, is taken offline.
Unknown	The network state is unknown. This message is displayed if the AT-OME-MS52W has not been configured to connect with a wireless network.

Changing the SSID

By default, the SSID of the AT-OME-MS52W is set to the following identifier: `ms52w-{id}`. The first five digits are the last five characters of the product SKU. The `{id}` tag holds the last four digits of the MAC address. This identifier is held in the **Name** field, under the **General** tab. The AT-OME-MS52W copies the **Name** field to the **Derived** field, converting the characters to lowercase. The **Derived** field then becomes the SSID.


1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **General** in the side menu bar.
3. Under the **General** window group, change the **Name** field to the desired name.
4. Click the **Save** button to commit changes.

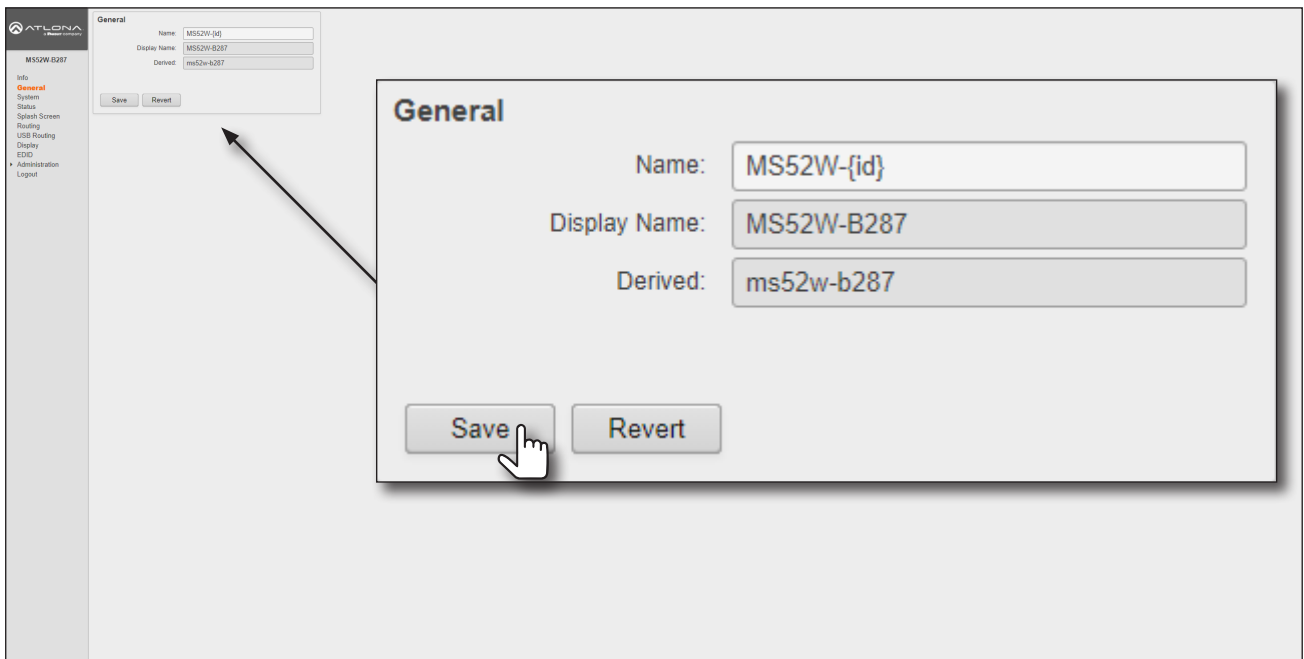

The screenshot displays the ATLONA web interface for the MS52W-B287 device. The sidebar on the left contains a menu with the following items: Info, General (highlighted), System, Status, Splash Screen, Routing, USB Routing, Display, EDID, Administration, and Logout. The main content area is titled 'General' and contains three input fields: 'Name' with the value 'MS52W-{id}', 'Display Name' with the value 'MS52W-B287', and 'Derived' with the value 'ms52w-b287'. Below these fields are two buttons: 'Save' and 'Revert'. A callout box with the title 'General' points to the 'General' tab in the sidebar and the 'Name' field in the main content area.

802.1X Authentication

802.1X is a server-based port authentication protocol which restricts unauthorized (rogue) clients from connecting to a Local Area Network through a public port. In its simplest form, 802.1X usually involves three parties: supplicant (client device), authenticator (Ethernet switch), and an authentication server. Before the device is permitted on the network, port communication is restricted to Extensible Authentication Protocol over LAN (EAPOL) traffic. If the device passes the authentication process, then the authentication server notifies the switch, allowing the client to access the LAN. A full explanation of the 802.1X protocol is beyond the scope of this manual. However, the illustration below shows the basic architecture.

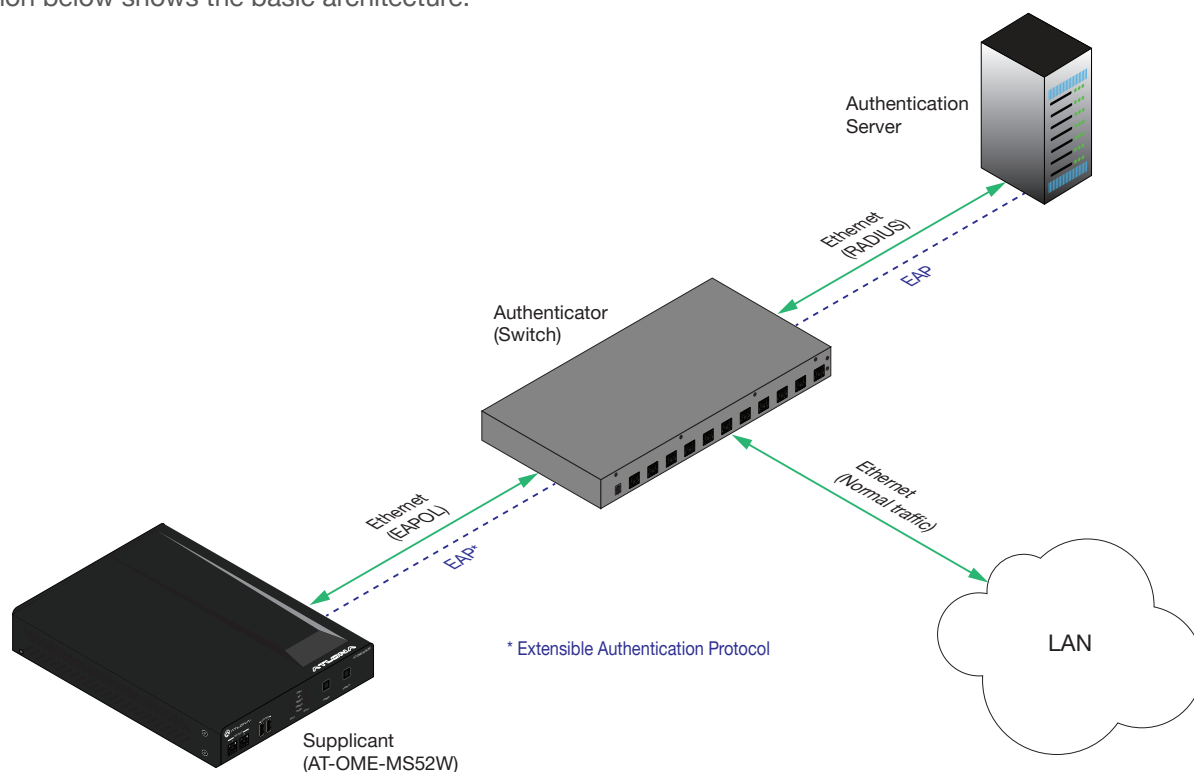

Ethernet Connections

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Administration** > **Networking** in the side menu bar.
3. Make sure the Ethernet connection is working properly.
4. Under the **Ethernet** window group, click the **802.1x Security Enable** check box.

Ethernet

MAC Address: 00:1e:06:36:b2:87

Mode: DHCP

IP Address: 10.20.50.41

Network Mask: 255.255.255.0


Gateway: 10.20.50.1

DNS Server #1: 10.20.20.5

DNS Server #2:

802.1x Security Enable: ☐

- Enter the identity of the authentication server in the **Identity** field. EAP uses this field to identify the correct authentication server which will process the credentials. For example, if foo@authserv.com is entered, then this identifies AUTHSERV as the RADIUS (authentication) server.
- Enter the password in the **Password** field.
- Click the **Upload** button to select and upload the certificate.

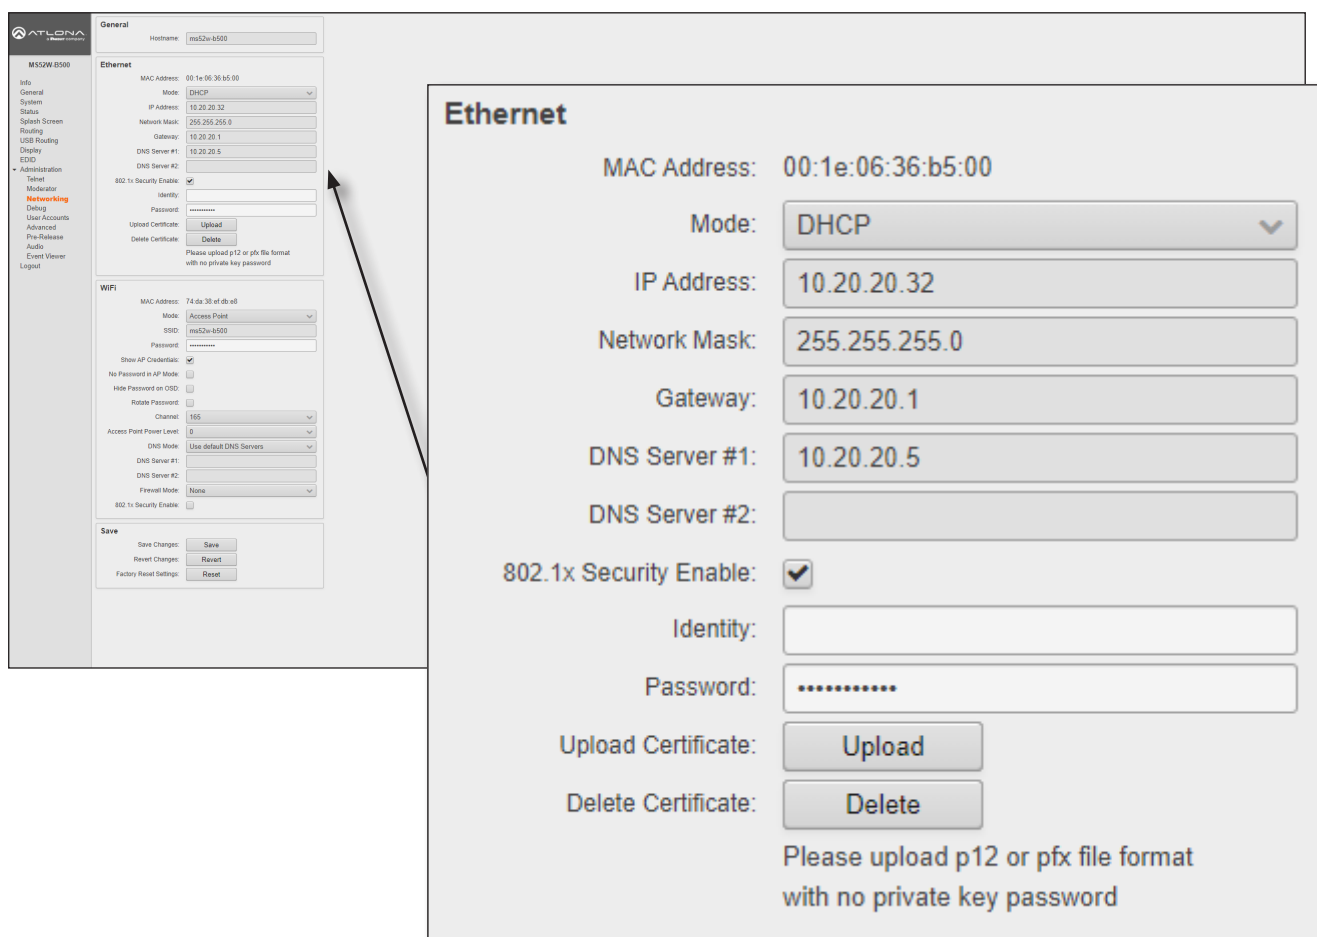

Ethernet

MAC Address: 00:1e:06:36:b5:00

Mode: **DHCP**

IP Address: 10.20.20.32

Network Mask: 255.255.255.0

Gateway: 10.20.20.1

DNS Server #1: 10.20.20.5

DNS Server #2:

802.1x Security Enable: ☒

Identity:

Password:

Upload Certificate: **Upload**

Delete Certificate: **Delete**

Please upload p12 or pfx file format with no private key password

- Under the Save window group, click the **Save** button to commit changes.

Save


Save Changes: **Save**

Revert Changes: **Revert**

Factory Reset Settings: **Reset**

WiFi Connections

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Administration > Networking** in the side menu bar.
3. Under the **WiFi** window group, click the **802.1x Security Enable** check box.
4. Enter the server, port number, and the secret, in the **Radius Server**, **Radius Port**, and **Radius Secret** fields, respectively.

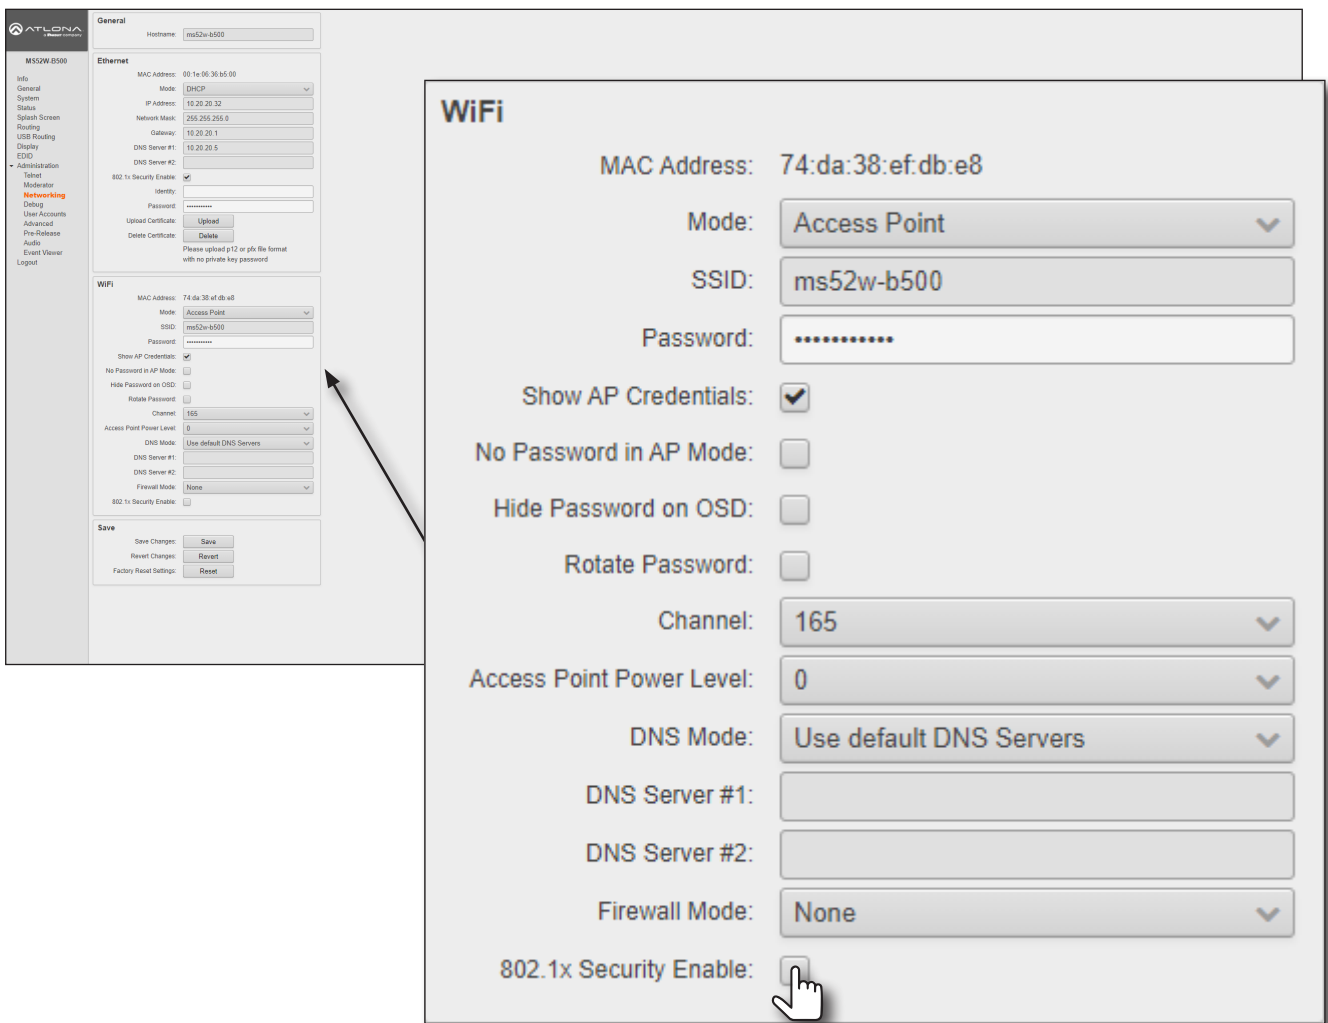

WiFi

MAC Address: 74:da:38:ef:db:e8

Mode: Access Point

SSID: ms52w-b500

Password:

Show AP Credentials: ☒

No Password in AP Mode: ☐

Hide Password on OSD: ☐

Rotate Password: ☐

Channel: 165

Access Point Power Level: 0

DNS Mode: Use default DNS Servers

DNS Server #1:

DNS Server #2:

Firewall Mode: None

802.1x Security Enable: ☒

5. Click the **Save** button, under the **Save** window group, to commit changes.

802.1x Security Enable: ☒

802.1X - Radius Server:

802.1X - Radius Port:

802.1X - Radius Secret:

Casting

The AT-OME-MS52W interface provides the ability to transmit (“cast”) the screen of any iOS®, Android™, macOS®, Chromebook, or Windows device over Wi-Fi, without having to install a separate application or driver. The AT-OME-MS52W can serve as an integrated, dual-band access point, or be networked into an existing Wi-Fi installation.





IMPORTANT: Several apps have been known to trigger HDCP, even if the content is unprotected. In these cases, the AT-OME-MS52W will be unable to decode and present the content.

iOS Devices

AirPlay is only supported on iOS 10 or higher.

1. Select the **BYOD** input on the AT-OME-MS52W.
2. On the iOS device, go to **Settings > Wi-Fi**.
3. Select the network to which the AT-OME-MS52W is connected or join its access point. The example below shows the AT-OME-MS52W in **Connect to WiFi** mode. Refer to [Connect to WiFi Mode \(page 51\)](#) for more information.

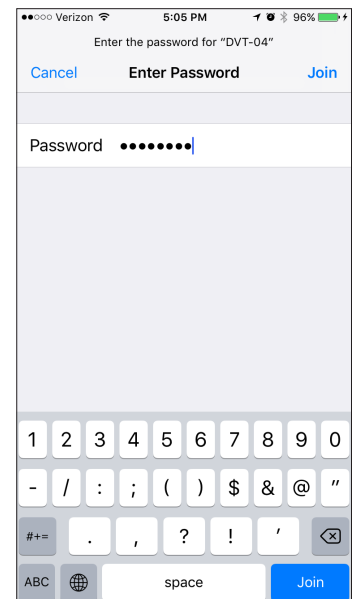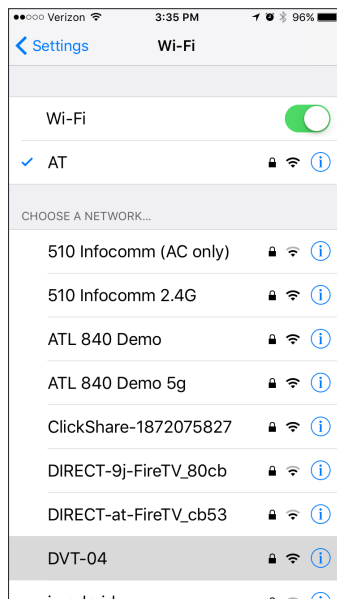


iOS 10

4. Once connected, swipe-up on the bottom of the iOS device to display the **Control Center**.
5. Tap the **AirPlay Mirroring** option to display a list of available AirPlay devices.

Note that if the iOS device is running 11.0.3 or later, the AirPlay option has been changed to Screen Mirroring. Tap the SSID from the list of devices.




iOS 11.0.3 or later

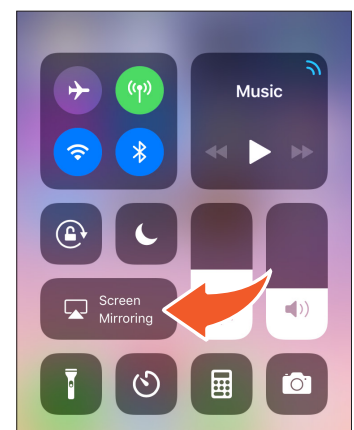

6. Tap the SSID from the list of devices.
7. Close the **Control Center** by either swiping down or pressing the **Home** button.
8. The image of the iOS device will now appear on the connected display.

Note that depending upon the application, the image on the screen can be rotated. For example, when using the camera app, if the iOS device is rotated 90 degrees, then the image on the screen will also be rotate 90 degrees.

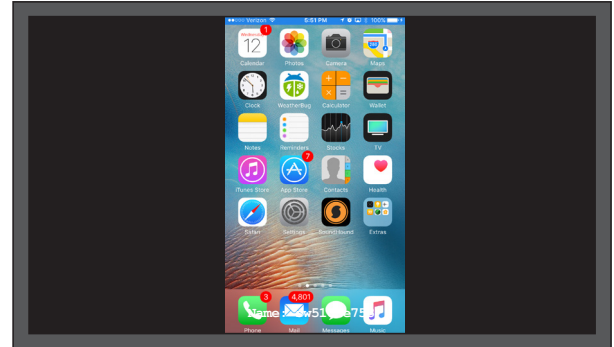


9. Close the **Control Center** by either swiping down or pressing the **Home** button.

OS X Devices

AirPlay® is only supported on Mountain Lion 10.8 or later. To determine if AirPlay is supported on the system being used, click **System Preferences > Displays**. If the “Show mirroring options in the menu bar when available” checkbox is not displayed, then AirPlay is not supported.

1. Click the **Wi-Fi** icon in the menu bar and select the network to which the AT-OME-MS52W is connected.

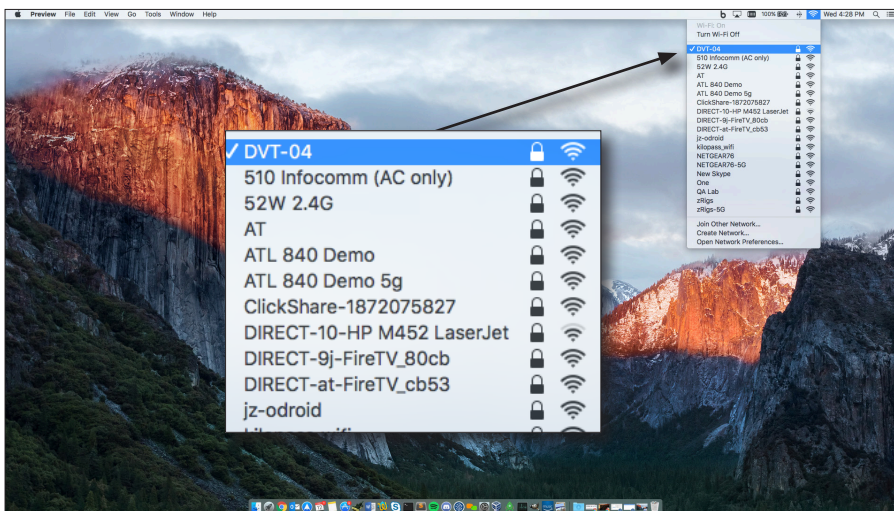


2. Enter the password for the Wi-Fi network, then click the **Join** button.



AirPlay can be used to either mirror or extend the Mac display.

- **Mirroring**
Click the AirPlay icon in the menu bar and select the desired display to be mirrored.
- **Extending**
Click the AirPlay icon and select “Use As Separate Display” from the list of displays, to extend the Desktop to another display.

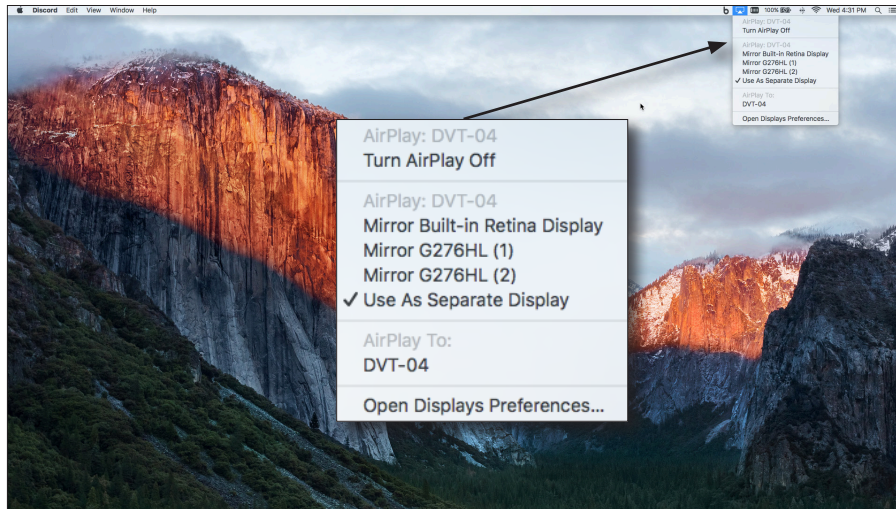

- **Turning Off AirPlay**
Click the AirPlay icon and select “Turn AirPlay Off”.

Microsoft Miracast

Miracast is a wireless protocol that allows content to be transmitted from laptops and other mobile devices to displays. The latest release of Microsoft Windows® 10 supports Miracast.

Displaying Miracast devices can be done in more than one way. Three methods are discussed below. The first method is the most direct method.

Method 1



1. Press  +  keys, simultaneously.
2. The list of available devices will be displayed on the right-hand side of the screen. Select the AT-OME-MS52W hostname from the list.

Method 2

1. Right-click on the Windows Desktop and select **Display Settings** from the pop-up menu.
2. In the right-hand column, scroll down, then click **Connect to a wireless display**.


Google Chrome

1. Make sure both the AT-OME-MS52W and the “casting” computer are on the same network.
2. Launch Google Chrome.
3. Click the  icon, in the upper right corner of the Chrome browser.
4. Click the **Cast...** option from the drop-down menu.
5. Select the hostname of the AT-OME-MS52W from the **Cast to** menu.

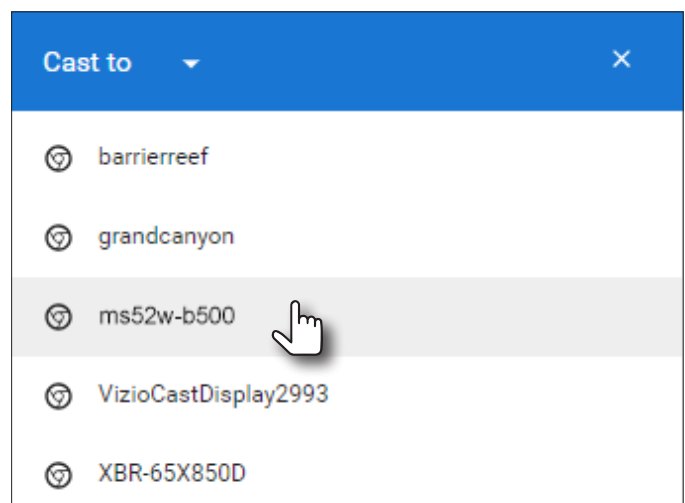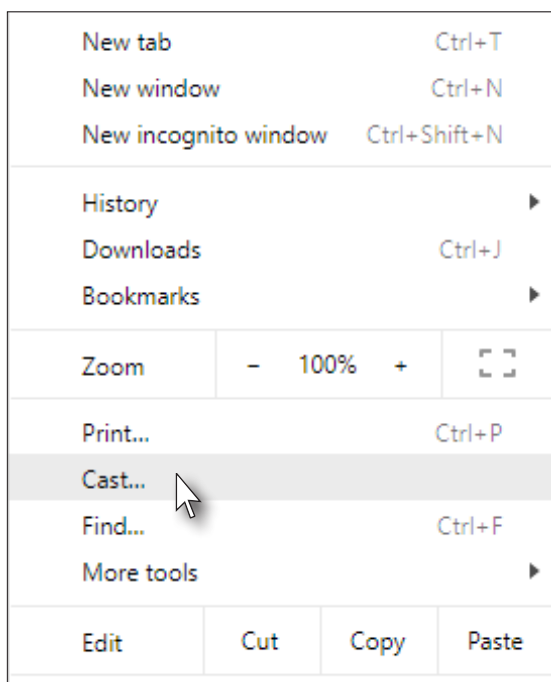

Chrome will immediately begin casting to the AT-OME-MS52W.

6. Adjust the volume (if audio is present), by clicking and dragging the slider control. In addition, either **Remote screen** or **Both screens** can be selected from the **Show fullscreen videos on** drop-down list.
7. Click the **x** in the upper-right corner of the Casting tab to dismiss this dialog.

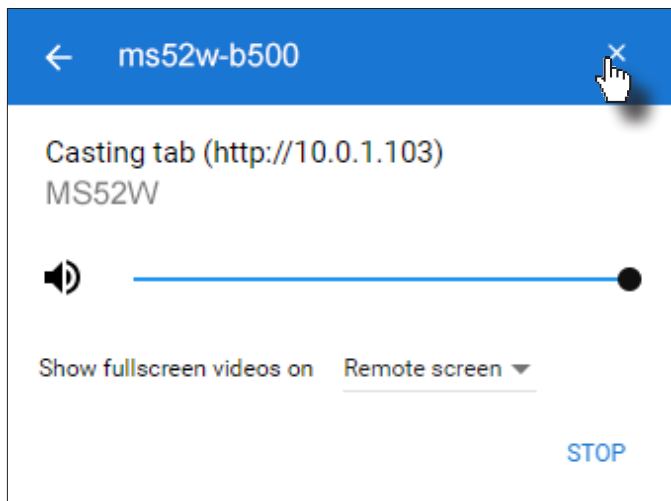


When Chrome is casting, the  icon will appear in the upper-right portion of the menu bar. Clicking this icon will display the Casting tab dialog.

In addition, a blue rectangle will be displayed in the browser tab, which is sharing (“casting”) the content to the AT-OME-MS52W. If the browser tab is closed, then the casting process will be terminated.

8. Click **STOP** to discontinue casting to the AT-OME-MS52W.

Audio Management


By default, the AT-OME-MS52W will use the digital audio (if present) from the **USB-C IN**, **DisplayPort**, or **HDMI** ports and output the audio over the **HDMI OUT**, **HDBaseT OUT**, and **AUDIO OUT** ports. However, an external analog source can also be used. When configured, the analog audio source will replace the digital audio on the selected input, and will be heard on the **HDMI OUT**, **HDBaseT OUT**, and **AUDIO OUT** ports.

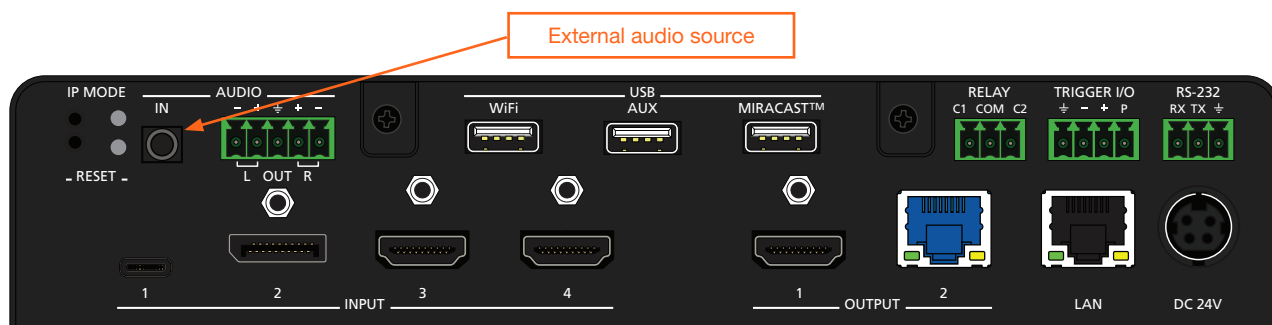

Using External Audio Sources

1. Connect an unbalanced audio source to the **AUDIO IN** port on the rear panel. This port accepts a 3.5 mm mini-stereo cable.
2. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
3. Click **Administration** > **Audio** in the side menu bar.
4. Click the drop-down list of the desired input and select the audio input. In the example below, **Analog** is being selected from the **HDMI 4** drop-down list. This will replace the digital audio heard on the output (if any), with the analog audio source.

To use the digital audio from the HDMI source, select **Digital** from the **HDMI 4** drop-down list.

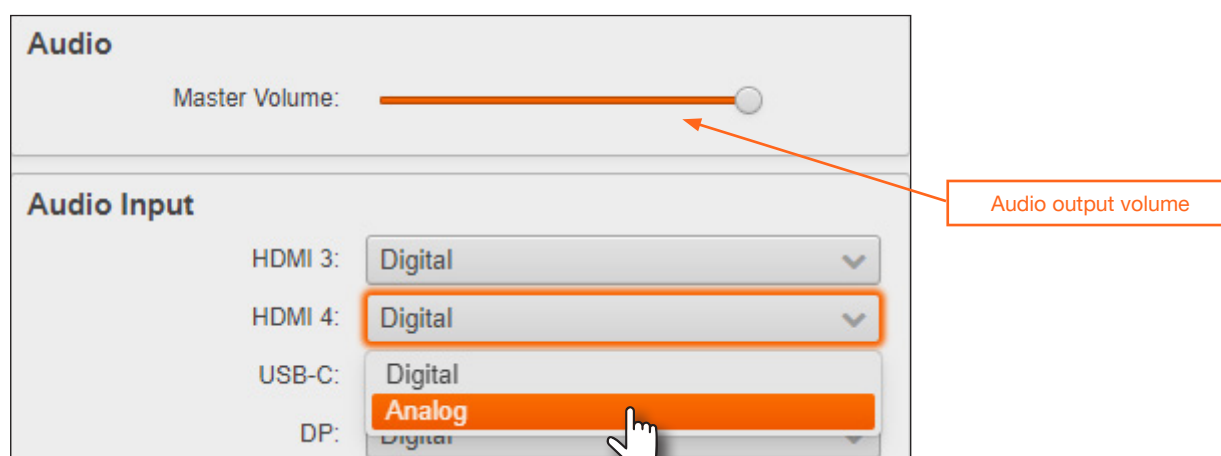

Controlling Audio Output Volume

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Administration** > **Audio** in the side menu bar.
3. Under the **Audio** window group, click and drag the volume slider to the desired output level. This applies to both digital and analog (external) audio sources.


AirPlay Bluetooth Discovery

The AT-OME-MS52W supports Bluetooth®-assisted device discovery. An *optional* Bluetooth adapter is required, but not included. Atlona recommends Plugable and Kinivo Bluetooth 4.0 adapters.



IMPORTANT: Bluetooth discovery is applicable only to Apple devices and is used for device discovery on networks, such as corporate networks, where mDNS is not permitted. Bluetooth discovery behaves as a type of “beacon”, indicating the available AT-OME-MS52W units within the local vicinity of an AirPlay device.

1. Connect the Bluetooth adapter to the **AUX** port on the AT-OME-MS52W.
2. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
3. Click **Administration** > **Advanced** in the side menu bar.
4. Under the **BYOD** window group, click the **AirPlay Bluetooth** checkbox. If this checkbox has a check mark in it, then the feature is enabled. Also, make sure that the **AirPlay Enable** checkbox is checked.

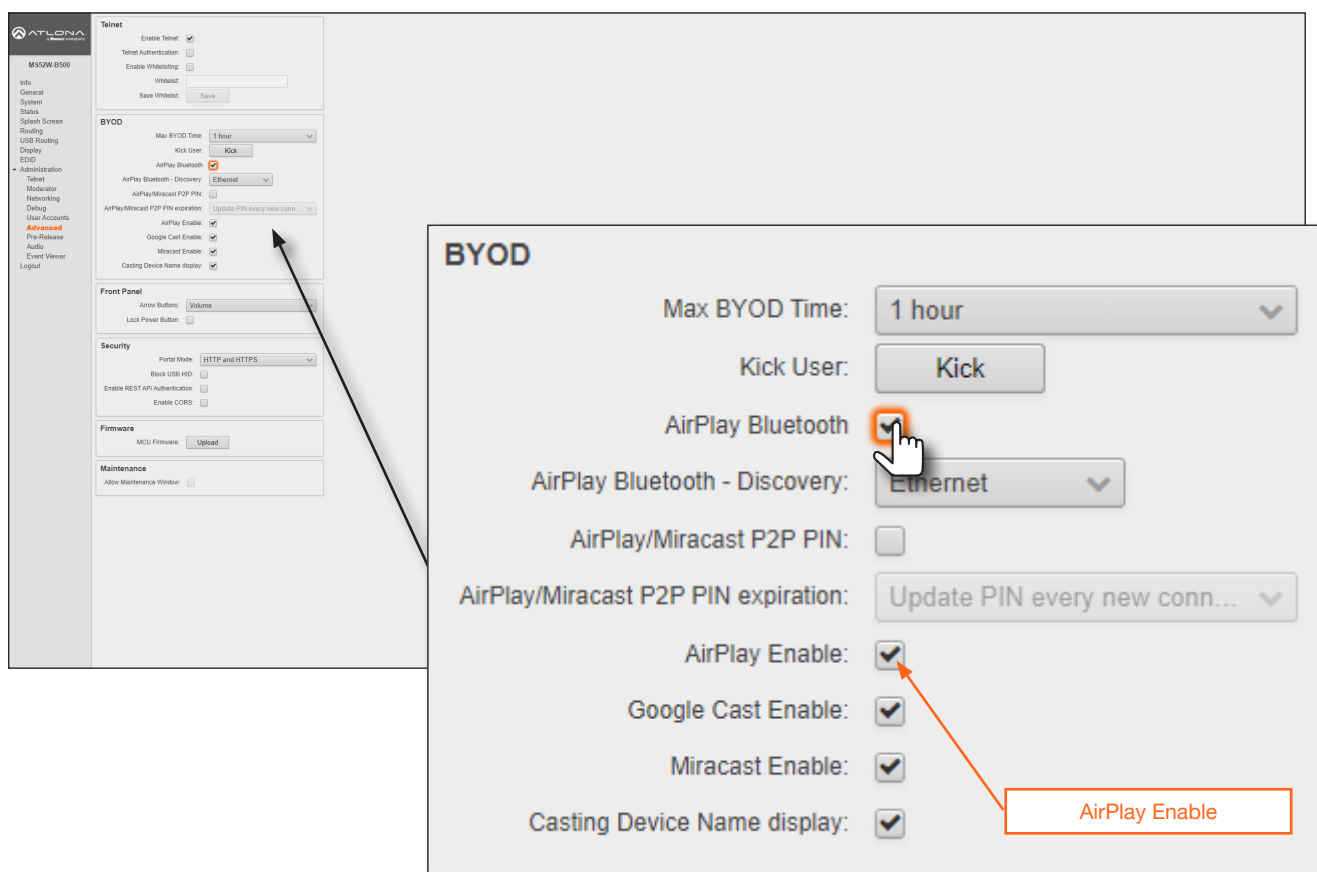

5. Go to the AirPlay device and activate Screen Mirroring. The AT-OME-MS52W will now be displayed in the Screen Mirroring device list.



NOTE: If the AT-OME-MS52W is beyond the range defined by the Bluetooth specification, then the device will not be displayed in the Screen Mirroring list. When pairing, make sure to be as close to the AT-OME-MS52W as possible.


AirPlay / Miracast P2P PIN Codes

The AT-OME-MS52W can be configured to prompt for a PIN code, before a BYOD device connects with either AirPlay or Miracast P2P. When this option is enabled, a PIN code will be displayed on the screen when an AirPlay or Miracast device attempts to connect to the AT-OME-MS52W. Refer to the IT Deployment Guide for definitions of Miracast P2P (Peer-to-Peer) and Miracast over Infrastructure.




NOTE: The PIN code will randomly change every five minutes, by default. This value can be set from 10 seconds to five hours. This provides a level of security, preventing unauthorized users from accessing the AT-OME-MS52W. Android™ devices do not support PIN code security.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Administration** > **Advanced** in the side menu bar.
3. Click the **AirPlay Enable** and **Miracast Enable** checkboxes, as required by the casting device.
4. Under the **BYOD** window group, click the **Airplay/Miracast P2P PIN** checkbox. If this checkbox has a check mark in it, then the feature is enabled.

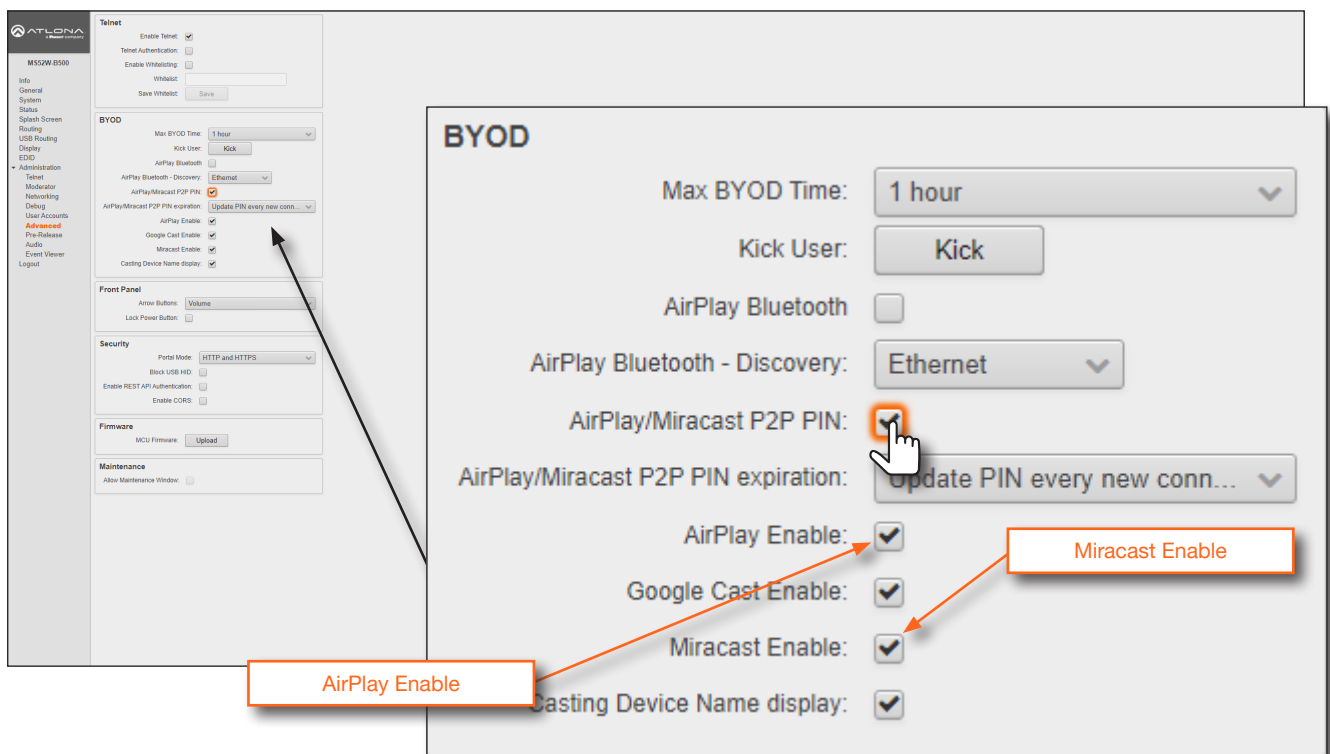

The screenshot shows the web interface for the AT-OME-MS52W. The left sidebar contains a menu with 'Administration' > 'Advanced' selected. The main content area shows the 'BYOD' configuration page. The 'AirPlay/Miracast P2P PIN' checkbox is checked and highlighted with a red box and an arrow. Other checkboxes for 'AirPlay Enable', 'Google Cast Enable', and 'Miracast Enable' are also checked and highlighted with red boxes and arrows. The 'Max BYOD Time' is set to '1 hour'. The 'AirPlay/Miracast P2P PIN expiration' is set to 'Update PIN every new conn...'. The 'AirPlay Bluetooth' checkbox is unchecked. The 'AirPlay Bluetooth - Discovery' dropdown is set to 'Ethernet'. The 'Casting Device Name display' checkbox is checked.


5. The following message box will be displayed. Click the **Ok** button.

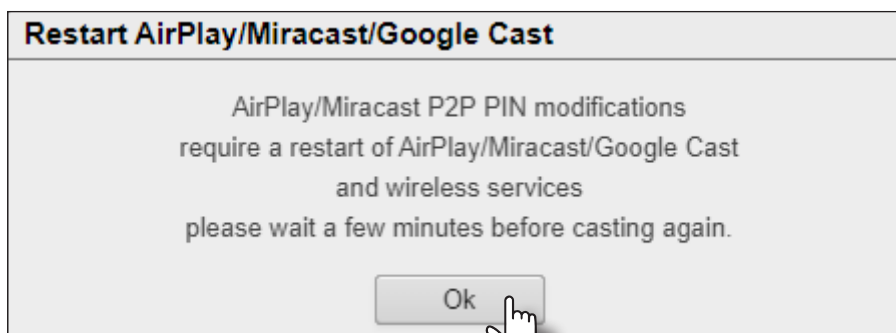


The screenshot shows a message box titled 'Restart AirPlay/Miracast/Google Cast'. The message text is: 'AirPlay/Miracast P2P PIN modifications require a restart of AirPlay/Miracast/Google Cast and wireless services please wait a few minutes before casting again.' The 'Ok' button is highlighted with a red box and an arrow.

Device Operation

5. Connect the AirPlay/Miracast P2P device to the AT-OME-MS52W. Refer to [Wireless Configuration \(page 47\)](#) for more information.
6. Begin casting to the AT-OME-MS52W. When the device attempts to connect to the AT-OME-MS52W, a PIN code will be displayed on the screen that is connected to the device. Refer to the illustration on the next page, if necessary.

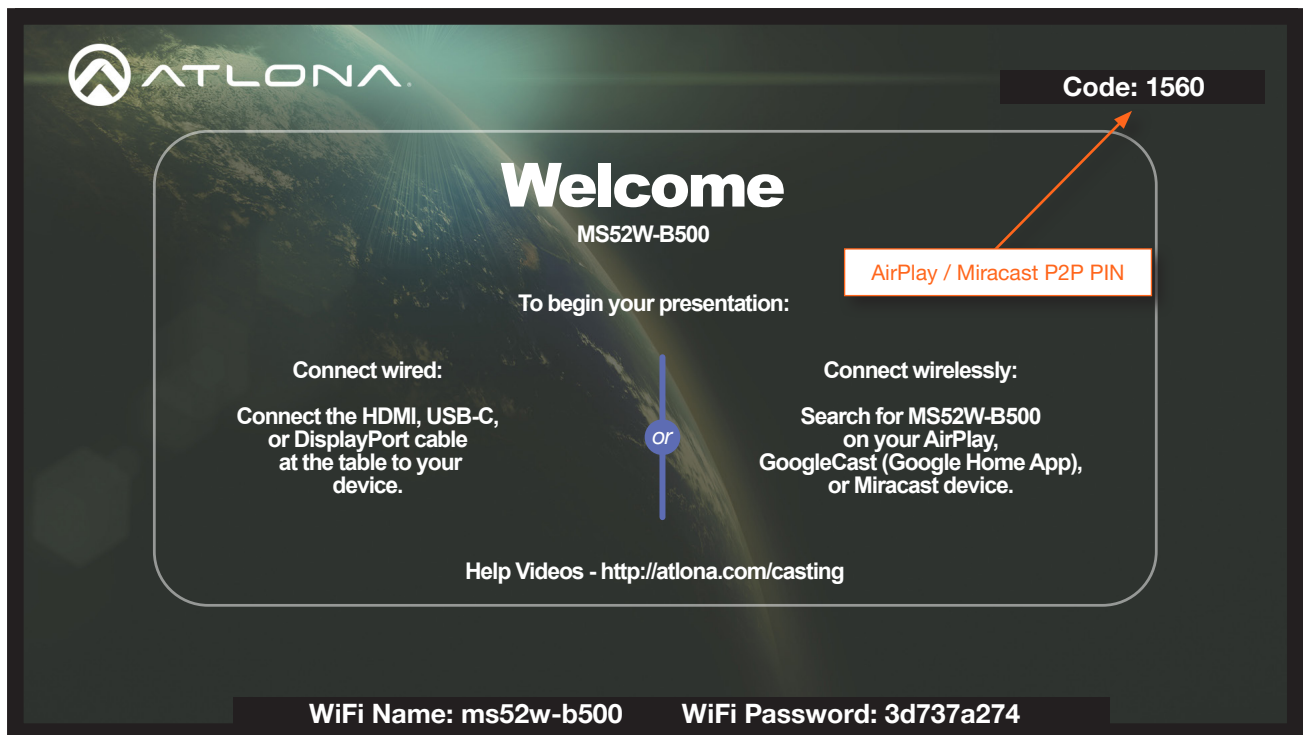

6. Enter the four-digit PIN code in the dialog box on the device and press **OK**. The PIN code will be displayed only for about 10 seconds. If the PIN code is not entered within the time interval, then the PIN code will be removed from the screen. The example below, shows an AirPlay device prompting for the PIN code. Clicking **Cancel** in the AirPlay Code dialog box will reconnect the AirPlay device to the AT-OME-MS52W and generate a new PIN code.

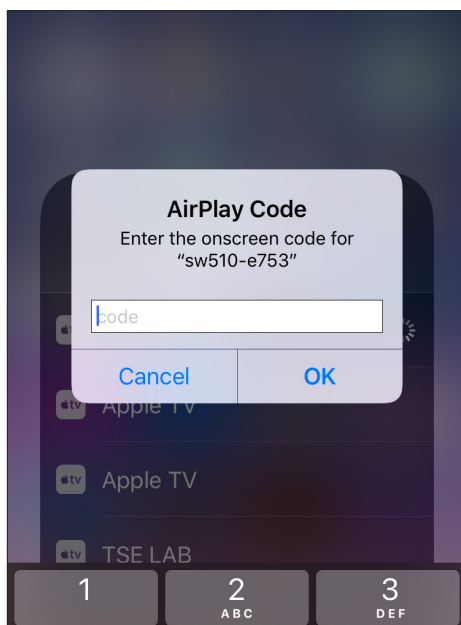


Changing the PIN Timeout

By default, the AT-OME-MS52W will automatically generate a new PIN code for each new WiFi connection that is attempted. However, this value can also be set to regenerate every 15 minutes or 60 minutes.



NOTE: The AT-OME-MS52W requires a minimum of 20 seconds to elapse before another PIN code is generated. For example, if another connection is made, within 20 seconds after the nth connection, then the same PIN code will be used to connect to the system.

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Administration** > **Advanced** in the side menu bar.
3. Under the **BYOD** window group, click the **Airplay/Miracast P2P PIN** checkbox. If this checkbox has a check mark in it, then the feature is enabled.
4. Click the **AirPlay/Miracast P2P Pin expiration** drop-down list and select the desired time interval.

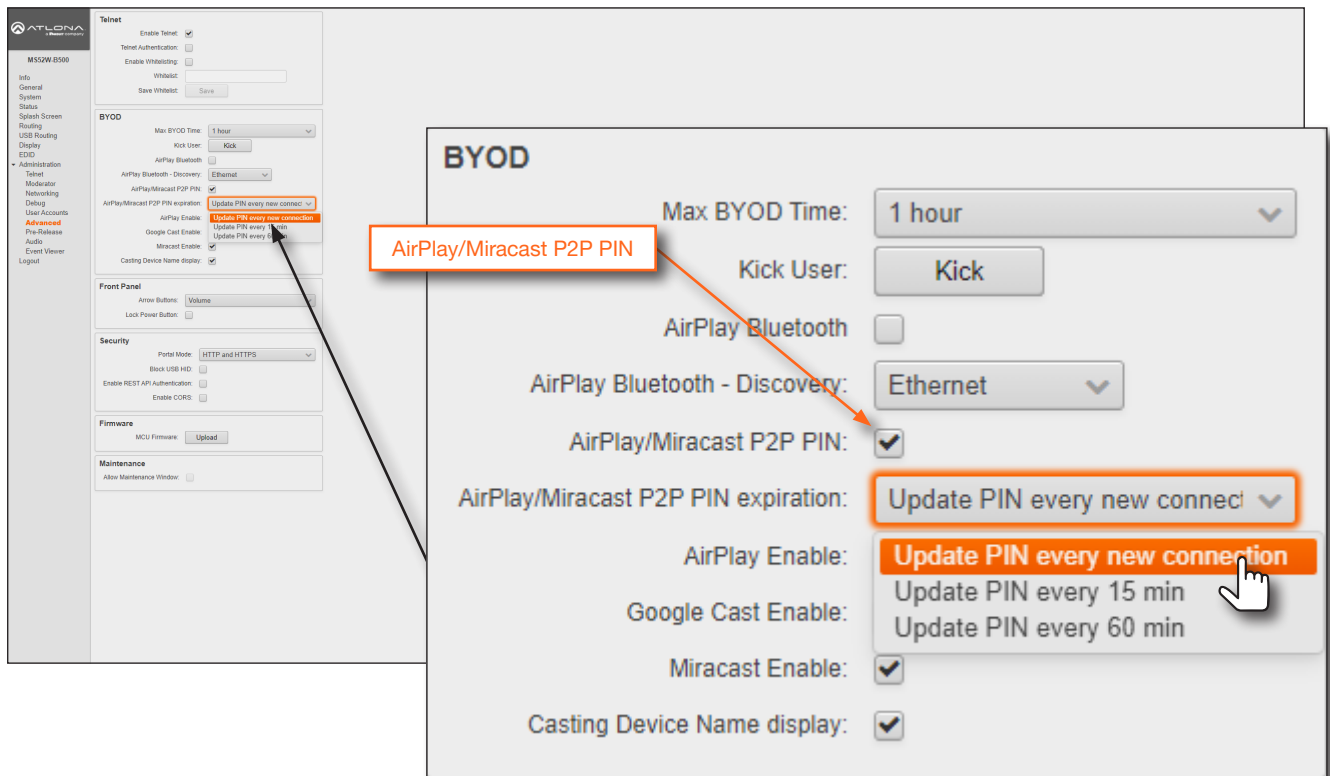

Moderator Mode


Moderator mode provides a layer of control when multiple clients are casting through the AT-OME-MS52W. The “moderator” can either *allow* or *kick* (remove) a client from casting content. Up to four users can be hosted in the **Users** table. However, only one device may cast at a time.



NOTE: In order to monitor which devices are allowed to display content, Moderator mode must be enabled before a device begins casting. If a device is already casting, without Moderator mode enabled, then enabling this feature will have no effect.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Set the WiFi mode to either **Access Point** or **Connect to WiFi**. Refer to [Wireless Configuration \(page 47\)](#) for more information.
3. Click **Administration** > **Moderator** in the side menu bar.
4. Under the **Moderator** window group, click the **Enable** checkbox. If this checkbox has a check mark in it, then the feature is enabled.


In order to monitor which devices are allowed to display content, this box must be checked before a device begins casting. If a device is already casting, then enabling this feature will have no effect.

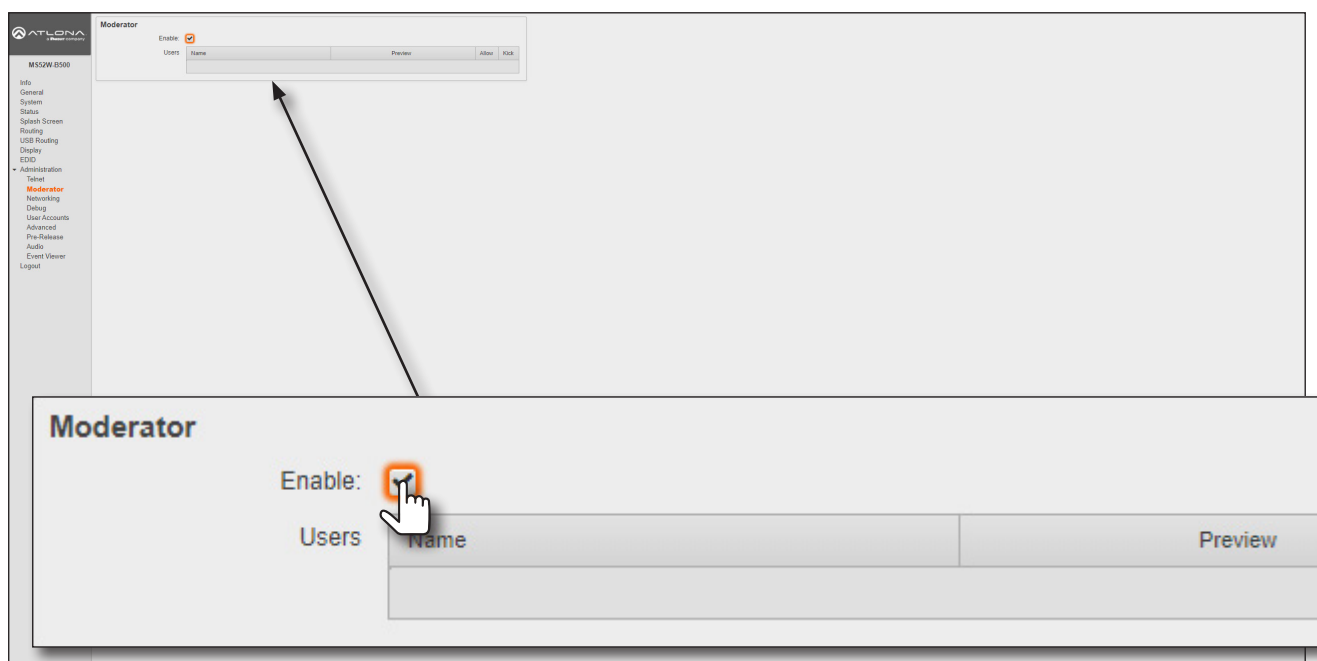



5. Connect the BYOD devices to the AT-OME-MS52W. Once connected, the device can begin casting. Refer to [Casting \(page 58\)](#) for more information on how to connect devices for casting.

Once the devices have started casting, they will be displayed in the **Users** table, as shown in the example on the next page. Devices will only appear in this table when they are casting. When devices are displayed in this table, an **Allow** and **Kick** button will also be available for each device.

- Click the **Allow** button to permit a device to begin casting to the display device.

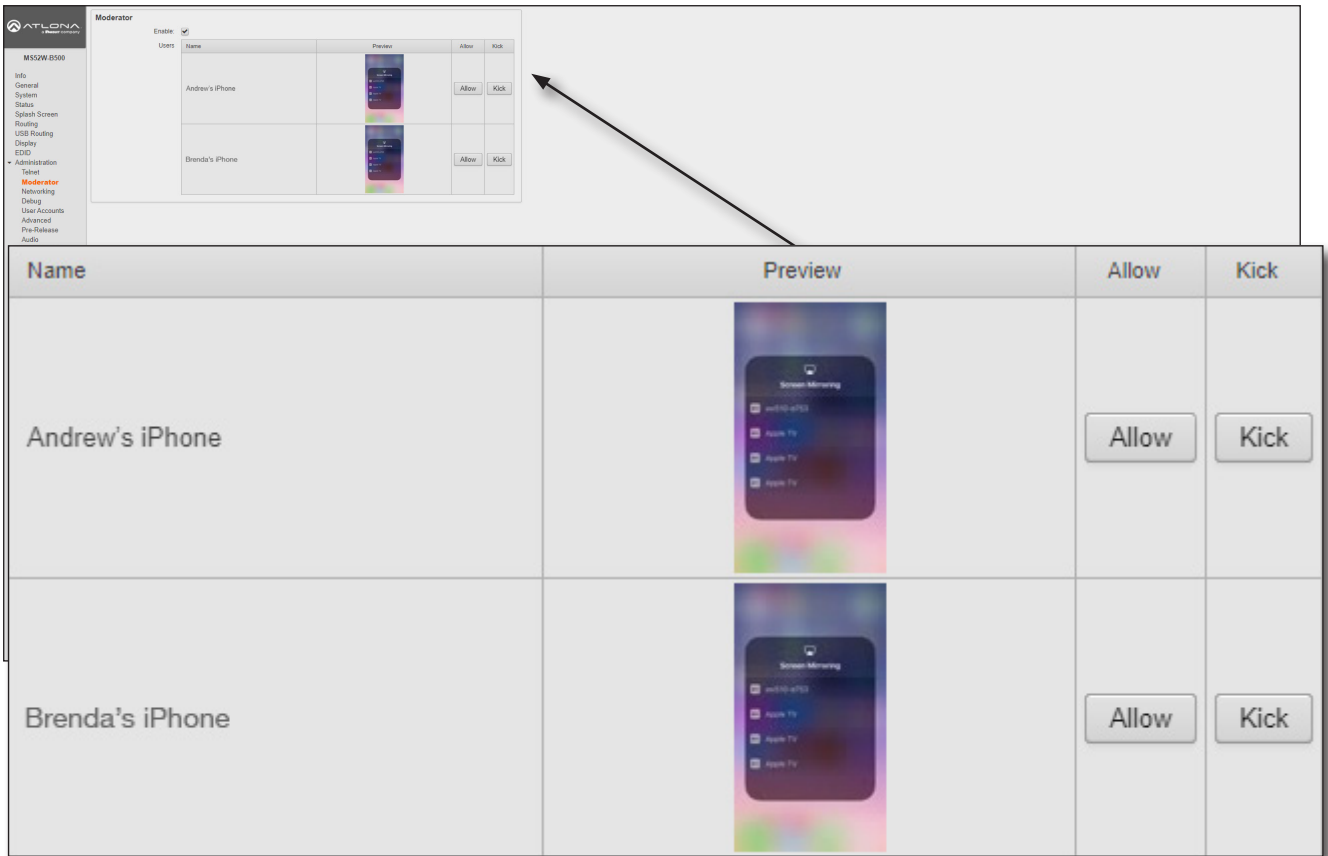


The screenshot shows the ATLONA Moderator interface. On the left is a sidebar with a menu including: Info, General, System, Status, Splash Screen, Routing, USB Routing, Display, EDID, Administration, Tablet, Moderator (highlighted), Networking, Debug, User Accounts, Advanced, Pre-Release, and Audio. The main area displays a table of connected devices:

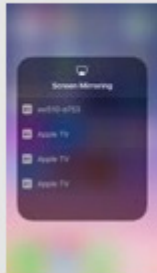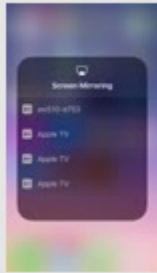Name	Preview	Allow	Kick
Andrew's iPhone		Allow	Kick
Brenda's iPhone		Allow	Kick


An arrow points from the 'Allow' button for 'Andrew's iPhone' to the main table above.

Once the selected device is allowed to cast to the connected display device, the **Allow** button will be disabled. In the example below, *Brenda's iPhone* is now the active casting device and shown on the display device.

- Click the **Allow** button, next to another device, to make that device the active casting device. Clicking the **Allow** button, allows switching between multiple casting devices that are connected to the AT-OME-MS52W. Note that it may take a few moments before the content from the casting device appears on the screen.

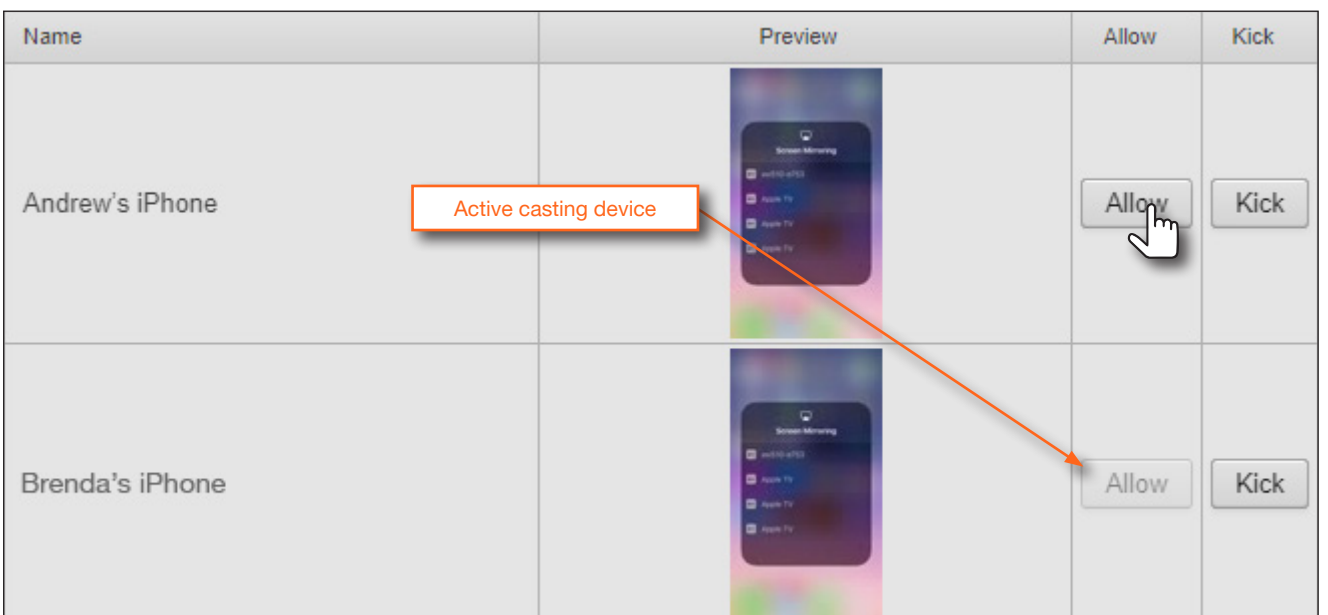


This screenshot shows the same interface as before, but with a callout box pointing to the 'Allow' button for 'Andrew's iPhone'. The callout box contains the text 'Active casting device'. A hand cursor is shown clicking the 'Allow' button. The 'Allow' button for 'Brenda's iPhone' is also visible below it.

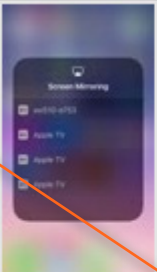Name	Preview	Allow	Kick
Andrew's iPhone		Allow	Kick
Brenda's iPhone		Allow	Kick

Device Operation

- Click the **Kick** button to explicitly disconnect a casting device from the AT-OME-MS52W. Any casting device can be “kicked”, even if it is the active casting device.

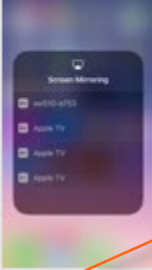Name	Preview	Allow	Kick
Andrew's iPhone		Allow	Kick
Brenda's iPhone		Allow	Kick

An orange arrow points from the "Kick" button of Andrew's iPhone to the "Allow" button of Brenda's iPhone. A callout box labeled "Active casting device" points to Brenda's iPhone.

Once a device has been “kicked”, it will no longer appear in the **Users** table. In the example below, the device *Andrew's iPhone* has been removed from the **Users** table.

- To reconnect a device that has been “kicked”, select the hostname of the AT-OME-MS52W from the cast menu of the BYOD device. After a successful connection, the device will appear in the **Users** table.

Name	Preview	Allow	Kick
Brenda's iPhone		Allow	Kick


Display Control Methods

The AT-OME-MS52W provides various methods for display control. The following section describes and provides instructions for each method. By default, the AT-OME-MS52W uses CEC commands to control the display.

Active Video Presence


This method will instruct the AT-OME-MS52W to toggle power on the display, based on the absence/presence of either a video signal on any of the physical inputs or a casting device. The **Auto Power Off Timer** interval must expire before the display is turned off. **AutoSwitch** must also be enabled for this method to work.

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Display** in the side menu bar.
3. Under the **Control** window group, make sure that the **AutoSwitch** checkbox is checked. This feature must be enabled.
4. Click the **Display Control Method** drop-down list and select **Active Video Presence**.

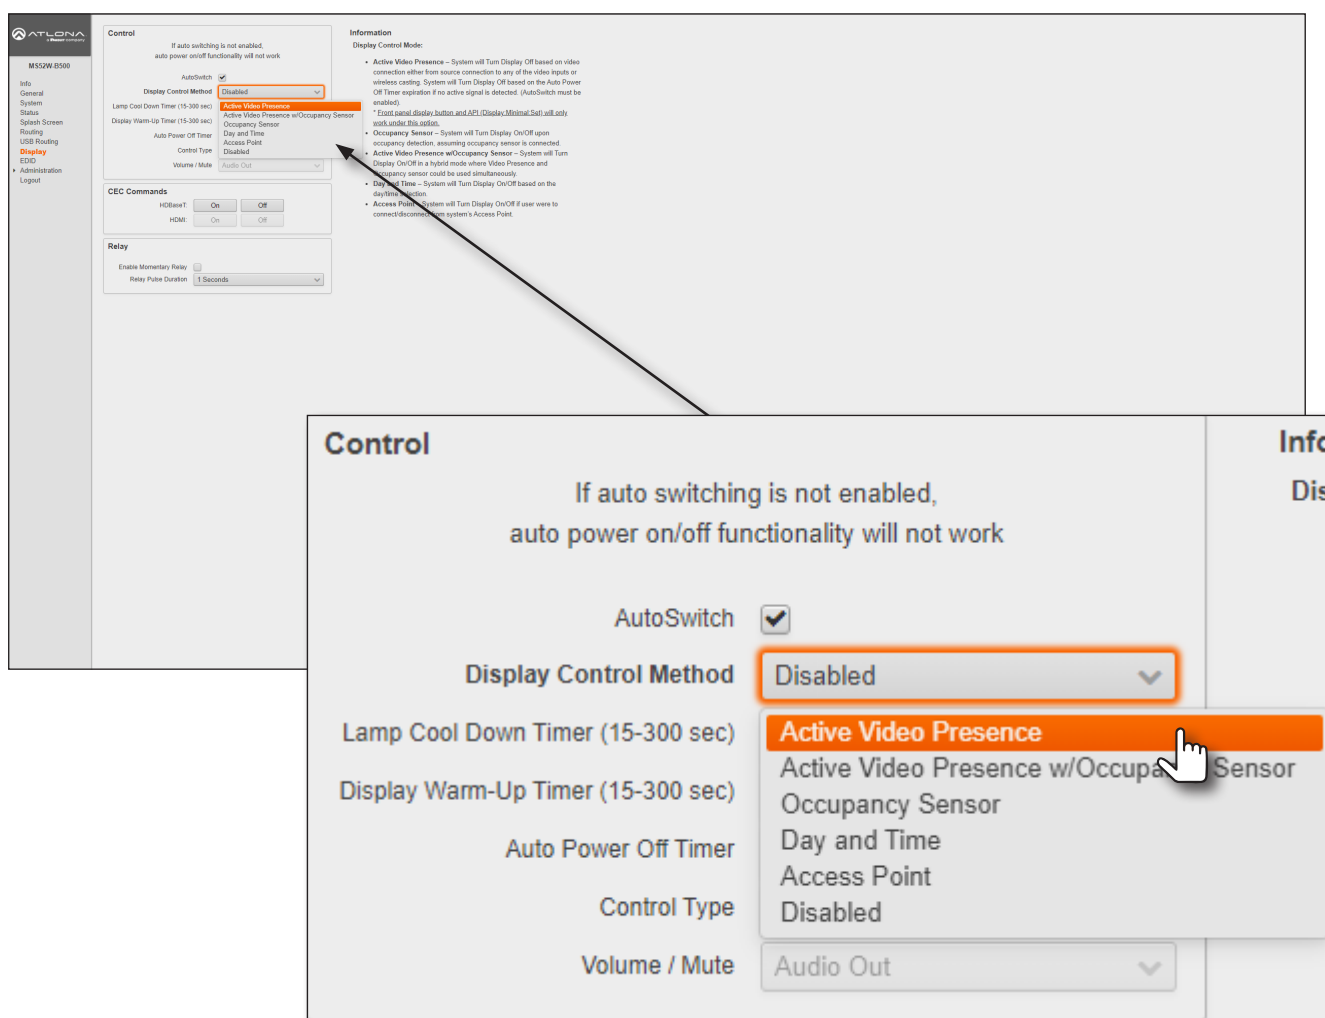

The screenshot shows the AT-OME-MS52W web interface. On the left is a sidebar menu with options: Info, General, System, Status, Splash Screen, Keypad, USB, Keypad, Display, CEC, Administration, and Logout. The 'Display' option is selected. The main content area is divided into two sections: 'Control' and 'Information'. The 'Control' section contains a warning: 'If auto switching is not enabled, auto power on/off functionality will not work'. Below this is the 'AutoSwitch' checkbox, which is checked. The 'Display Control Method' dropdown menu is open, showing the following options: Disabled, Active Video Presence (highlighted), Active Video Presence w/Occupancy Sensor, Occupancy Sensor, Day and Time, Access Point, and Disabled. The 'Auto Power Off Timer' is set to 15-300 sec. The 'Control Type' is set to Disabled. The 'Volume / Mute' dropdown is set to Audio Out. The 'Information' section contains a 'Display Control Mode' dropdown and a list of information items.

- Click the **Auto Power Off Timer** drop-down list and select the desired time interval. This is the amount of time that must elapse, before the display is turned off.

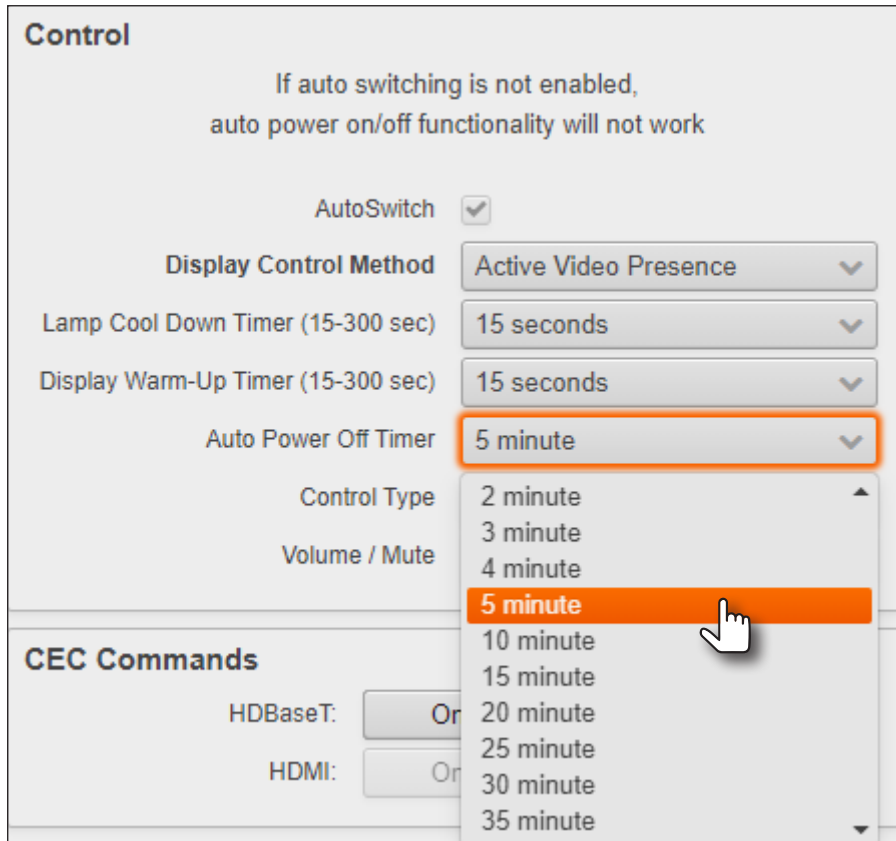


The screenshot shows the 'Control' section of the ATLONA interface. It includes a warning message: 'If auto switching is not enabled, auto power on/off functionality will not work'. Below this, the 'AutoSwitch' checkbox is checked. The 'Display Control Method' is set to 'Active Video Presence'. The 'Lamp Cool Down Timer (15-300 sec)' and 'Display Warm-Up Timer (15-300 sec)' are both set to '15 seconds'. The 'Auto Power Off Timer' dropdown menu is open, showing a list of time intervals: 2 minute, 3 minute, 4 minute, 5 minute (highlighted with an orange bar and a mouse cursor), 10 minute, 15 minute, 20 minute, 25 minute, 30 minute, and 35 minute. The 'CEC Commands' section is visible at the bottom, with 'HDBaseT' and 'HDMI' buttons.

- Setup is complete.

Active Video Presence with Occupancy Sensor

This method is similar to the **Active Video Presence** mode, except that an occupancy sensor can also be used to provide hybrid operation. If using this mode, an occupancy sensor should be connected to the **TRIGGER I/O** port on the AT-OME-MS52W. Refer to [Trigger I/O \(page 13\)](#) for wiring information.

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Display** in the side menu bar.
3. Under the **Control** window group, make sure that the **AutoSwitch** checkbox is checked. This feature must be enabled.
4. Click the **Display Control Method** drop-down list and select **Active Video Presence w/Occupancy Sensor**.

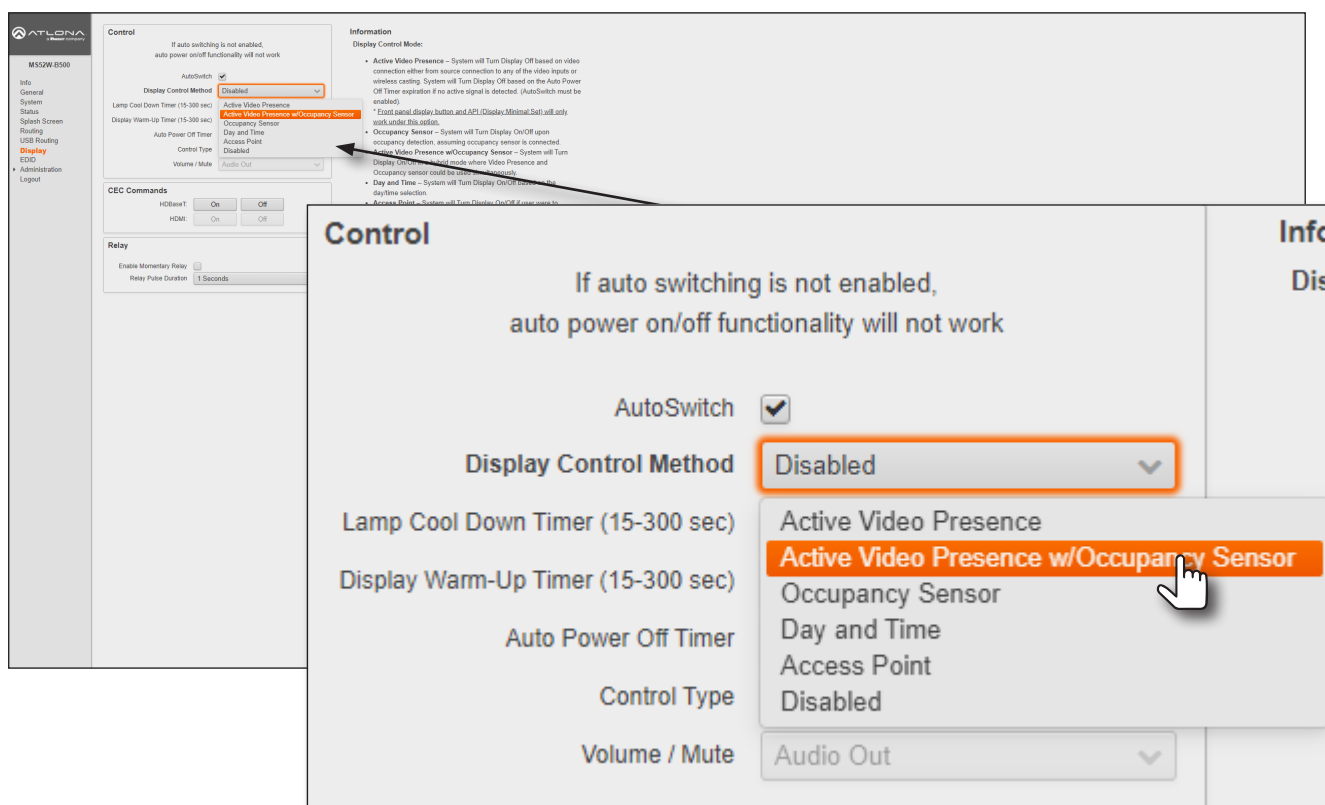

5. The **Trigger I/O** window group will be displayed, along with two checkboxes: **Enable Trigger On** and **Enable Trigger Off**.

Check the **Enable Trigger On** checkbox to enable a *power-on* state when the trigger voltage is pulled from low to high. Check the **Enable Trigger Off** checkbox to enable a *power-off* state when the trigger voltage is pulled from low to high. Either or both checkboxes can be enabled. When enabled, all other display power options are overridden.




6. Setup is complete.

Occupancy Sensor

This method uses an occupancy sensor to control the display. **AutoSwitch** does not need to be enabled for this feature to work.

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Display** in the side menu bar.
3. Click the **Display Control Method** drop-down list and select **Occupancy Sensor**.

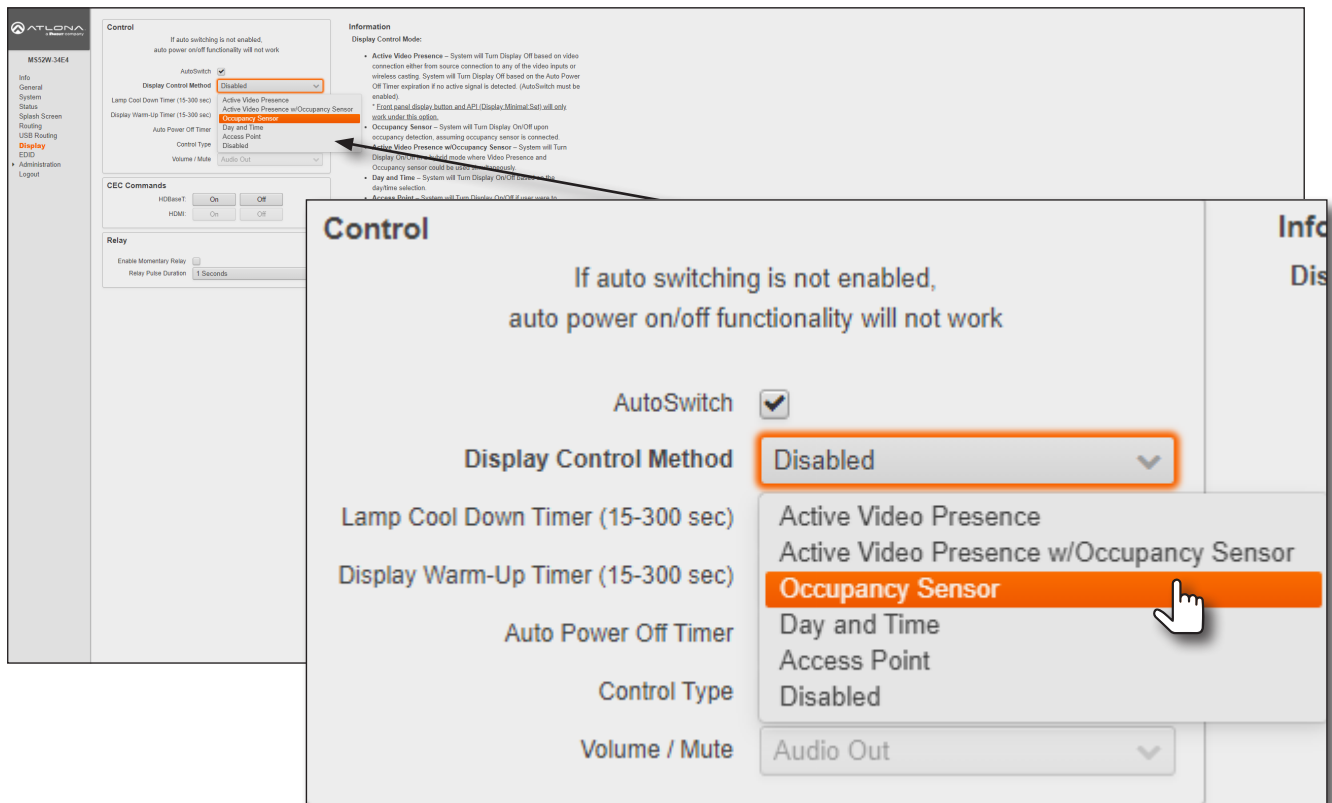

4. The **Trigger I/O** window group will be displayed, along with two checkboxes: **Enable Trigger On** and **Enable Trigger Off**.

Check the **Enable Trigger On** checkbox to enable a *power-on* state when the trigger voltage is pulled from low to high. Check the **Enable Trigger Off** checkbox to enable a *power-off* state when the trigger voltage is pulled from low to high. Either or both checkboxes can be enabled. When enabled, all other display power options are overridden.




5. Setup is complete.

Day and Time

This method allows manual setup of day and time to determine when the display device will be power-on and powered-off. **AutoSwitch** does not need to be enabled for this feature to work.

1. Login to the web server. Refer to [Logging in to the Web Server](#) (page 22) for more information.
2. Click **Display** in the side menu bar.
3. Click the **Display Control Method** drop-down list and select **Day and Time**.

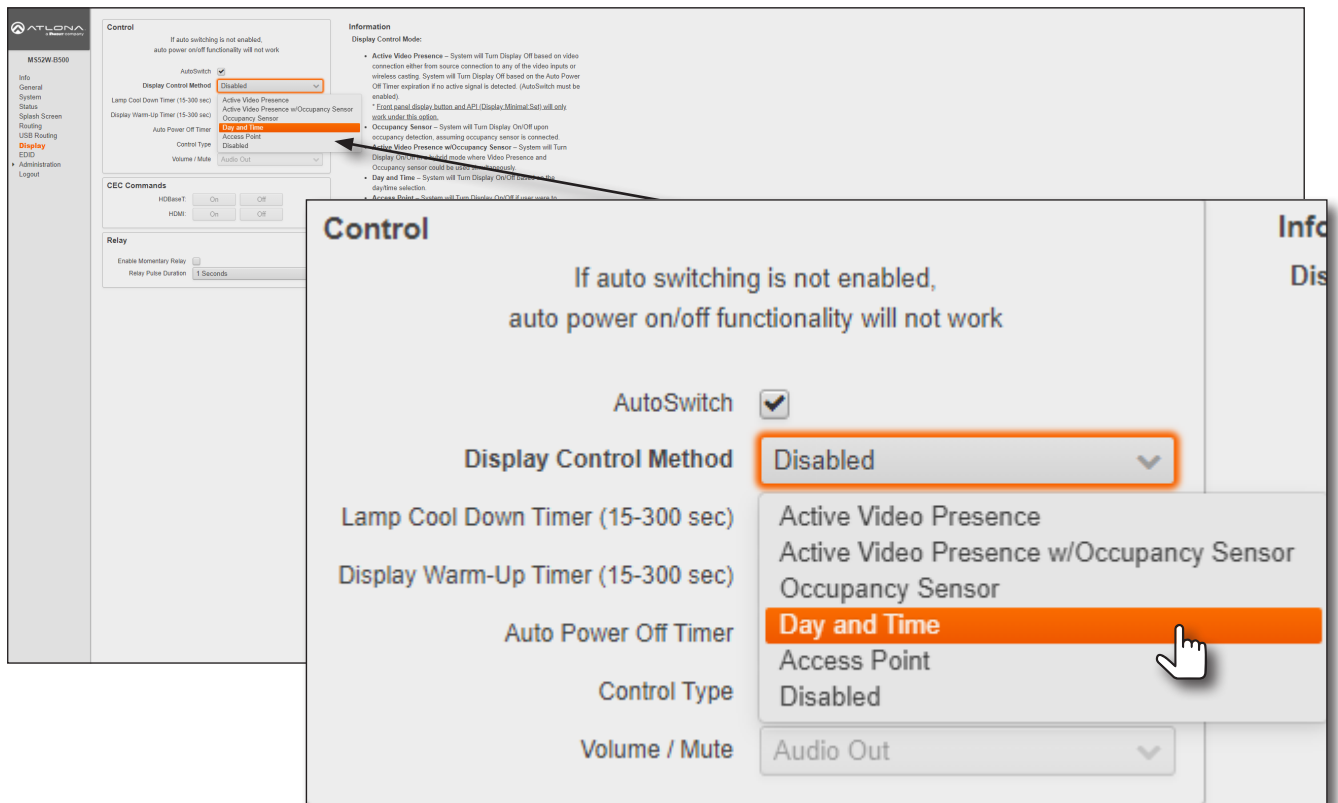

4. The **Time Display Control** window group will be displayed.
5. Click the **Start Time** drop-down lists to select the time when the display should be powered-on.
6. Click the **End Time** drop-down lists to select the display power-off time.
7. Click the **Timezone** drop-down list to select the correct time zone.
8. Click the desired checkboxes to select which days to apply the schedule.
9. Setup is complete.

Time Display Control

Start Time: 9 00

End Time: 17 00


Timezone: America/Los_Angeles (UTC-08:00)

Mon ☒
 Tue ☒
 Wed ☒
 Thu ☒
 Fri ☒
 Sat ☐
 Sun ☐

Access Point

This method uses the presence or absence of a wireless connection to determine the power state of the system. In order for this feature to work, the AT-OME-MS52W must be set as an Access Point. Refer to [Access Point Mode \(page 47\)](#) for more information.


1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Display** in the side menu bar.
3. Click the **Display Control Method** drop-down list and select **Access Point**.

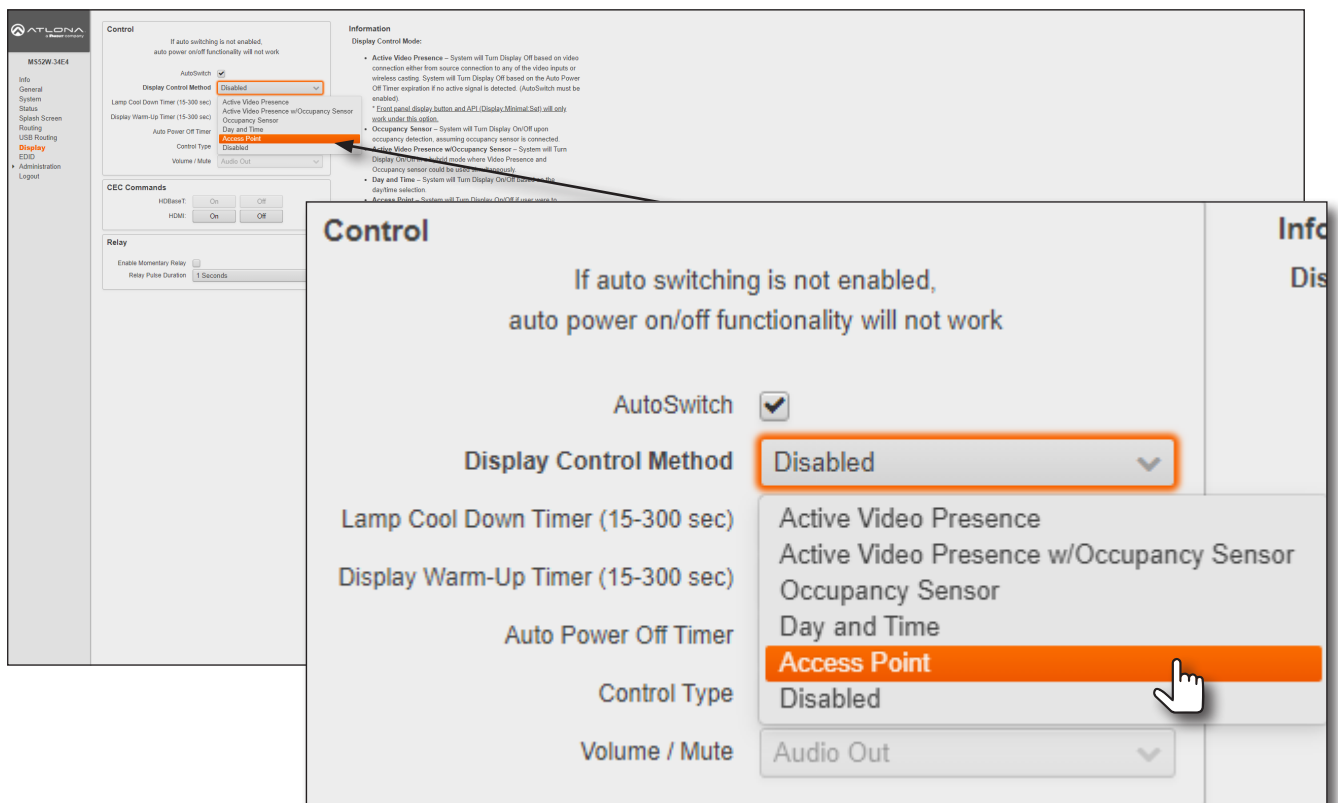

4. Setup is complete.

Changing the Password

1. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
2. Click **Administration > User Accounts** in the side menu bar.
3. Under the **User Accounts** window group, click the **Change** button.

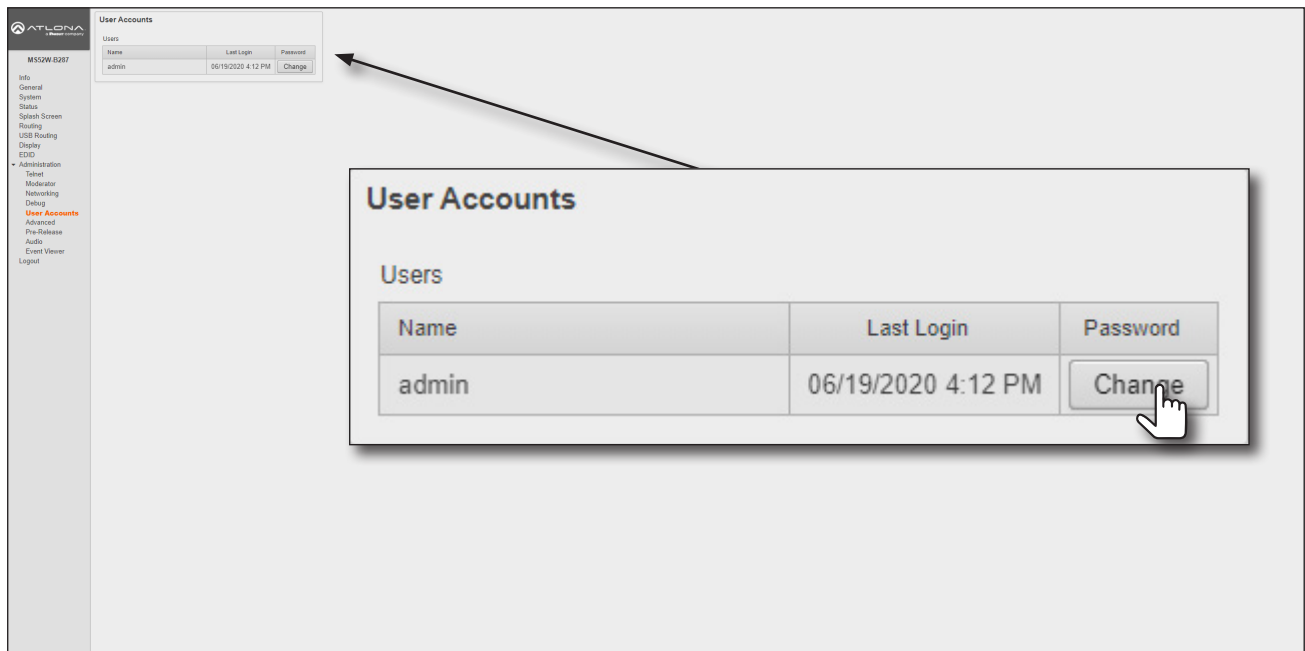

4. The **Change Password: admin** dialog box will be displayed. Enter the new password in the **Password** field. Make sure to delete all the asterisks (masks) in this field before entering the new password.
5. To confirm the password, enter the same password in the **Repeat Password** field. Make sure to delete all the asterisks (masks) in this field before entering the new password.
6. Click the **Save** button to commit changes.

Change Password: admin

Change the password for: admin

Password:

Repeat Password:


Configuration and Management Interfaces

Web Server

The AT-OME-MS52W includes a built-in web server. Atlona recommends that the web server be used to set up the AT-OME-MS52W, as it provides intuitive management of all features. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.

Login Register page

This page is displayed when the AT-OME-MS52W web server is launched for the first time.

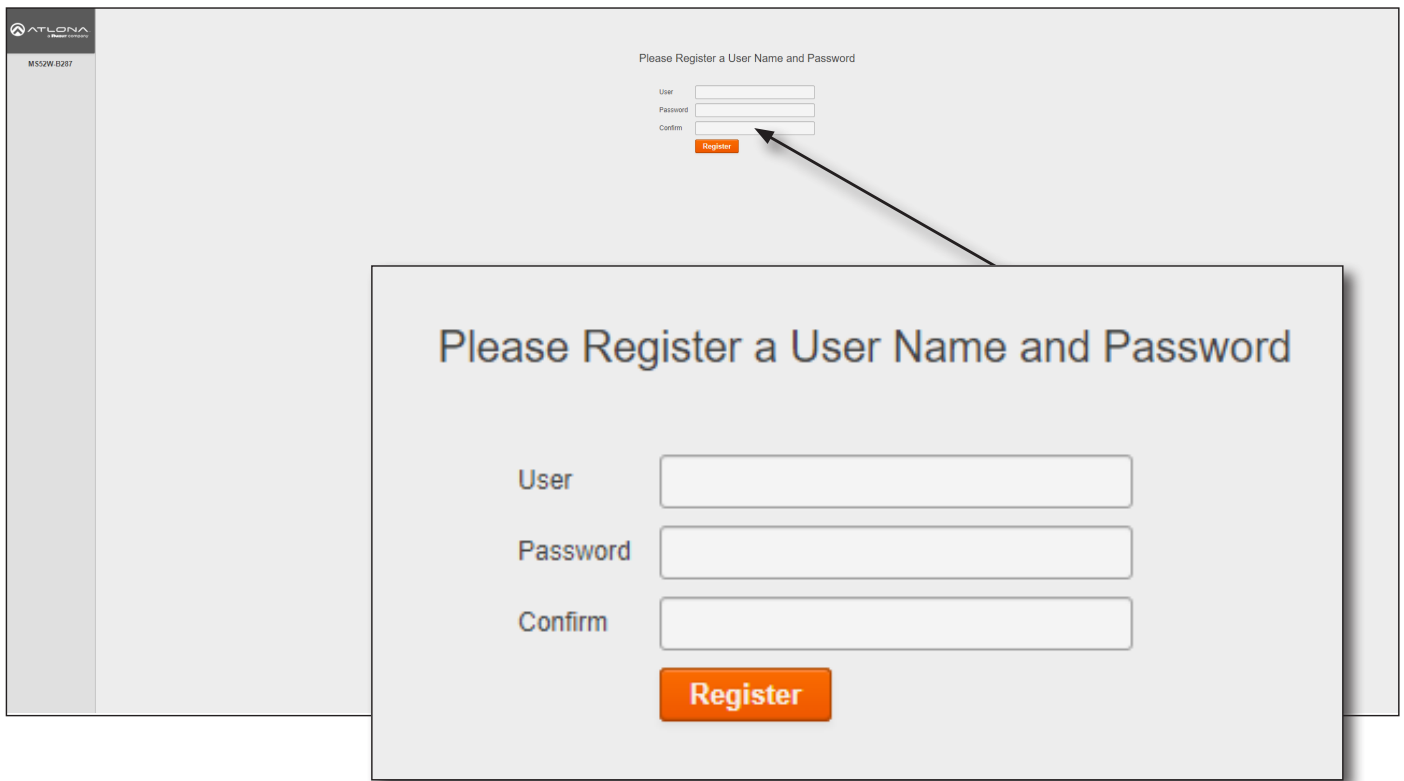

Please Register a User Name and Password

User

Password

Confirm

[Register](#)

Please Register a User Name and Password

User

Password

Confirm

[Register](#)

User

Enter the desired username in this field.

Password

Enter the desired password in this field.

Confirm

Re-enter the desired password in this field.


Register

Click this button to register the username and password with the AT-OME-MS52W.

Configuration and Management Interfaces

Login page

This page is displayed when the IP address of the AT-OME-MS52W is entered in the address bar of a web browser.

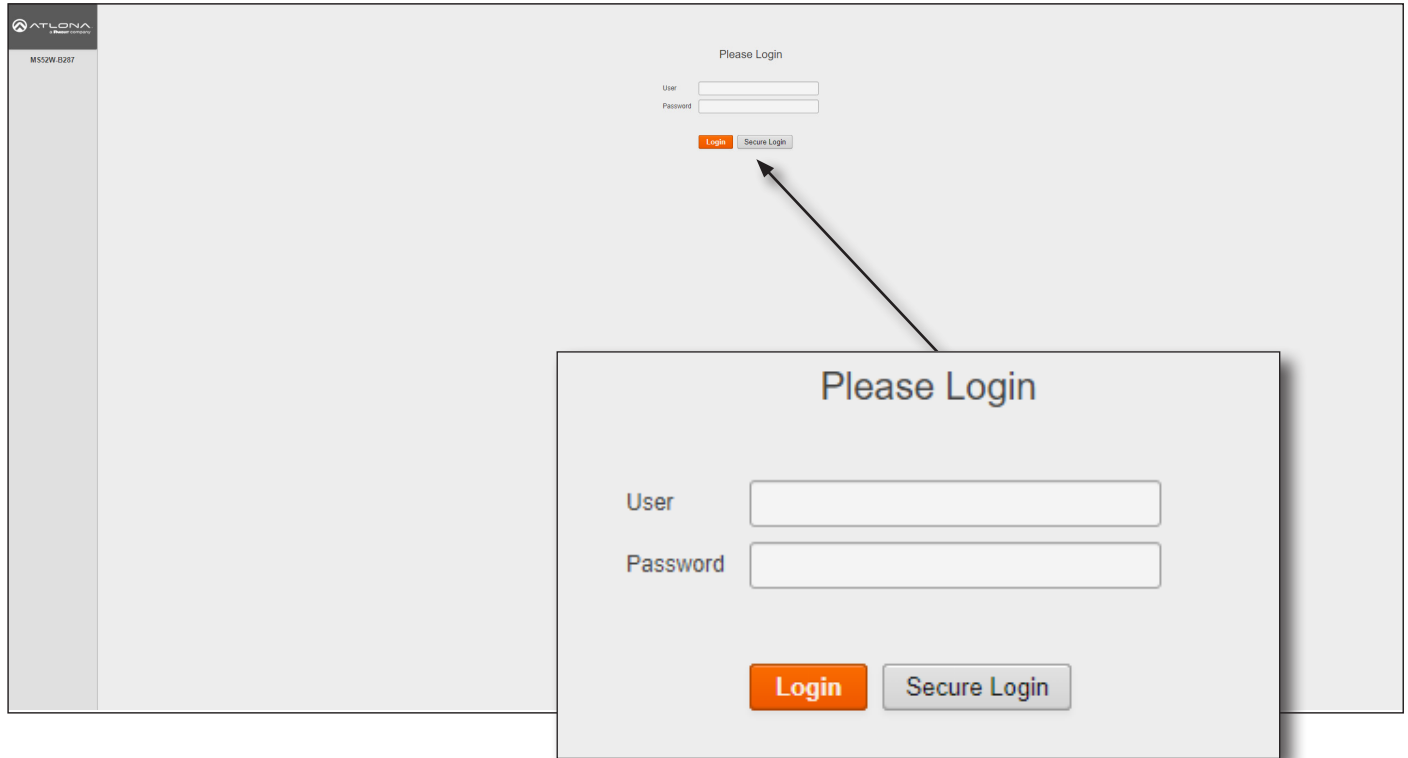

User

Enter the username in this field. The username is `admin`.

Password

Enter the password in this field. The default password is Atlona. It is recommended that the password be changed. Refer to [Changing the Password \(page 77\)](#) for more information.

Login

Click this button to login.


Secure Login

Click this button to login, if a secure connection is being used.

Configuration and Management Interfaces

Info page

After logging in, the Info page will be displayed. The **Info** page provides basic information about the receiver, including the model name, software version, input video timing, and the device being using as the transmitter.

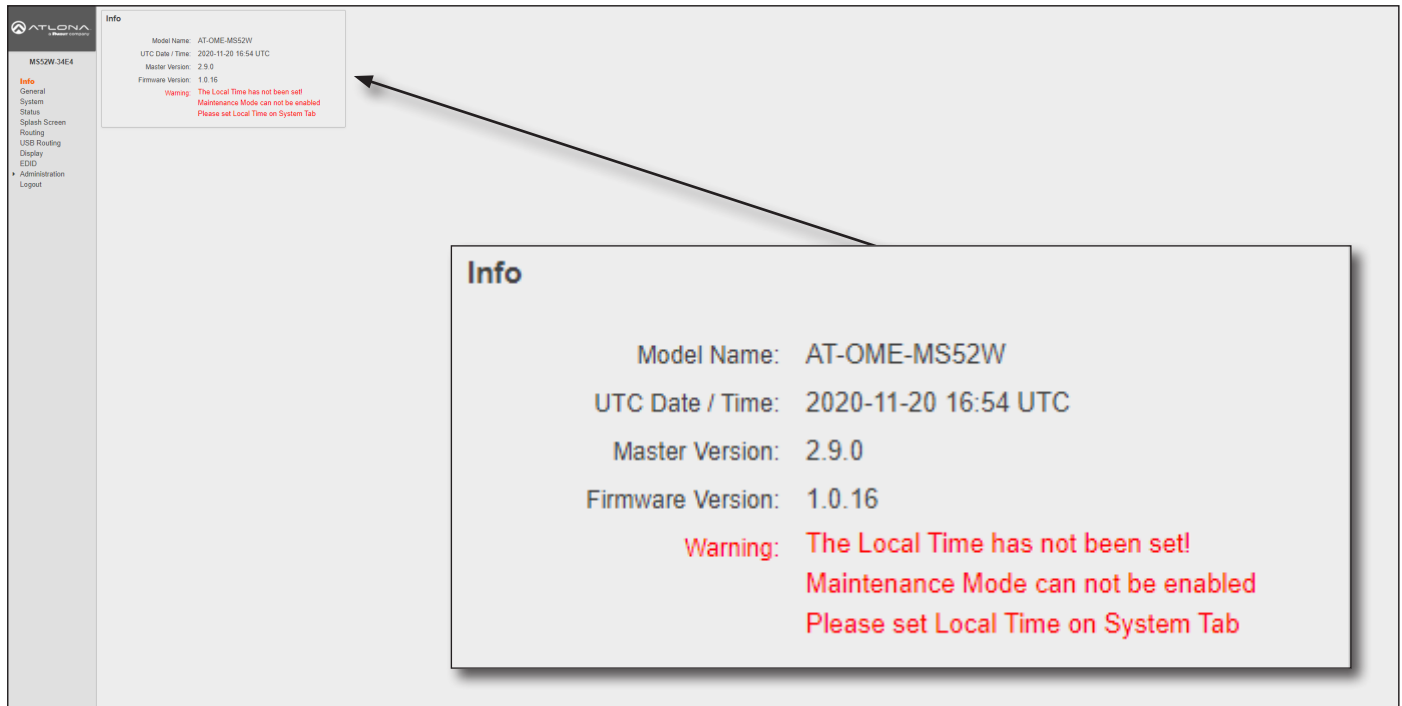

Info

Model Name

The model SKU of this product.

UTC Date / Time

The current time and date, in Universal Coordinated Time (UTC).

Master Version

The version of firmware.


Firmware Version

The version of firmware that the AT-OME-MS52W is running. Always make sure to check the AT-OME-MS52W product page, on the Atlona web site, for the latest version of firmware.



NOTE: When the local time has not been set, the warning message (shown above) will be displayed in the **Info** window group. The local time must be set before maintenance mode can be enabled. Refer to [Setting the System Date and Time \(page 24\)](#) for more information on setting the local time.

General page

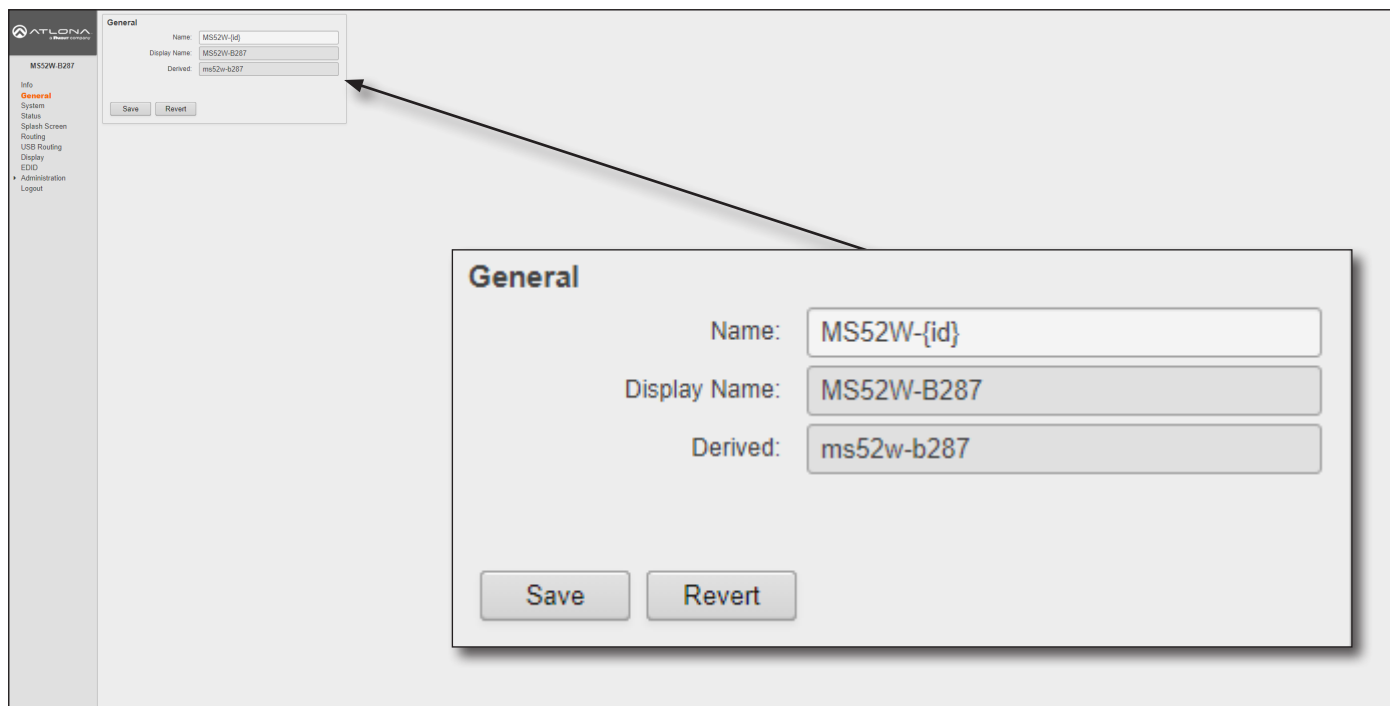

The screenshot shows the ATLONA configuration interface. On the left is a sidebar with a menu: Info, General (highlighted), System, Status, Splash Screen, Routing, USB Routing, Display, EDID, Administration, and Logout. The main area displays the 'General' configuration page. It contains three input fields: 'Name' with the value 'MS52W-{id}', 'Display Name' with 'MS52W-B287', and 'Derived' with 'ms52w-b287'. Below each field are 'Save' and 'Revert' buttons. A callout box on the right provides a larger view of the 'General' form, showing the same fields and buttons.

General

Name

This is the hostname of the unit. Enter the desired name of the AT-OME-MS52W in this text field. Include the {id} tag to use the last four digits of the hardware MAC address. Hostnames can contain alphabetic and numeric characters.



NOTE: The hardware MAC address differs from the MAC address of the unit, which is found on an adhesive label applied to the bottom of the unit.

Display Name

The name based on the information provided in the **Name** field. This name is used by the AT-OME-MS52W to identify it within the OSD.

Derived

This field will automatically be populated by the AT-OME-MS52W, based on the information provided in the **Name** field. This field provides a “computer-friendly” name used by the SSID. If special characters and/or spaces are included in the **Name** field, then these are removed when populating this field.

Save


Click this button to accept all changes.

Revert

Click this button to abort changes and reset the previous text in the **Name** field.

Configuration and Management Interfaces

System page

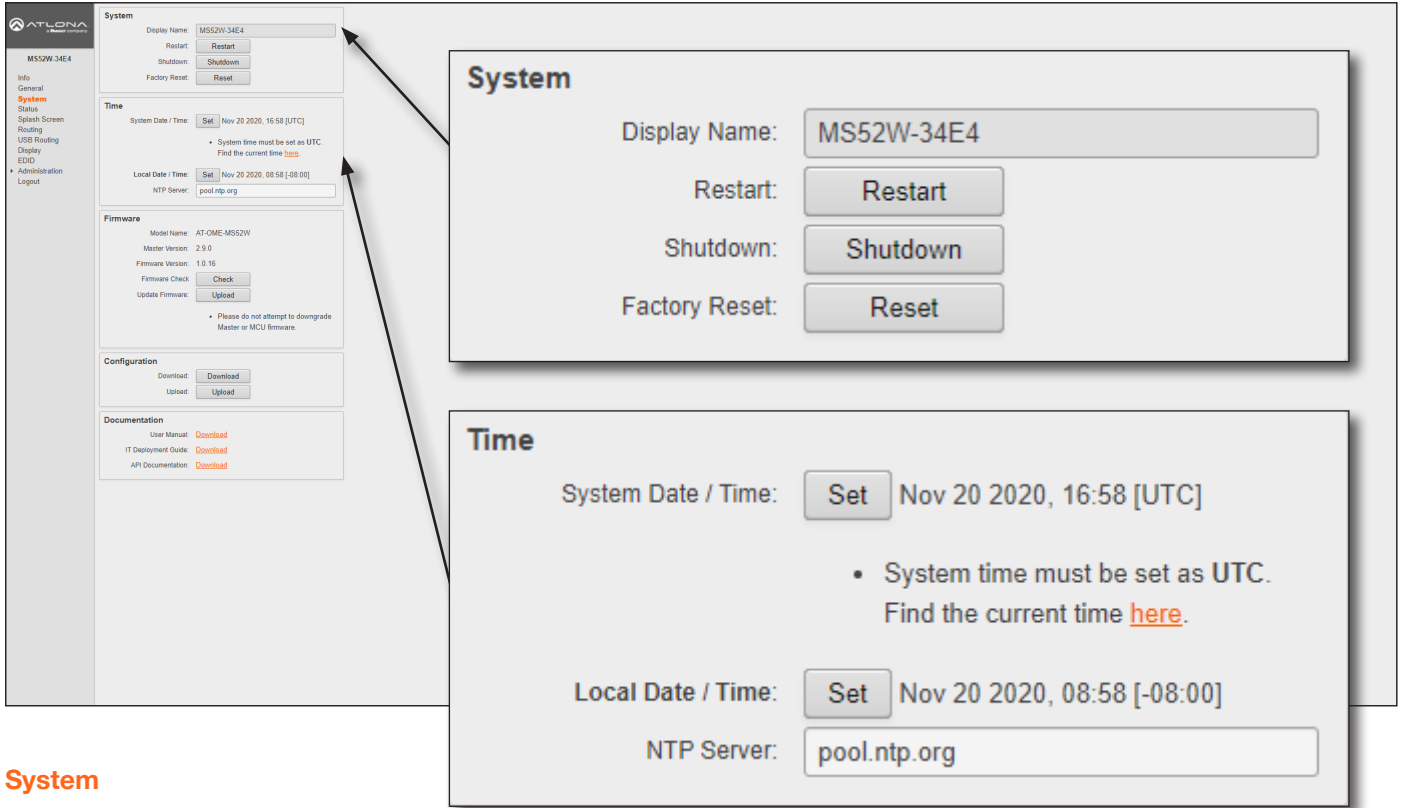

The screenshot shows the AT-OME-MS52W System page. The left sidebar contains a navigation menu with options: Info, General, System (highlighted), Status, Splash Screen, Routing, USB Routing, Display, EDID, Administration, and Logout. The main content area is divided into several sections: System, Time, Firmware, Configuration, and Documentation. Two callout boxes are present: one for the System section and one for the Time section.

System

Display Name: MS52W-34E4

Restart: Restart

Shutdown: Shutdown

Factory Reset: Reset

Time

System Date / Time: Set Nov 20 2020, 16:58 [UTC]

• System time must be set as UTC. Find the current time [here](#).

Local Date / Time: Set Nov 20 2020, 08:58 [-08:00]

NTP Server: pool.ntp.org

System

Display name

This field serves as the SSID, when connecting wirelessly to the AT-OME-MS52W. This name can be changed in the **Name** field of the **General** tab. Refer to [General page \(page 81\)](#) for more information.

Restart

Click this button to reboot the AT-OME-MS52W.

Shutdown

Click this button to shut down the AT-OME-MS52W. This should always be performed before disconnecting power from the unit.

Factory Reset

Click the **Reset** button to reset the AT-OME-MS52W to factory-default settings. Resetting to factory-default setting may take up to five minutes to complete. Refer to [Resetting to Factory-Default Settings \(page 20\)](#) for the list of default settings.

Time

Set (System Date / Time)

Click this button to set the month, day, and time (in UTC).


Set (Local Date / Time)

Click this button to set the local date and time using the NTP server specified in the **NTP Server** field.

NTP Server

Enter the desired NTP server in this field.

Configuration and Management Interfaces

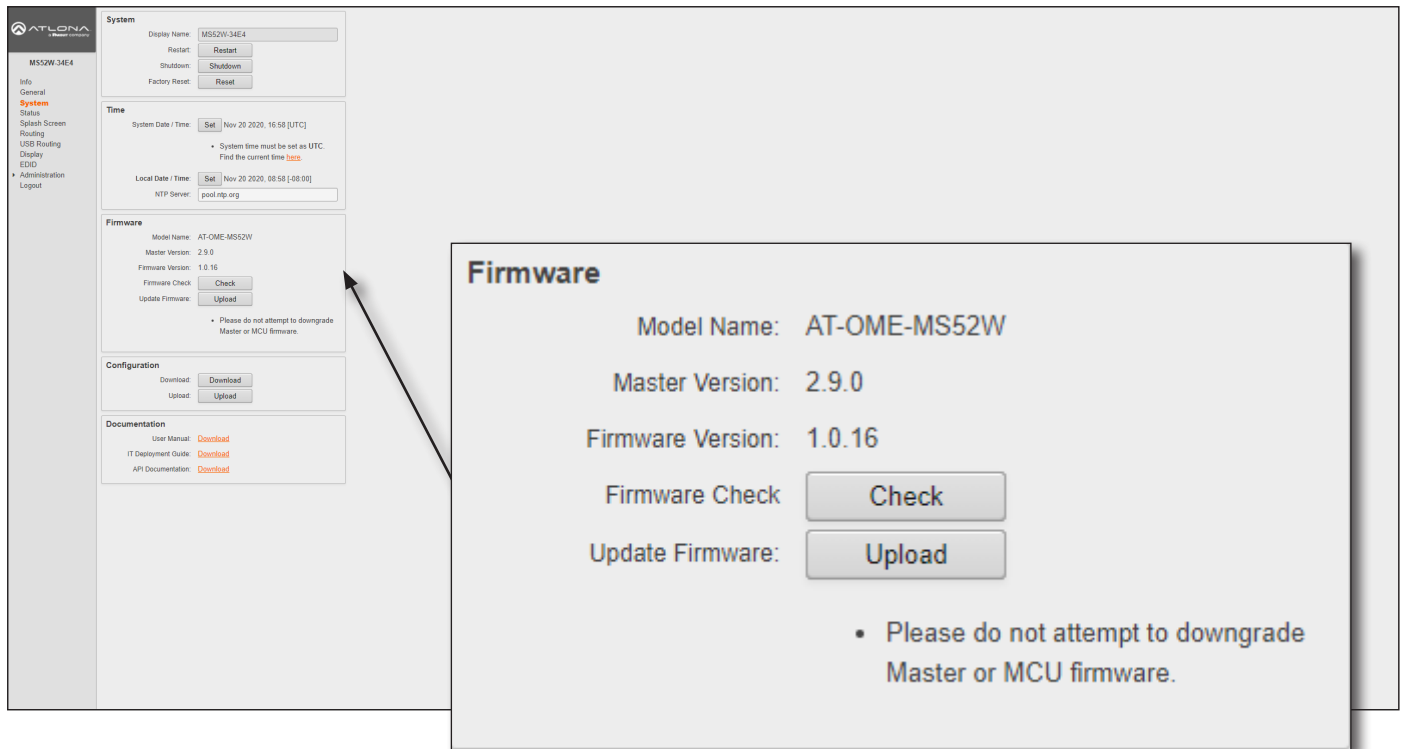

Firmware

Model Name

The SKU of the product: AT-OME-MS52W.

Master Version

The master version of firmware. Always make sure to check the AT-OME-MS52W product page, on the Atlona web site, for the latest version of firmware.

Download

Click this link to download the latest firmware. The most recent firmware version is listed.

Firmware Version

The version of (MCU) firmware that the AT-OME-MS52W is running. Always make sure to check the AT-OME-MS52W product page, on the Atlona web site, for the latest version of firmware.


Firmware Check

Click the **Check** button to check for the latest version of firmware. Each time the unit is rebooted, this feature is performed, automatically. The AT-OME-MS52W must be connected to the Internet to use this feature.

Update Firmware

Click the **Upload** button to upload the firmware file to the AT-OME-MS52W. Refer to [Updating the Firmware \(page 116\)](#) for more information.

Configuration and Management Interfaces

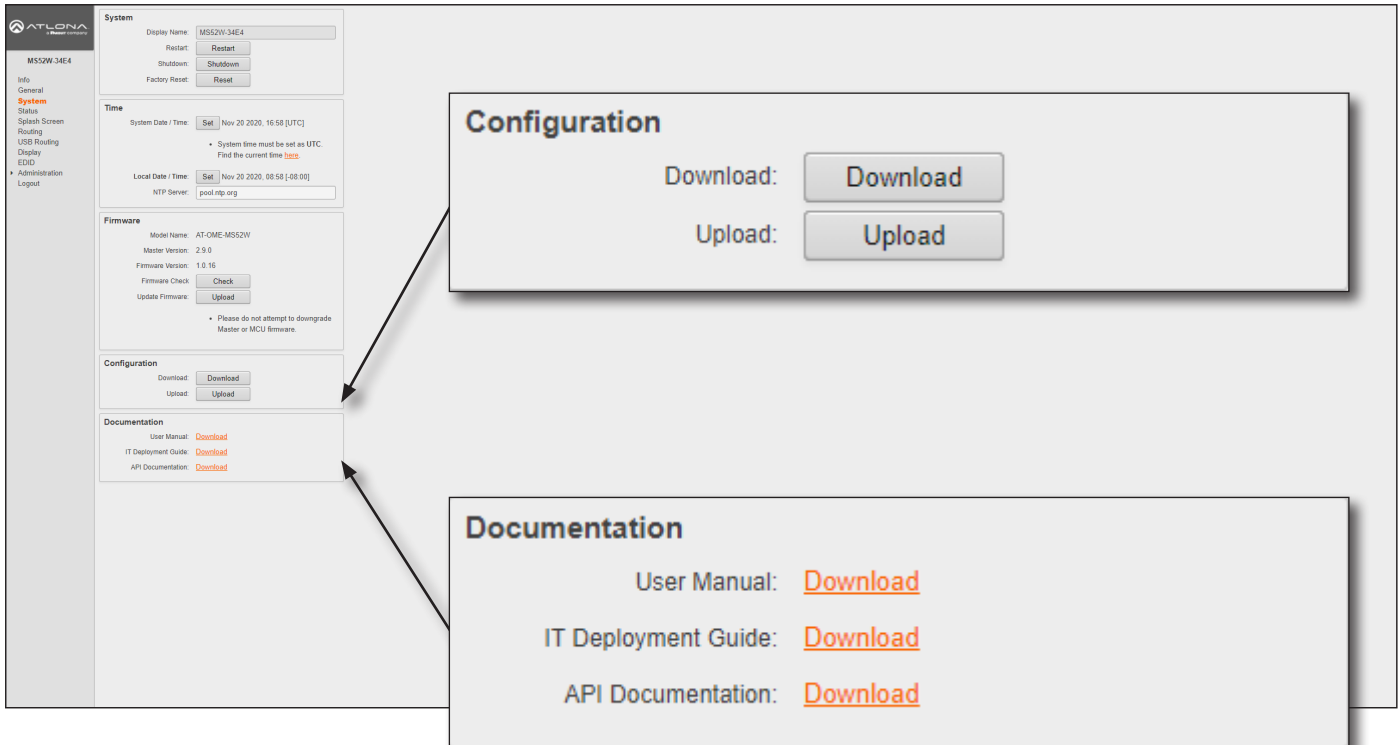

The screenshot shows the web interface for the AT-OME-MS52W device. The left sidebar contains a navigation menu with options: Info, General, **System**, Status, Splash Screen, Routing, USB Routing, Display, EDID, Administration, and Logout. The main content area is divided into several sections: System (Display Name: MS52W-34E4, Restart, Shutdown, Factory Reset, Reset), Time (System Date/Time: Nov 20 2020, 16:58 (UTC), Local Date/Time: Nov 20 2020, 08:58 (-08:00), NTP Server: pool.ntp.org), Firmware (Model Name: AT-OME-MS52W, Master Version: 2.9.0, Firmware Version: 1.0.16, Firmware Check, Update Firmware), Configuration (Download, Upload), and Documentation (User Manual, IT Deployment Guide, API Documentation). Two callout boxes are overlaid on the right side of the interface. The top callout box, titled 'Configuration', contains 'Download:' and 'Upload:' labels, each followed by a 'Download' or 'Upload' button. The bottom callout box, titled 'Documentation', contains 'User Manual:', 'IT Deployment Guide:', and 'API Documentation:' labels, each followed by a 'Download' link.

Configuration

Download

Click this button to download the current AT-OME-MS52W configuration to a .zip file. The default filename is config.zip. Within the config.zip is the configuration.zip file. Note that the information within the configuration.zip file cannot be extracted as it is only readable by the AT-OME-MS52W.

Upload

Click this button to upload the configuration file to the AT-OME-MS52W. Both the **Download** and **Upload** button are useful to save and load different configurations and/or to provide a backup, in the unlikely event of a system failure.

Documentation

User Manual

Click the **Download** link to view the latest version of the User Manual.

IT Deployment Guide


Click the **Download** link to view the IT Deployment Guide.

API Documentation

Click the **Download** link to view the latest API documentation.

Configuration and Management Interfaces

Status page

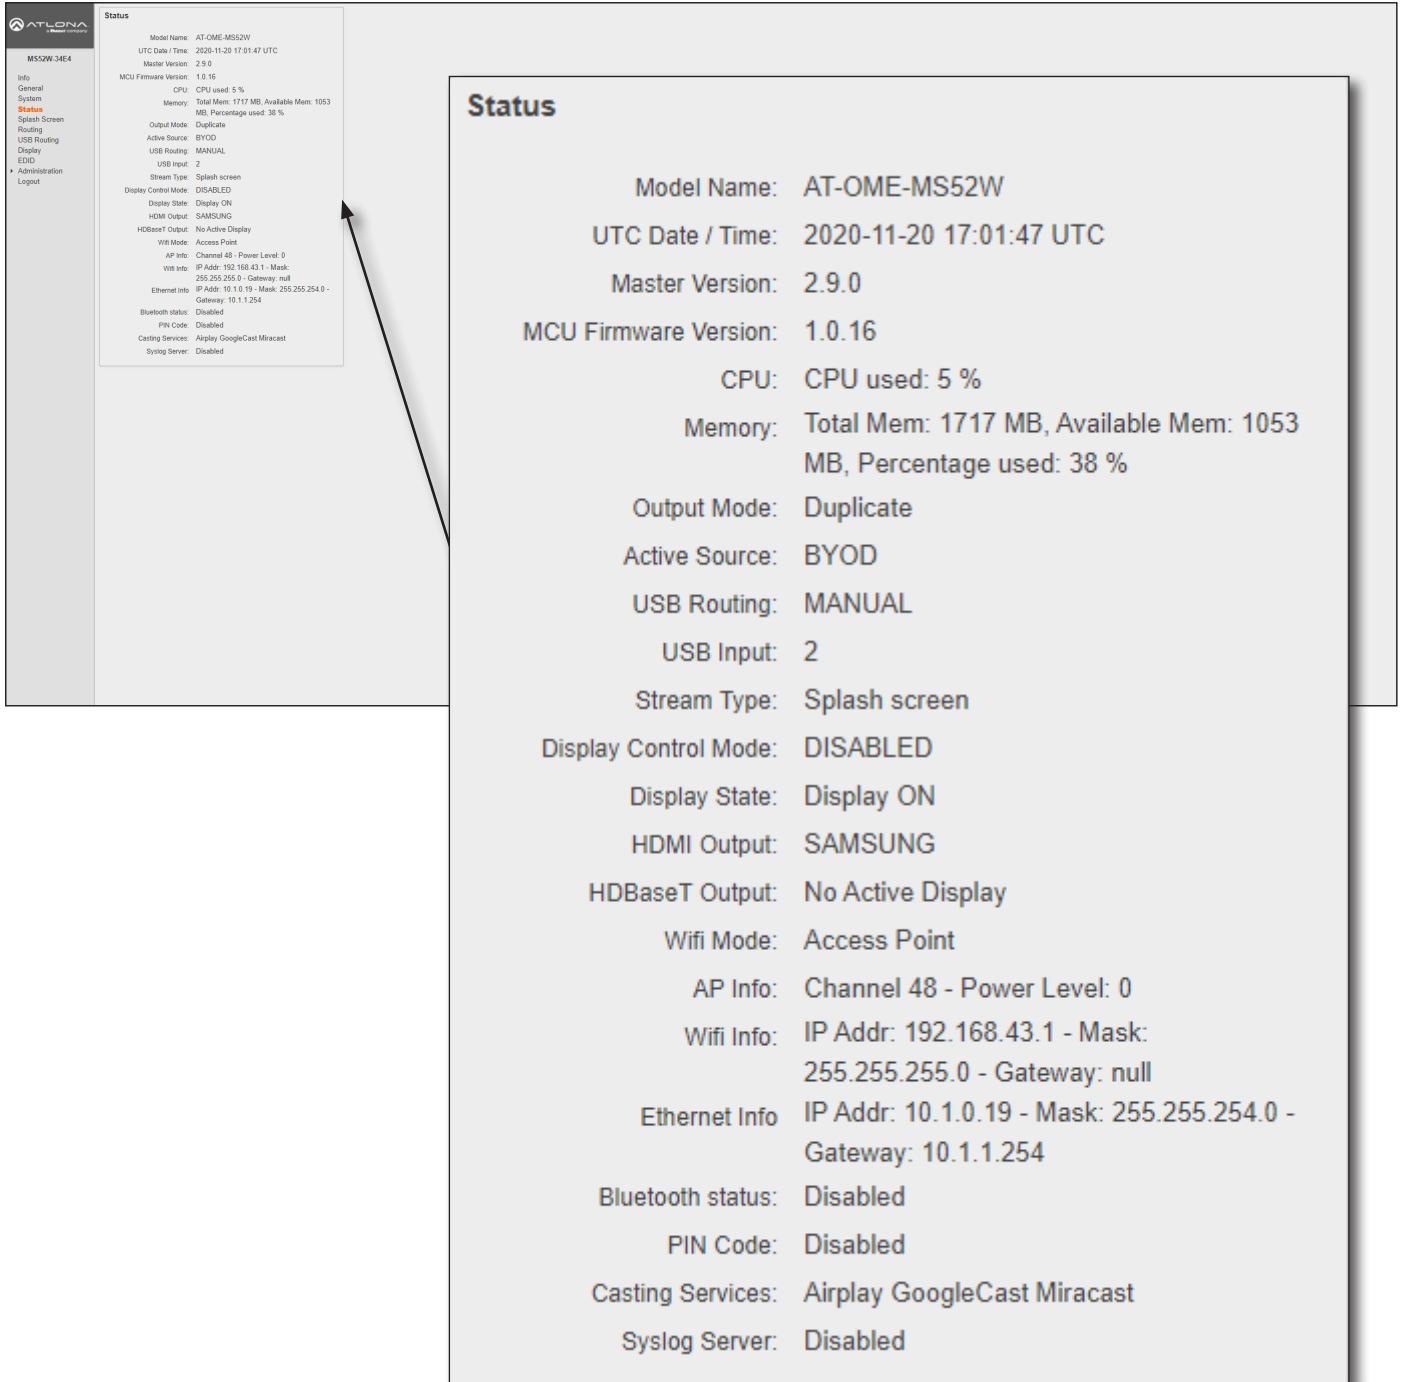

Status

Model Name: AT-OME-MS52W
 UTC Date / Time: 2020-11-20 17:01:47 UTC
 Master Version: 2.9.0
 MCU Firmware Version: 1.0.16

CPU: CPU used: 5 %
 Memory: Total Mem: 1717 MB, Available Mem: 1053 MB, Percentage used: 38 %

Output Mode: Duplicate
 Active Source: BYOD
 USB Routing: MANUAL
 USB Input: 2

Stream Type: Splash screen
 Display Control Mode: DISABLED
 Display State: Display ON
 HDMI Output: SAMSUNG
 HDBaseT Output: No Active Display

Wifi Mode: Access Point
 AP Info: Channel 48 - Power Level: 0
 Wifi Info: IP Addr: 192.168.43.1 - Mask: 255.255.255.0 - Gateway: null
 Ethernet Info: IP Addr: 10.1.0.19 - Mask: 255.255.254.0 - Gateway: 10.1.1.254

Bluetooth status: Disabled
 PIN Code: Disabled
 Casting Services: Airplay GoogleCast Miracast
 Syslog Server: Disabled


Status

This page provides a information about the current state of the AT-OME-MS52W, such as IP information, memory usage, casting devices, active sources, date/time, and various other settings.

Configuration and Management Interfaces

Splash Screen page

This page provides control over the appearance of the splash screen. Refer to [The Splash Screen \(page 36\)](#) for more information on using each of the settings under the **Splash Screen** and **Images** window groups.

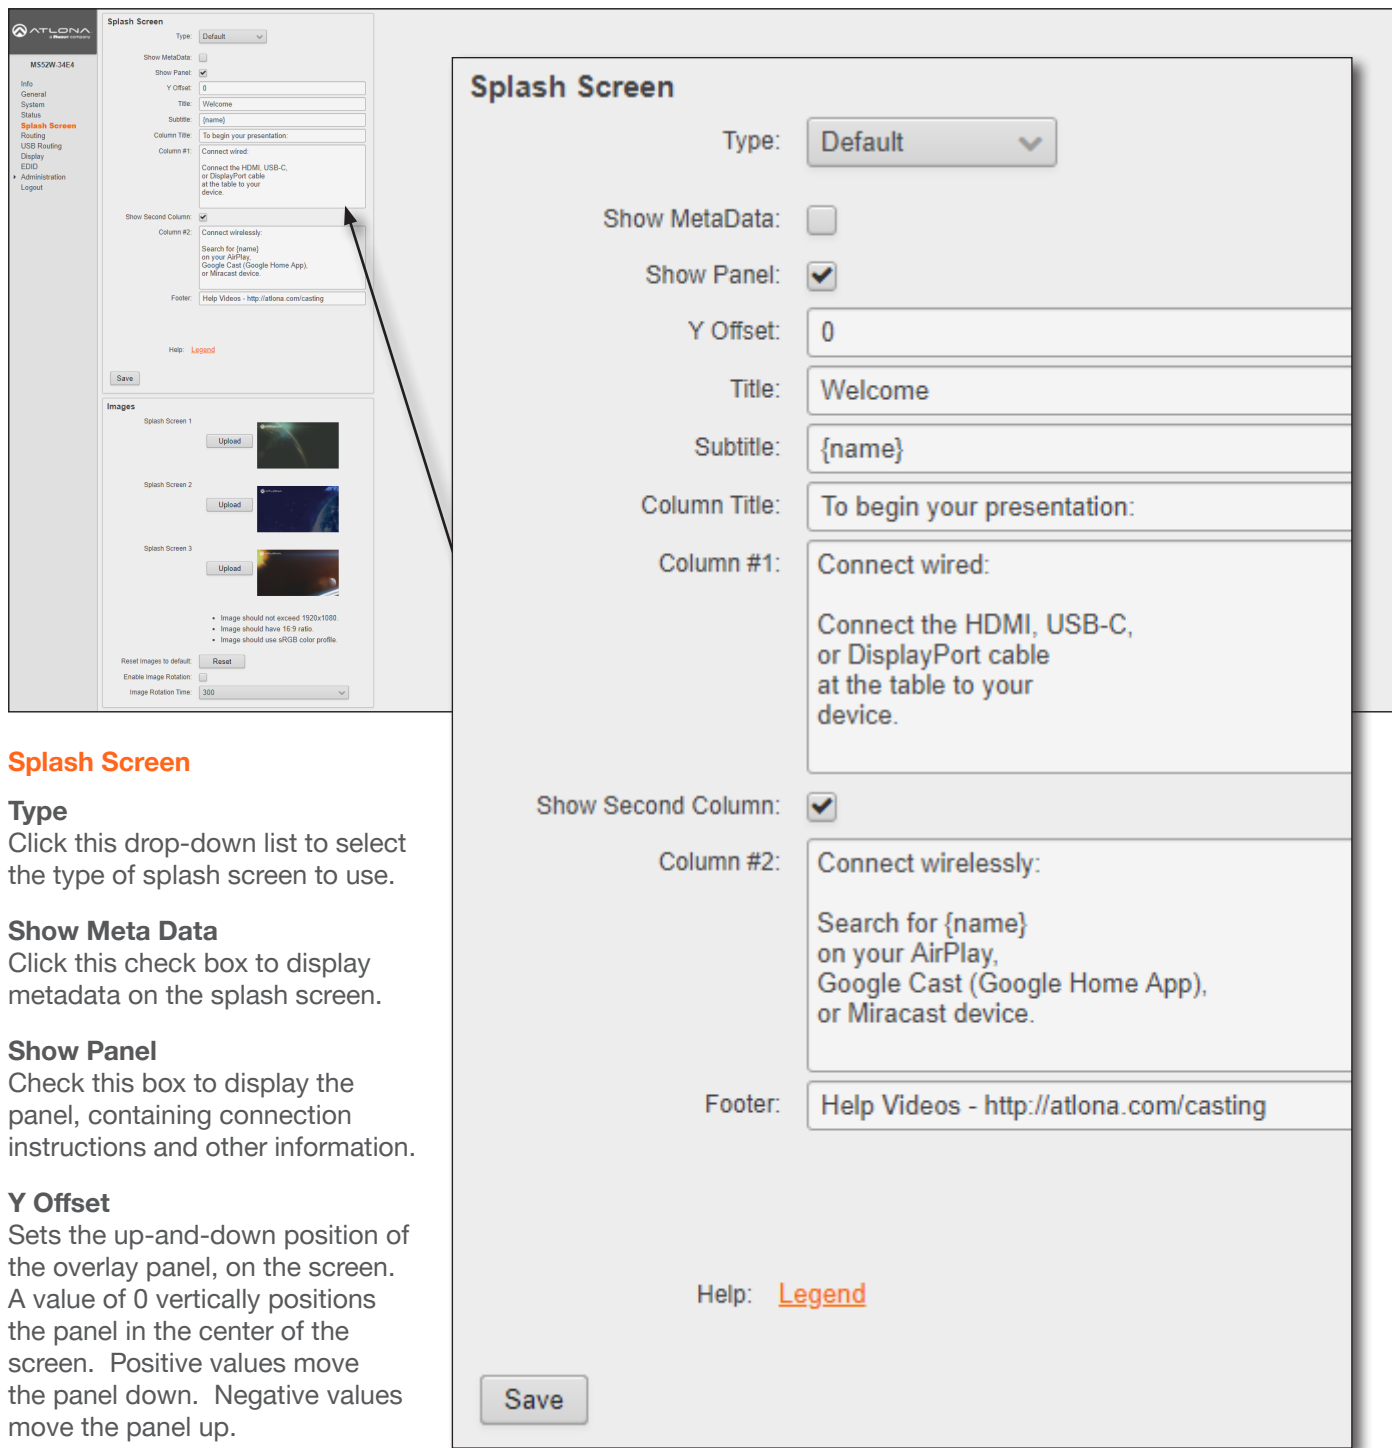

Splash Screen

Type: **Default**

Show MetaData: ☐

Show Panel: ☒

Y Offset: **0**

Title: **Welcome**

Subtitle: **{name}**

Column Title: **To begin your presentation:**

Column #1: **Connect wired:**

Connect the HDMI, USB-C, or DisplayPort cable at the table to your device.

Show Second Column: ☒

Column #2: **Connect wirelessly:**

Search for {name} on your AirPlay, Google Cast (Google Home App), or Miracast device.

Footer: **Help Videos - <http://atlona.com/casting>**

Help: [Legend](#)

Save

Images

Splash Screen 1: **Upload**

Splash Screen 2: **Upload**

Splash Screen 3: **Upload**

- Image should not exceed 1920x1080.
- Image should have 16:9 ratio.
- Image should use sRGB color profile.

Reset Images to default: **Reset**

Enable Image Rotation: ☐

Image Rotation Time: **300**

Splash Screen

Type

Click this drop-down list to select the type of splash screen to use.

Show Meta Data

Click this check box to display metadata on the splash screen.

Show Panel

Check this box to display the panel, containing connection instructions and other information.

Y Offset

Sets the up-and-down position of the overlay panel, on the screen. A value of 0 vertically positions the panel in the center of the screen. Positive values move the panel down. Negative values move the panel up.

Title

The title of the overlay panel. The default value is "Welcome".

Subtitle

The text directly under the text in the **Title** field. The default text contains the name of the unit.

Configuration and Management Interfaces

Column Title

The title text for the centered text, above both instruction columns. The default text is "To begin your presentation".

Column #1

The text positioned in the left column. The default text is "Connect wired: Connect the HDMI, USB-C, or DisplayPort cable at the table to your device".

Show Second Column

Check this box to display the second (right-hand) column. Uncheck this box to hide the text in this column.

Column #2

The text positioned in the right-hand column. The default text is "Connect wirelessly: Connect the Wi-Fi network", entercode, and enable AirPlay, Google Cast™, or Miracast".

Footer

By default, this field provides a link to how casting works on different operating systems (www.atlona.com/casting). This field can be modified to contain a different URL, if desired. This link will be displayed on the default splash screen.

Legend

Click this link to display a list of available tags that can be used in any of the text fields. Refer to the illustration above.

Save

Click this button to commit all changes on this page.

Splash Screen

Type: Default

Show MetaData: ☐

Show Panel: ☒

Y Offset:

Title:

Subtitle:

Column Title:

Column #1:

Connect wired:

Connect the HDMI, USB-C,
or DisplayPort cable
at the table to your
device.

Show Second Column: ☒

Column #2:

Connect wirelessly:

Search for {name}
on your AirPlay,
Google Cast (Google Home App),
or Miracast device.

Footer: http://atlona.com/casting"/>

Help: [Legend](#)

Save

Configuration and Management Interfaces

Splash Screen

Type: Default

Show MetaData: ☐

Show Panel: ☒

Y Offset:

Title:

Subtitle:

Column Title:

Column #1:

Column #2: ☒ Connect wirelessly:
 Search for [name] on your AirPlay, Google Cast (Google Home App), or Miracast device.

Footer:

Help: [Legend](#)

Save

Images

Splash Screen 1

Splash Screen 2

Splash Screen 3

- Image should not exceed 1920x1080.
- Image should have 16:9 ratio.
- Image should use sRGB color profile.

Reset Images to default:

Enable Image Rotation: ☐


Image Rotation Time:

Images

Splash Screen 1



Splash Screen 2

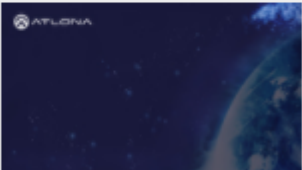

Splash Screen 3



- Image should not exceed 1920x1080.
- Image should have 16:9 ratio.
- Image should use sRGB color profile.

Reset Images to default:

Enable Image Rotation: ☐

Image Rotation Time:

Images

Upload

Click these buttons to replace each factory-default image with a custom image.

Reset Splash Images

Click the **Reset** button to set the splash screen images to the factory-default images.

Enable Image Rotation

Click this check box to instruct the AT-OME-MS52W to cycle through the splash screen images.


Image Rotation Time

Click this drop-down list to select the image rotation interval.

Configuration and Management Interfaces

Routing page

This page provides control over the appearance of the splash screen. Refer to [The Splash Screen \(page 36\)](#) for more information on using each of the settings under the **Splash Screen** and **Images** window groups.

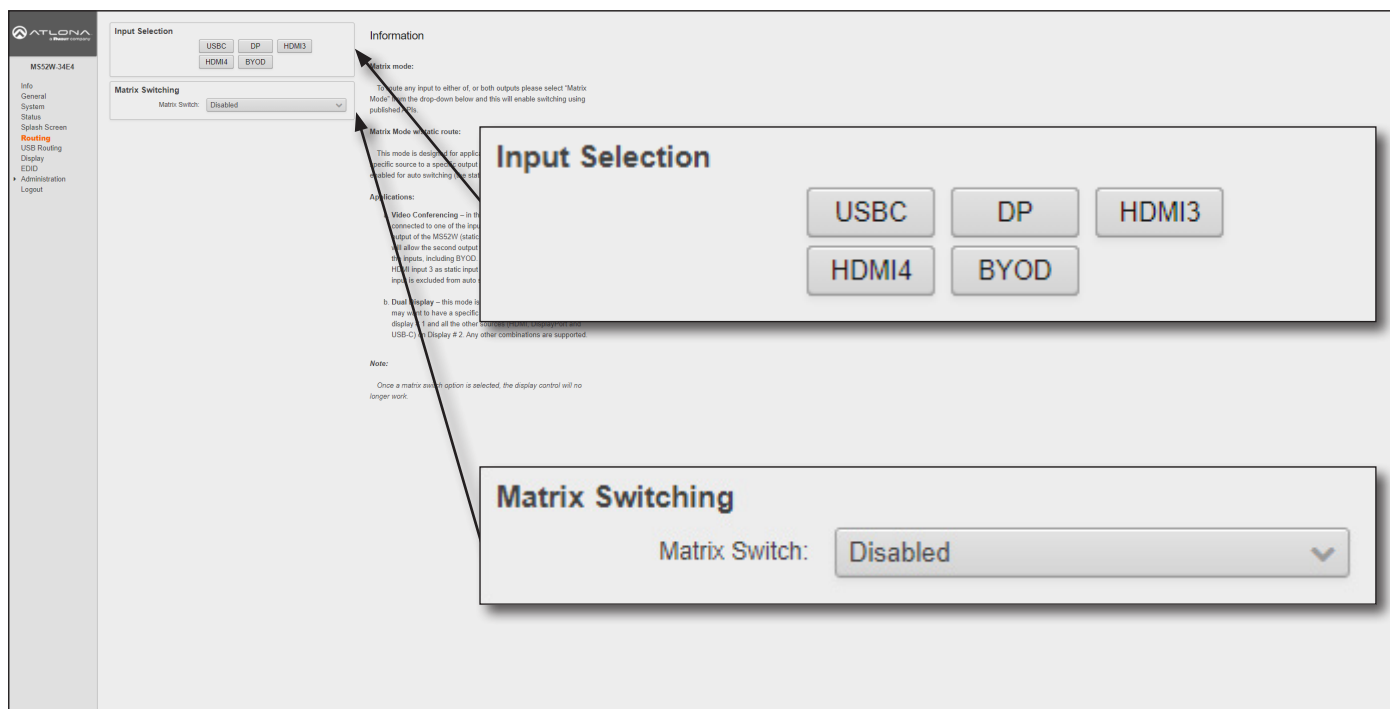

Input Selection

USBC, DP, HDMI3, HDMI4, BYOD

Click the desired button to select the active input.

Matrix Switching


Matrix Switch

Click this drop-down list to select the desired matrix mode. Refer to [Switching Modes \(page 27\)](#) for more information.

Modes	Description
Disabled	Matrix mode is disabled (default setting).
Matrix Mode	Allows the AT-OME-MS52W to independently switch between any input and any output.
Matrix Mode w/ Static Route	Use this mode when integrating the AT-OME-MS52W with a video conference system.

Configuration and Management Interfaces

USB Routing page

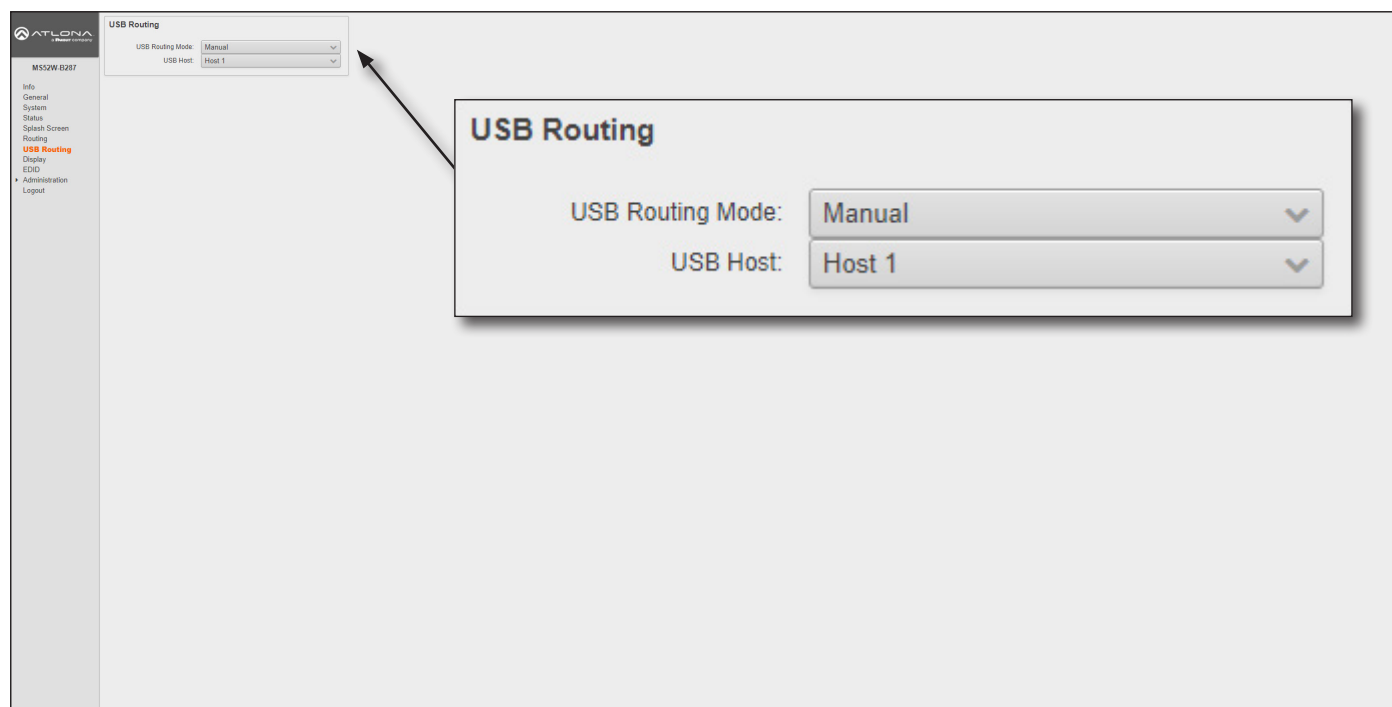

USB Routing

Refer to [USB Modes \(page 32\)](#) for more information.


USB Routing Mode

Click this drop-down list to select the USB routing mode.

Modes	Description
Manual	This is the default mode and provides manual selection of the USB host port to be used, when switching video inputs.
Follow USB	In this mode, the AT-OME-MS52W will detect which USB ports are connected to a host device. If all USB host ports are connected to host devices, then the AT-OME-MS52W will set the last-connected USB host device as the “active” USB host. Use the procedure below to enable Follow USB mode.
Follow Video	In this mode, a video input can be paired with USB 1 , USB 2 , or a remote USB host port on a receiver. When a video input switch event occurs, the assigned USB host port will follow. Note in this mode that the USB-C port is not considered a <i>host</i> (data) port.

Configuration and Management Interfaces

Display page

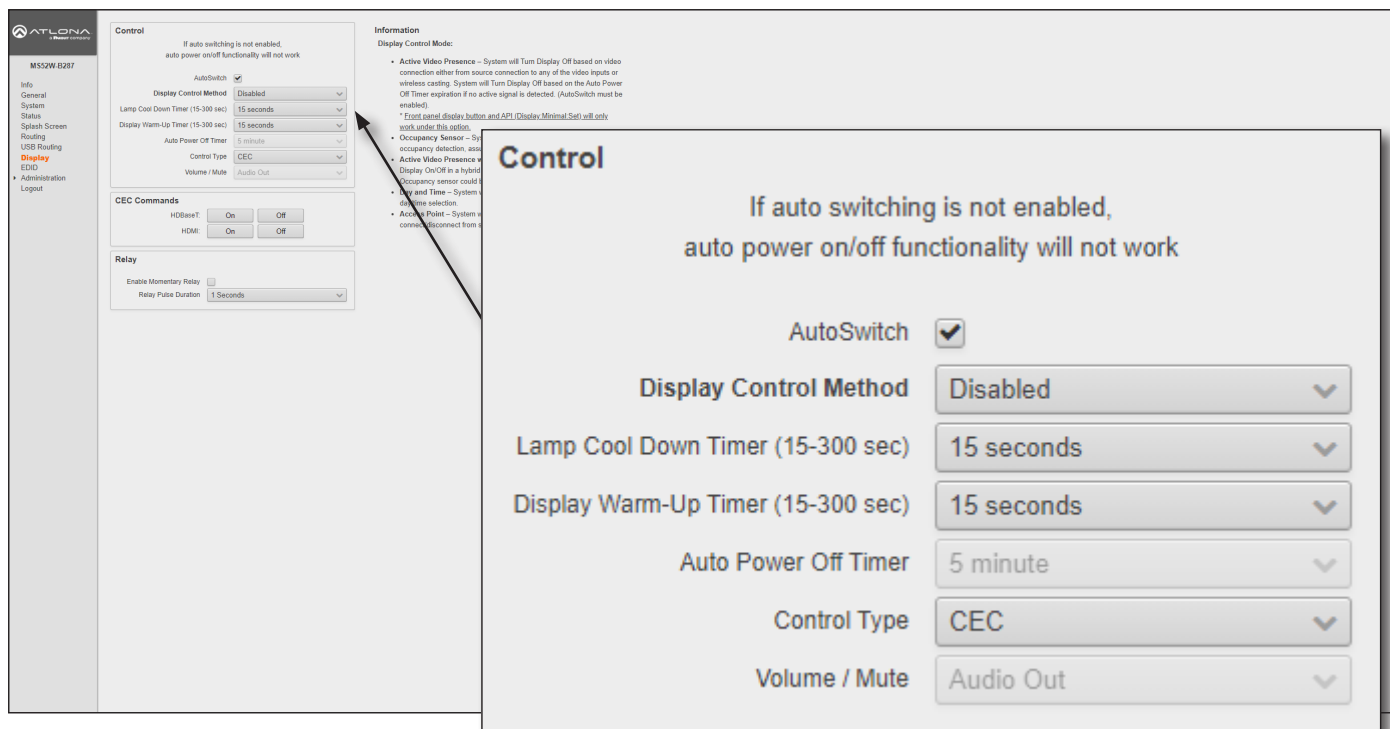

Control

AutoSwitch

Click this box to enable or disable auto-switching. When this box is checked, the AT-OME-MS52W will automatically switch inputs when the new device is connected. To disable auto-switching, uncheck this box.


Display Control Method

Click this drop-down list to select the method of display control. The following options are available.

Modes	Description
Active Video Presence*	The AT-OME-MS52W will power-off the display if no active source is detected on the input. Conversely, the display will power-on when an active source is detected. This applies to either physical source connections or casting. The Auto Power Off Timer must expire before the power-off command is sent.
Active Video Presence w/Occupancy Sensor*	Similar to the Active Video Presence mode, except that an occupancy sensor can also be used with Active Video Presence mode to determine when the power-off or power-on command is sent.
Occupancy Sensor	The AT-OME-MS52W will power-on/power-off the display based on the state of the occupancy sensor. The occupancy sensor must be wired to the AT-OME-MS52W.
Day and Time	The AT-OME-MS52W will power-on/power-off the display based on the assigned schedule.
Access Point	Display will power-on/power-off based on the presence of a connection/disconnection from the AT-OME-MS52W Access Point.
Disabled	No display control

*AutoSwitch must be enabled to use these control methods.

Configuration and Management Interfaces

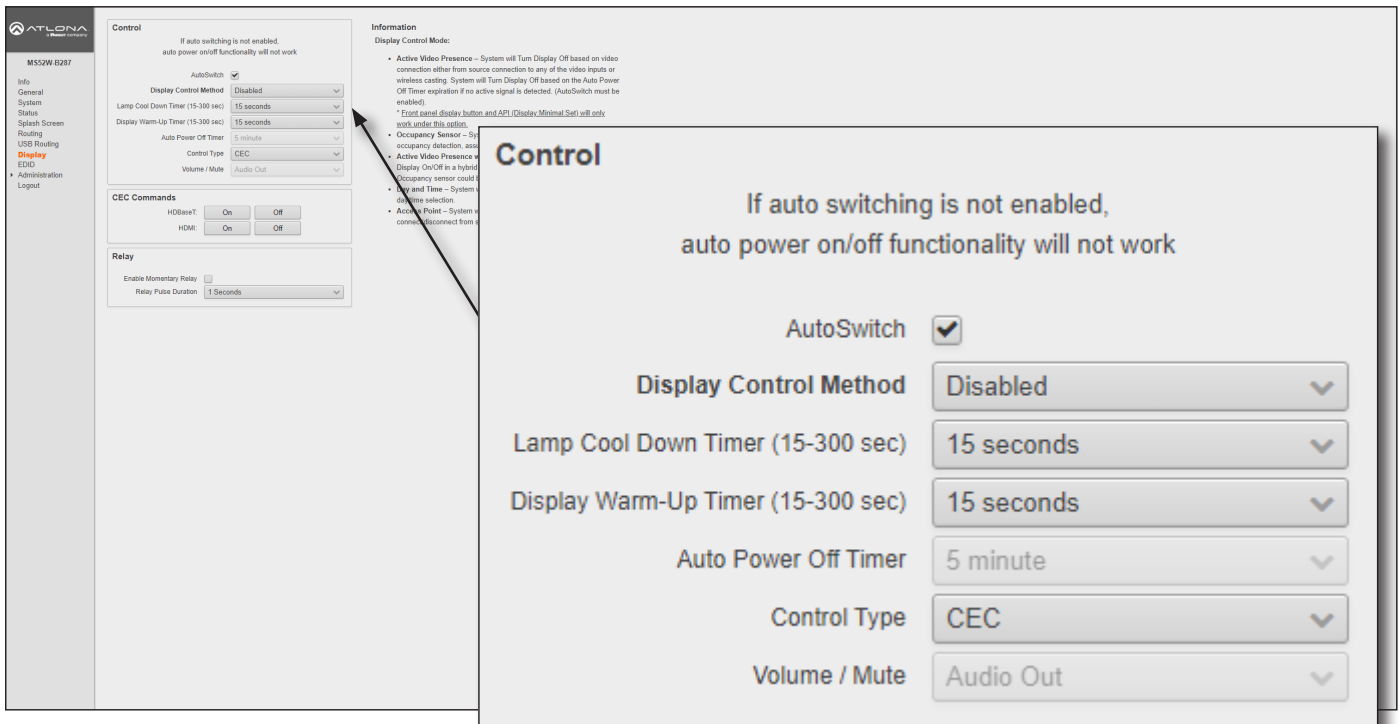

Lamp cool down timer

Sets the projector lamp cool-down timer, in seconds. This value specifies the time interval that must elapse, after the display control “off” command is sent, before the display “power on” command can be sent. This feature is used to prevent the projector from missing a “power on” command while the lamps are cooling. A minimum of 45 seconds is recommended for projectors. Available values are from 15 to 300 seconds (5 minutes). The default setting is 15 seconds.

Display Warm-Up Timer

Sets the projector lamp warm-up timer, in seconds. During the warm-up interval, the AT-OME-MS52W will not start the auto power-off timer. This value specifies the time interval that must elapse, after the display control “on” command is sent, before the display “power off” command can be sent. This feature is used to prevent a “power off” command from being sent while the lamps are warming up. A minimum of 45 seconds is recommended for projectors. Available values are 15 to 300 seconds (5 minutes). The default value is 15 seconds.

Auto power off timer

Sets the time interval before the command to power-off the display is sent, when an A/V signal is no longer present. The default value is 5 minutes. Available values are 15 seconds to 8 hours.


Control Type

Sets the control protocol for the connected display. Click this drop-down to select the control type. Available settings are **CEC**, **IP**, and **RS-232**. By default, CEC is selected for control of the display. IP and RS-232 can also be selected. When IP or RS-232 are selected, more fields are available.

Volume / Mute

This option is only available when **Control Type** is set to **RS-232** or **IP**.

Configuration and Management Interfaces

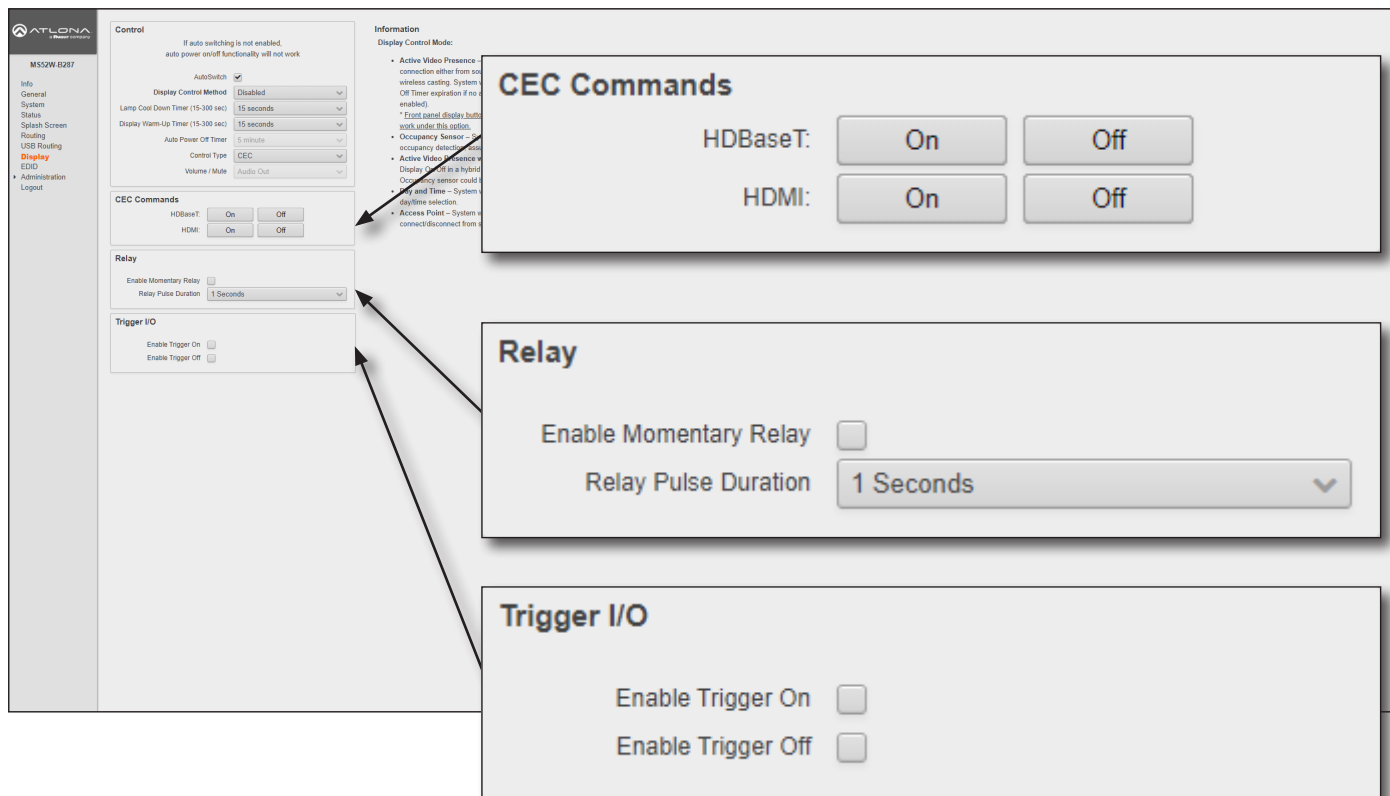

CEC Commands

Click these buttons to test CEC functionality over HDMI and HDBaseT. Click the **On** button to send the power-on command to the display device. Click the **Off** button to send the power-off command to the display device.

Relay

Enable Momentary Relay

When enabled, the relay is set to momentary. The default setting is disabled (latch). Use a 48 V DC relay with no more than 1 A current draw. This feature is disabled, by default. Refer to [Relay \(page 13\)](#) for wiring information.

Relay Pulse Duration

Click this drop-down list to select the desired pulse duration for the relay. Some devices may require different time intervals, to recognize a state change. Range: 1 to 10 seconds.

Trigger I/O

This section defines how the **TRIGGER** port will respond to varying voltage levels when, for example, used with an occupancy sensor. Either or both of the following conditions can be enabled or disabled.


Enable Trigger On

Check this box to power-on the system when the occupancy sensor detects a presence in the room. If the **Enable Trigger Off** is not checked (enabled), then the system power will remain on when the room is unoccupied.

Enable Trigger Off

Check this box to power-off the system when the occupancy sensor detects no presence in the room.

Configuration and Management Interfaces

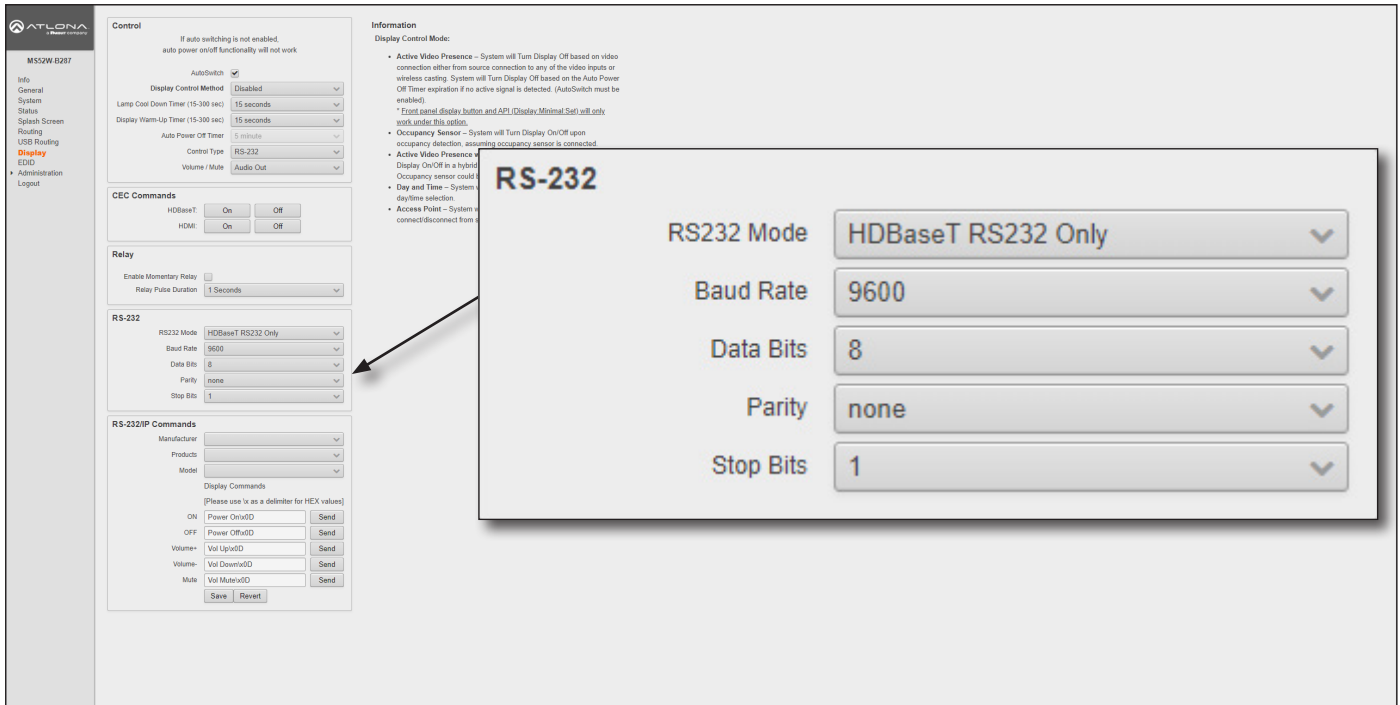

RS-232

This section is only available when the **Control Type** is set to **RS-232**.

RS-232 Mode

Click this drop-down list to select the RS-232 mode.


Setting	Description
HDBaseT RS232 Only	Assigns settings for RS-232 settings over HDBaseT OUT . RS-232 commands will only be transmitted over the HDBaseT OUT port.
Local RS232 Only	Assigns settings for RS-232 port for controlling the display over the local RS-232 port.
Both	Both HDBaseT OUT and the RS-232 port are used. Note that when using both ports, the RS-232 settings must be identical.

Baud Rate, Data Bits, Parity, and Stop Bits

The RS-232 settings for the selected RS-232 mode.

Setting	Description
Baud rate	Sets the baud rate. The following options are available: 9600, 14400, 19200, 38400, 57600, 115200.
Data bit	Sets the number of data bits used to represent each character of data. The following options are available: 7 or 8.
Parity	Sets the parity bit, which can be included with each character to detect errors during the transmission of data. The following options are available: None, Odd, or Even.
Stop bit	Sets the stop bit. Stop bits are sent at the end of each character, allowing the client to detect the end of a character stream. The following options are available: 1 or 2.

Configuration and Management Interfaces

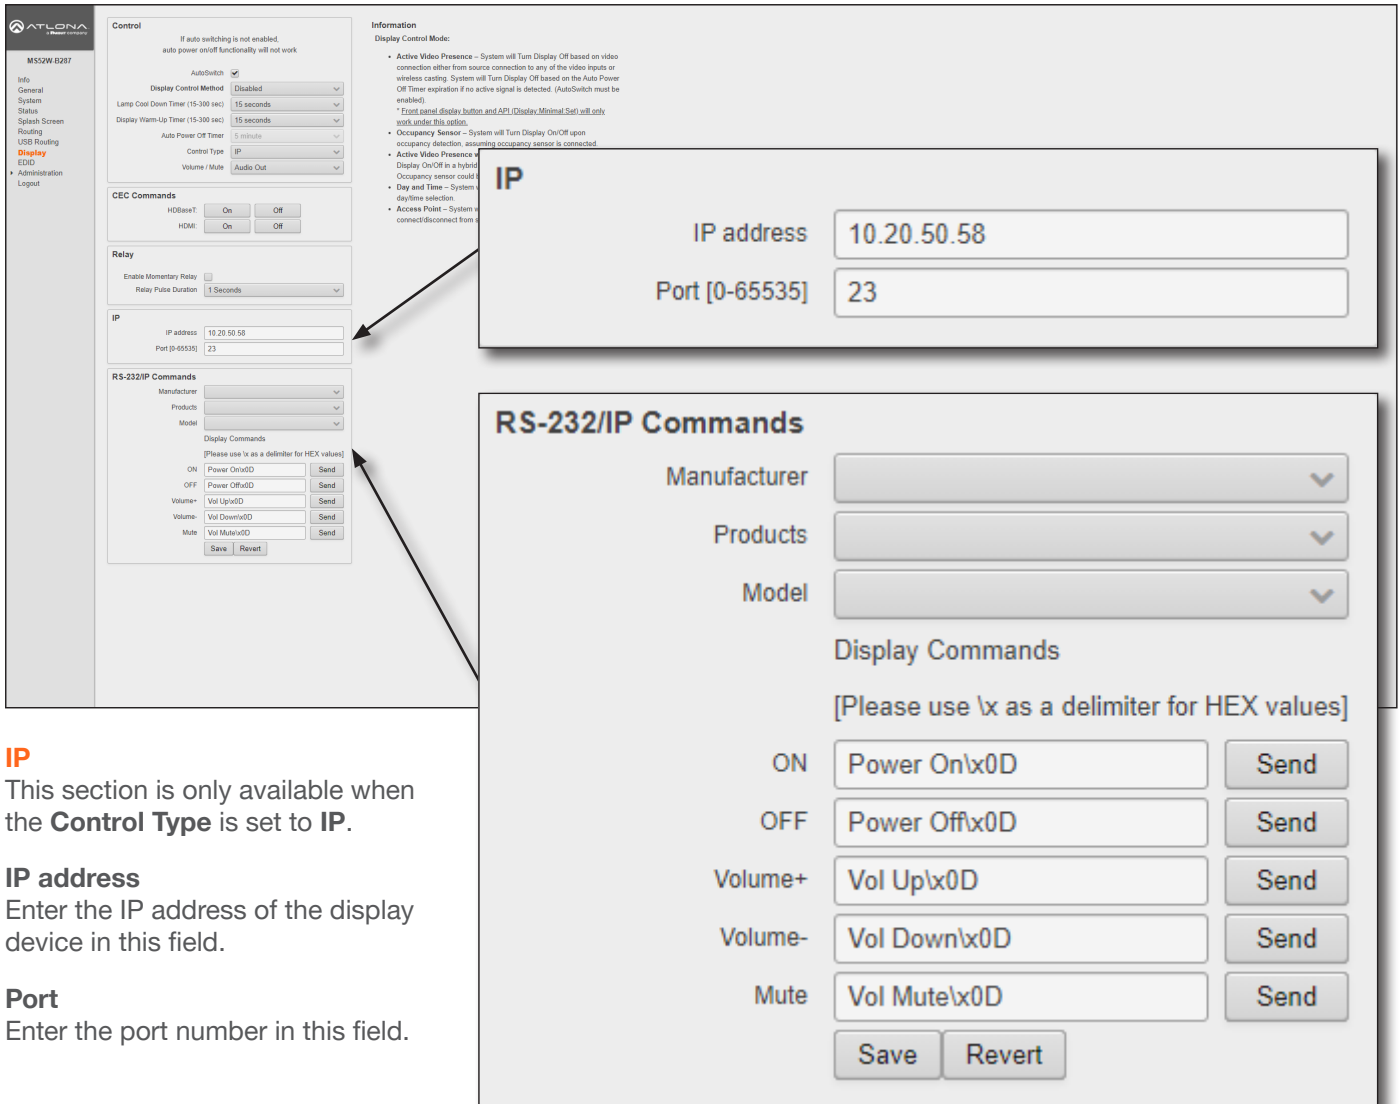

Control

If auto switching is not enabled, auto power on/off functionality will not work.

AutoSwitch ☒

Display Control Method: Disabled

Lamp Cool Down Timer (15-300 sec): 15 seconds

Display Warm-Up Timer (15-300 sec): 15 seconds

Auto Power Off Timer: 5 minute

Control Type: IP

Volume / Mute: Audio Out

CEC Commands

HDMI+T: On Off

HDMI: On Off

Relay

Enable Momentary Relay: ☐

Relay Pulse Duration: 1 Seconds

IP

IP address: 10.20.50.58

Port [0-65535]: 23

RS-232/IP Commands

Manufacturer: [Dropdown]

Products: [Dropdown]

Model: [Dropdown]

Display Commands

[Please use \x as a delimiter for HEX values]

ON: Power On\x0D [Send]

OFF: Power Off\x0D [Send]

Volume+: Vol Up\x0D [Send]

Volume-: Vol Down\x0D [Send]

Mute: Vol Mute\x0D [Send]

[Save] [Revert]

IP

This section is only available when the **Control Type** is set to **IP**.

IP address

Enter the IP address of the display device in this field.

Port

Enter the port number in this field.

RS-232/IP Commands


This section is only available when the **Control Type** is set to either **RS-232** or **IP**.

Manufacturer

Click this drop-down list to select the display manufacturer. If the display device being controlled is not in this list, then the commands can be entered manually.

Acer	Hitachi	Qomo
Barco	Infocus	Samsung
Benq	JVC	Sharp
Canon	LG	Smart
Casio	NEC	Sony
Christie	Optima	Toshiba
Clevertouch	Panasonic	ViewSonic
Digital Projection	Philips	Vivitek
Eiki	Pjlink	
Epson	Planar	

Configuration and Management Interfaces

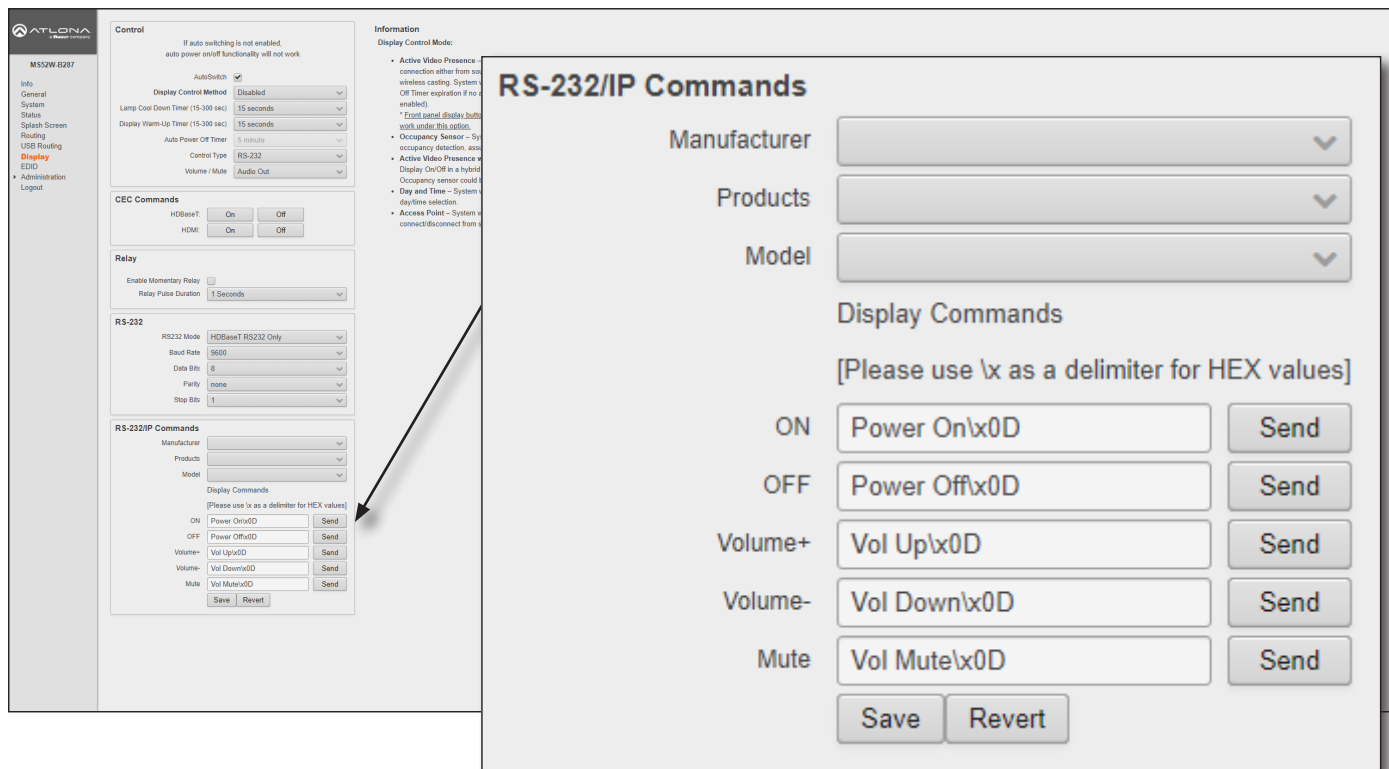

Control

If auto switching is not enabled, auto power on/off functionality will not work

AutoSwitch ☒

Display Control Method

Lamp Cool Down Timer (15-300 sec)

Display Warm-Up Timer (15-300 sec)

Auto Power Off Timer

Control Type

Volume / Mute

CEC Commands

HDMI+T

HDMI-

Relay

Enable Momentary Relay ☐

Relay Pulse Duration

RS-232

RS232 Mode

Baud Rate

Data Bits

Parity

Stop Bits

RS-232/IP Commands

Manufacturer

Products

Model

Display Commands

[Please use \x as a delimiter for HEX values]

ON

OFF

Volume+

Volume-

Mute

Products

Click this drop-down list to select the product. This drop-down list will be populated, based on the selection made from the **Manufacturer** drop-down list.

Model

Click this drop-down list to select the model. This drop-down list will be populated based on the selection made in the **Products** drop-down list.

Display Commands

Once a device is selected, the **ON**, **OFF**, **Volume+**, **Volume-**, and **Mute** fields will be populated with the correct information for that device. If a device is not listed, enter the appropriate commands the device in each field. Commands can be either ASCII or hexadecimal. If hexadecimal values are used, then use the /x delimiter at the end of the string. Click the **Send** button to verify that each command works properly. If not, check the values entered for each command.


Save

Click this button to commit all changes.

Revert

Click this button to undo all changes.

EDID page

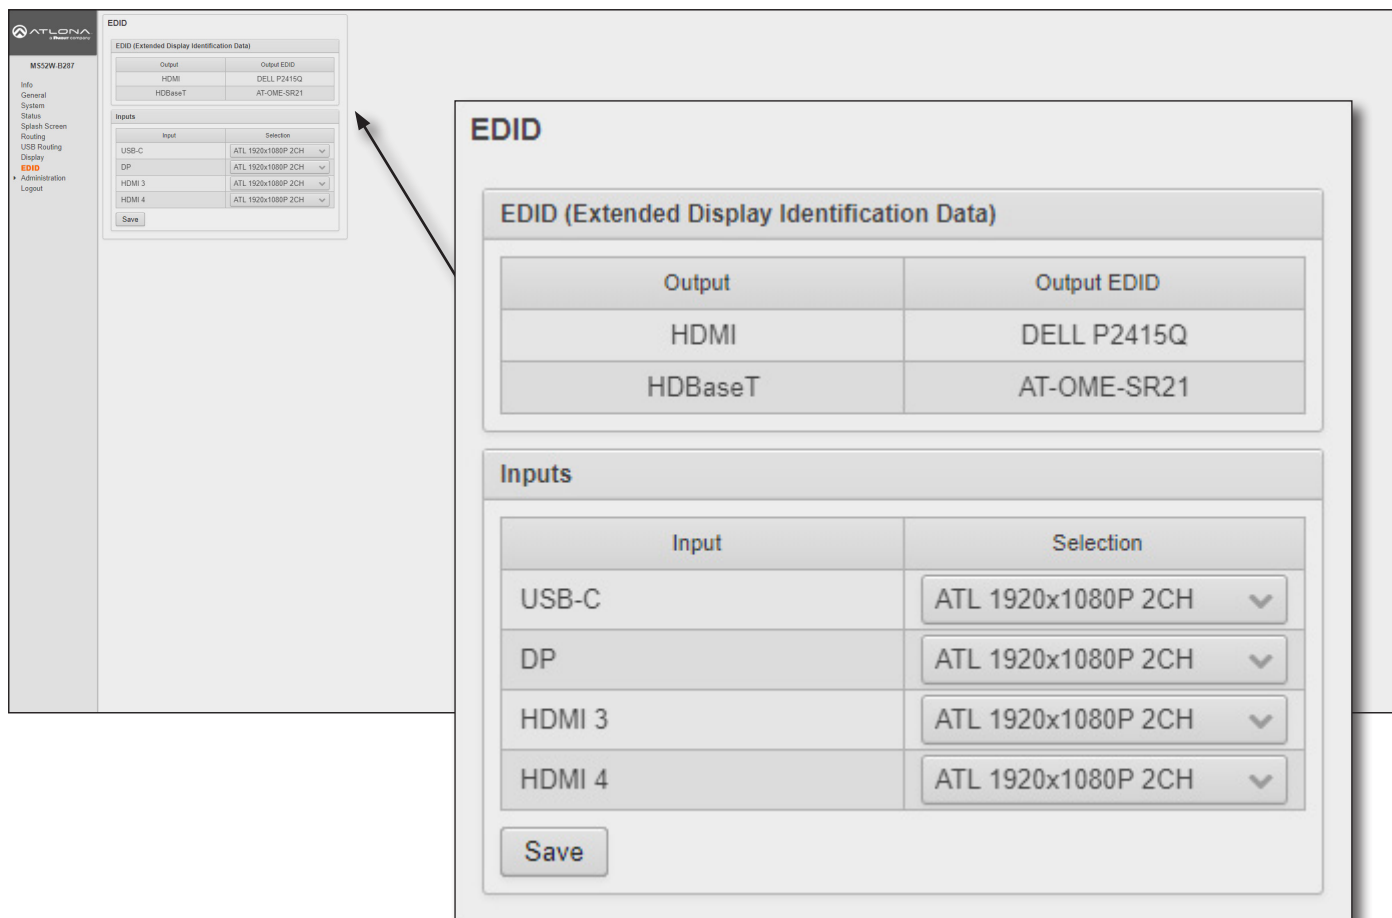

EDID

EDID (Extended Display Identification Data)

Displays the EDID assigned that is being used by each output. Press the **Save** button to save the EDID to a file.

Inputs

The **Input** column displays each of the inputs on the AT-OME-MS52W. Click the drop-down list, under the **Selection** column, to select the desired EDID to be used. The table below lists the available EDID presets.

The table below provides a listing of available EDID presets.

EDID listing	
4K60 2CH	1366x768@60 2CH
4K30 2CH	1280x800p60 2CH
4K30 4:4:4 2CH	1280x720p60 2CH
1920x1200p60 2CH	1024x768p60 2CH
1920x1080P 2CH (factory-default)	800x600p60 2CH
1600x900p@60 2CH	


Save

Click this button to commit changes.

Configuration and Management Interfaces

Administration > Telnet page


The **Telnet** page provides an emulated terminal for entering commands.

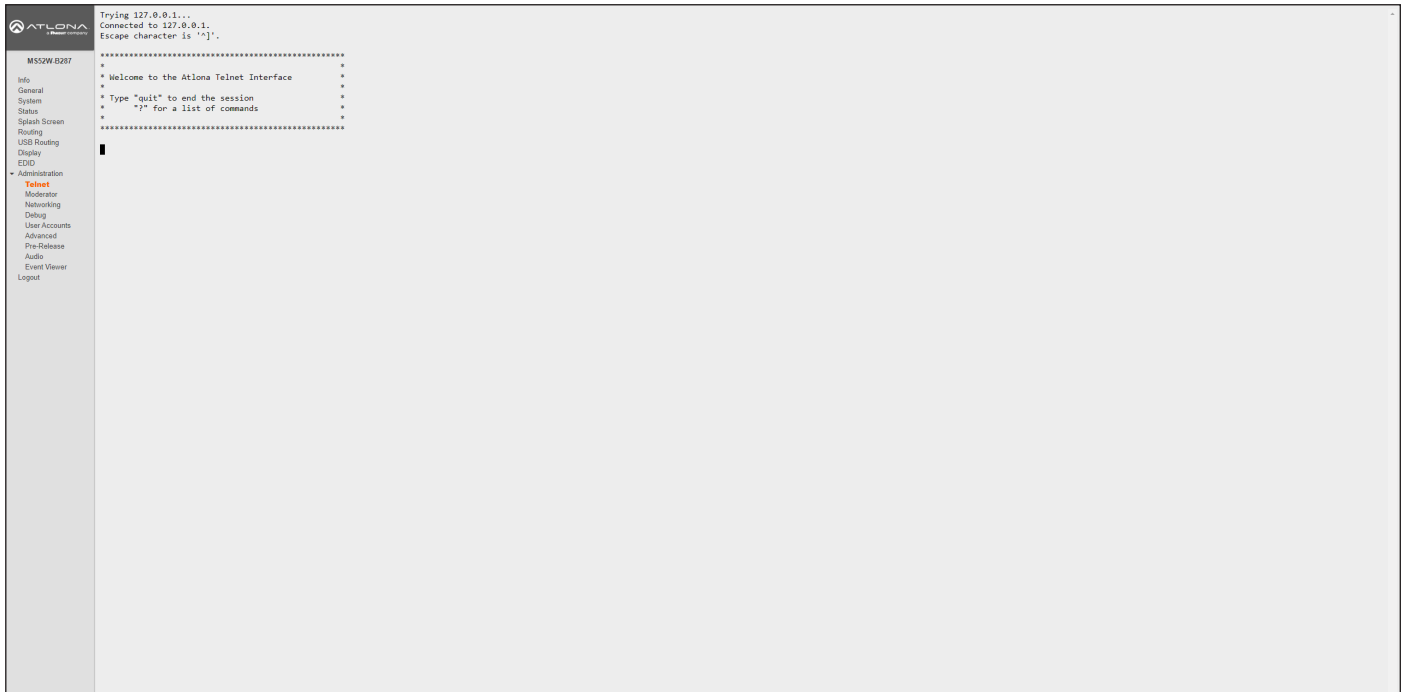

Configuration and Management Interfaces

Administration > Moderator page

The **Moderator** page provides control of which device, that are casting, are permitted to display content. Refer to [Moderator Mode \(page 68\)](#) for more information.

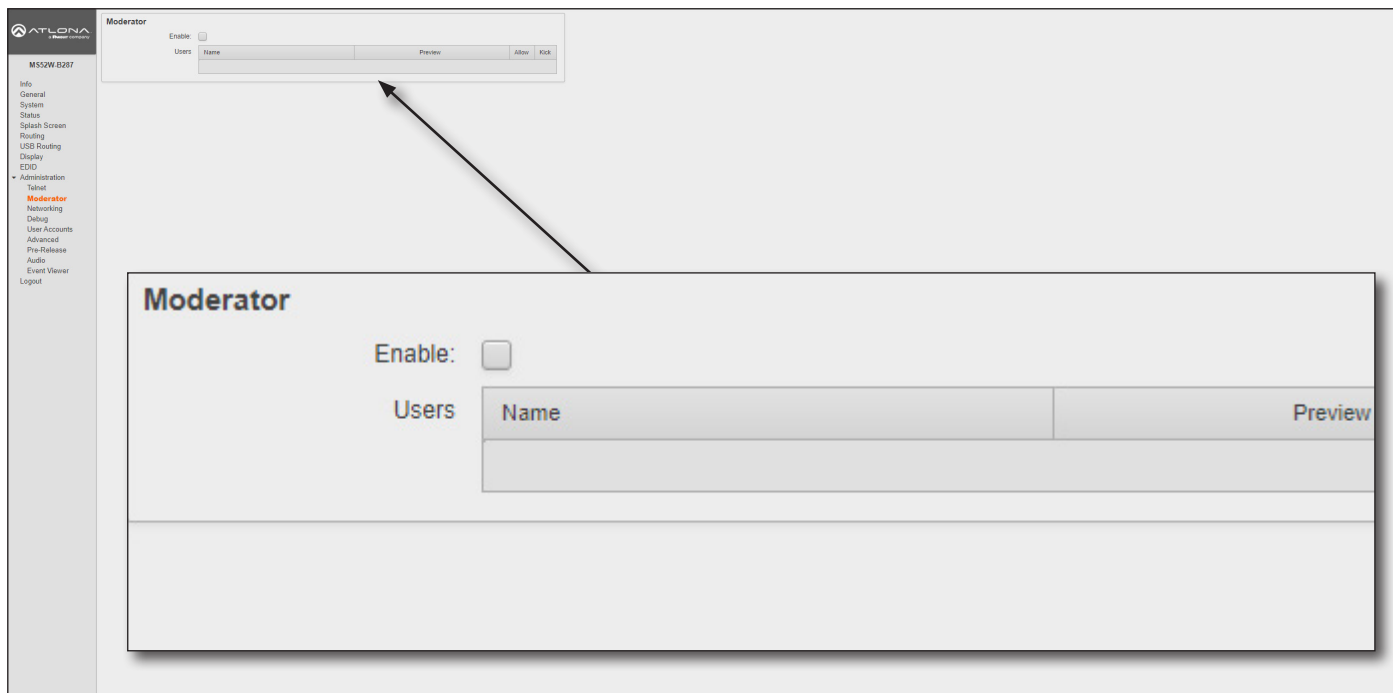

Moderator

Enable

Click this check box to enable or disable Moderator mode. If this box is checked, then Moderator mode is enabled. In order to monitor which devices are allowed to display content, this box must be checked before a device begins casting. If a device is already casting, then enabling this feature will have no effect.


Users

This table lists all users which are casting using the AT-OME-MS52W. Up to four users can be hosted at one time, but only one can be displayed at a time. Devices will only appear in this table when they are casting. Moderator mode must be enabled for devices to be displayed in this table. When casting devices are displays an **Allow** and **Kick** button will also be displayed.

Configuration and Management Interfaces

Administration > Networking page

This page contains a **WiFi** and **Ethernet** tab. Use the settings, under these tabs, to connect the AT-OME-MS52W to a network or wireless Access Point (AP). Refer to the IT Network Deployment Guide for detailed information on configuring the AT-OME-MS52W in various network environments.

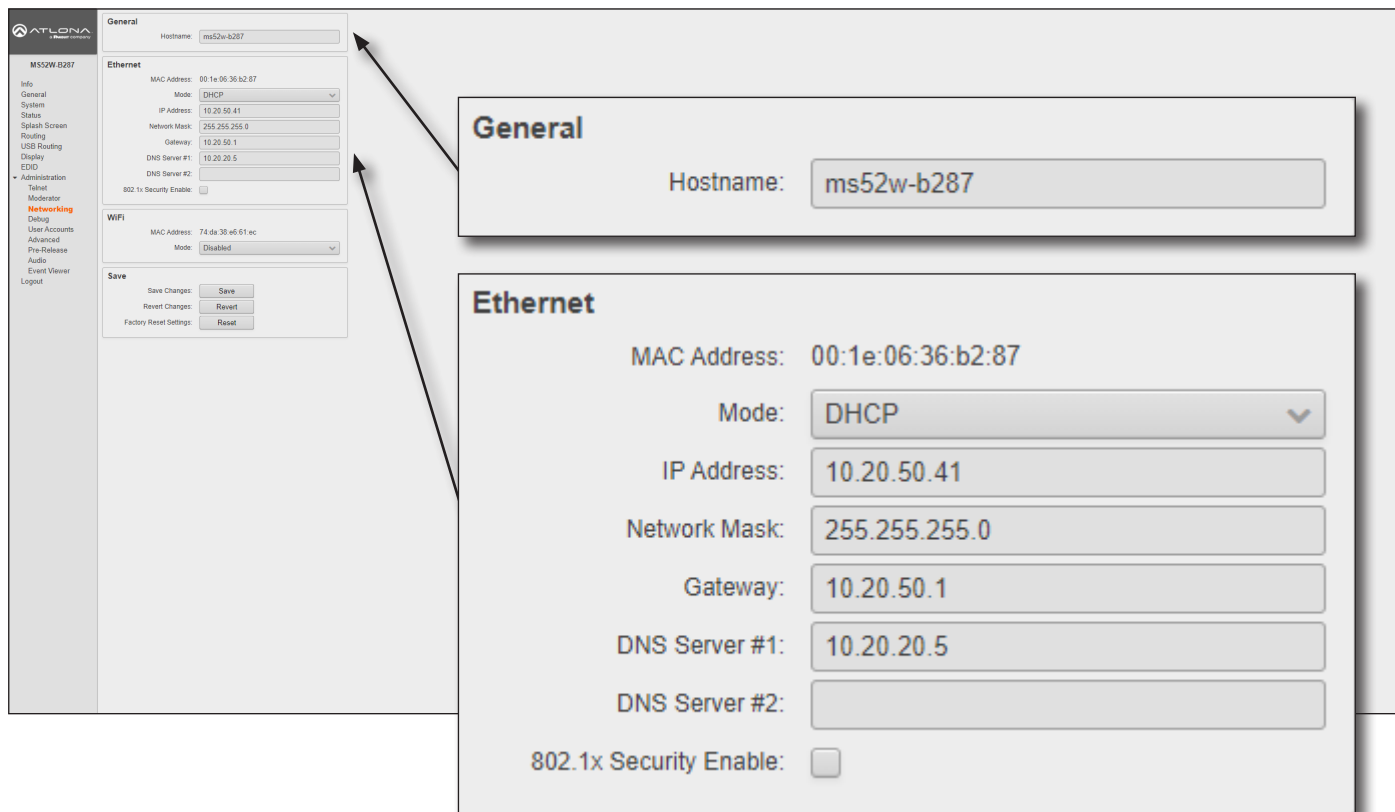

The screenshot displays the configuration interface for the AT-OME-MS52W device. On the left is a sidebar menu with options like Info, General, System, Status, Splash Screen, Routing, USB Routing, Display, EDID, Administration, Telnet, Moderator, Networking, Debug, User Accounts, Advanced, Pre-Release, Audio, Event Viewer, and Logout. The main area has two tabs: 'General' and 'Ethernet'. The 'General' tab shows the 'Hostname' set to 'ms52w-b287'. The 'Ethernet' tab shows the 'MAC Address' as '00:1e:06:36:b2:87', 'Mode' set to 'DHCP', 'IP Address' as '10.20.50.41', 'Network Mask' as '255.255.255.0', 'Gateway' as '10.20.50.1', 'DNS Server #1' as '10.20.20.5', and 'DNS Server #2' as an empty field. There is also a checkbox for '802.1x Security Enable' which is currently unchecked. Below these fields are 'Save', 'Revert', and 'Factory Reset' buttons.

General

Hostname

The name assigned to the AT-OME-MS52W. This name can be changed, if desired. Refer to [Changing the SSID \(page 54\)](#) for more information.

Ethernet

MAC Address


Displays the MAC address of the AT-OME-MS52W.

Mode

Click this drop-down list to select the desired IP mode.

Setting	Description
DHCP	Select this option to have a DHCP server (if available) assign an IP address to the AT-OME-MS52W.
Static	Select this option to enter a specific IP address. When set to Static mode, the subnet mask, gateway, and DNS servers can be specified.
Factory Static	Select this option to use the factory-default wired network settings. In this mode, only the DNS Server fields can be modified. The IP Address , Network Mask , and Gateway fields will be set to the following values: - IP Address = 192.168.1.254 - Network Mask = 255.255.0.0 - Gateway = 192.168.1.1

Configuration and Management Interfaces

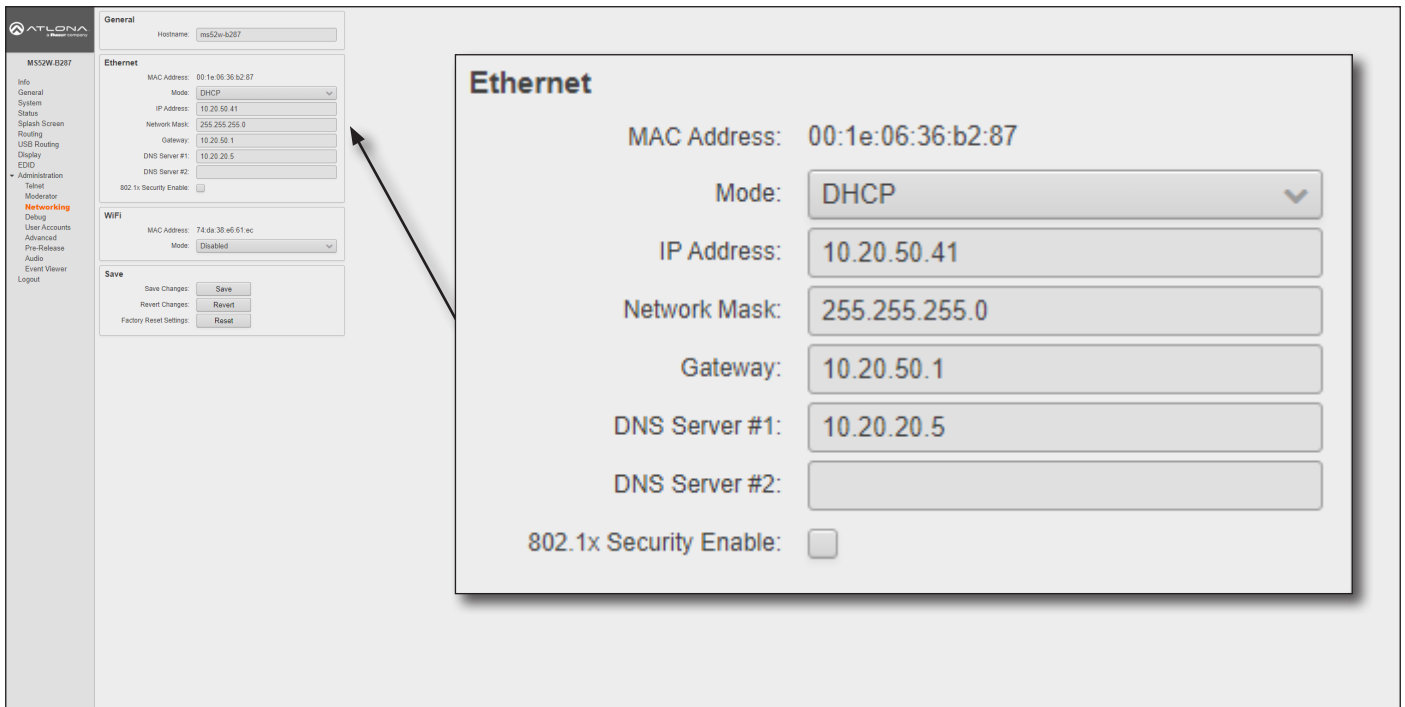

General
 Hostname: ms52w-6287

Ethernet
 MAC Address: 00:1e:06:36:b2:87
 Mode: DHCP
 IP Address: 10.20.50.41
 Network Mask: 255.255.255.0
 Gateway: 10.20.50.1
 DNS Server #1: 10.20.20.5
 DNS Server #2:
 802.1x Security Enable: ☐

WiFi
 MAC Address: 74:da:38:a6:61:ec
 Mode: Disabled

Save
 Save Changes:
 Revert Changes:
 Factory Reset Settings:

Ethernet
 MAC Address: 00:1e:06:36:b2:87
 Mode: DHCP
 IP Address: 10.20.50.41
 Network Mask: 255.255.255.0
 Gateway: 10.20.50.1
 DNS Server #1: 10.20.20.5
 DNS Server #2:
 802.1x Security Enable: ☐

IP Address

Enter the desired IP address for the AT-OME-MS52W in this field. This field can only be changed when **Mode** is set to **Static**.

Network Mask

Enter the subnet mask in this field. This field can only be changed when **Mode** is set to **Static**.

Gateway

Enter the gateway (router) address in this field. This field can only be changed when **Mode** is set to **Static**.


DNS Server #1 / DNS Server #2

Enter the DNS server addresses in the DNS Server #1 and DNS Server #2 fields. If the AT-OME-MS52W will be used within an internal LAN, this information is not required. This field can only be changed when **Mode** is set to **Static**.

802.1x Security Enable

Click this checkbox to enable 802.1x authentication mode. When enabled, the Radius server, Radius port, and Radius secret fields will be available. Refer to [802.1X Authentication \(page 55\)](#) for more information.

Configuration and Management Interfaces

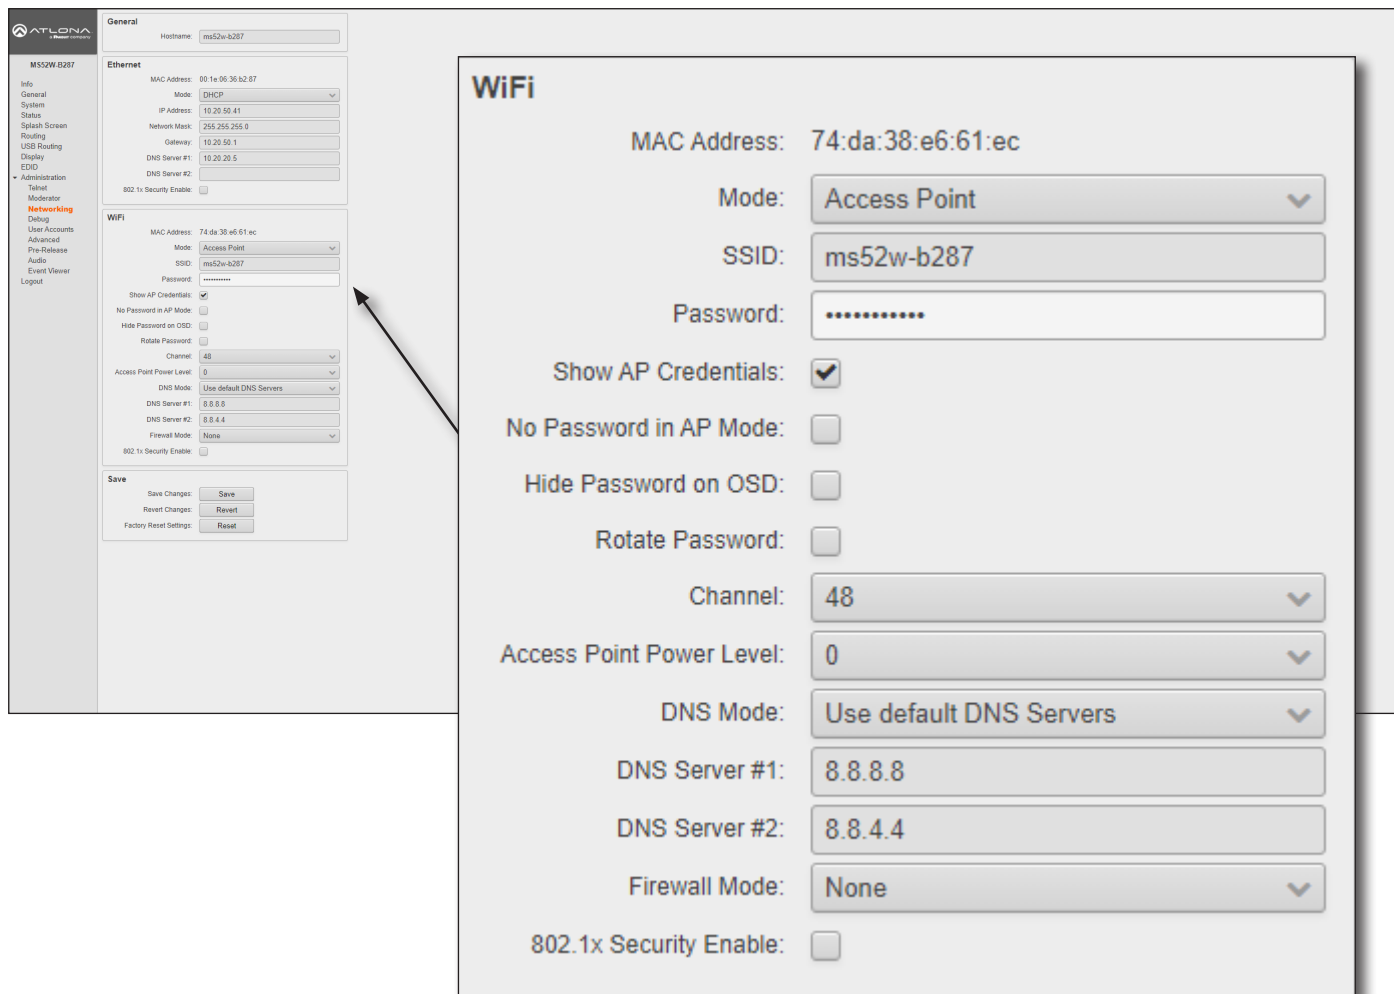

WiFi

MAC Address: 74:da:38:e6:61:ec

Mode: Access Point

SSID: ms52w-b287

Password:

Show AP Credentials: ☒

No Password in AP Mode: ☐

Hide Password on OSD: ☐

Rotate Password: ☐

Channel: 48

Access Point Power Level: 0

DNS Mode: Use default DNS Servers

DNS Server #1: 8.8.8.8

DNS Server #2: 8.8.4.4

Firewall Mode: None

802.1x Security Enable: ☐

WiFi - Access Point Mode

Mode

Click this drop-down list to select the desired WiFi mode.

Setting	Description
Access Point	Select this option to configure the AT-OME-MS52W as a Wireless Access Point, allowing other wireless devices to connect to the same wired network as the AT-OME-MS52W.
Connect to WiFi	Select this mode to connect the AT-OME-MS52W to the specified SSID of a wireless host.
Disabled	Select this mode to disable Wi-Fi on the AT-OME-MS52W.

SSID

The SSID assigned to the AT-OME-MS52W. The SSID name can be changed. Refer to [Changing the SSID \(page 54\)](#) for more information.

Password

Enter the password required to connect to the AT-OME-MS52W.


Show AP Credentials

Check this box to display the Username and Password credentials on the splash screen.

Hide Password on OSD

By default, the password will be displayed on the splash screen. Check this box to hide the password on the splash screen.

Configuration and Management Interfaces

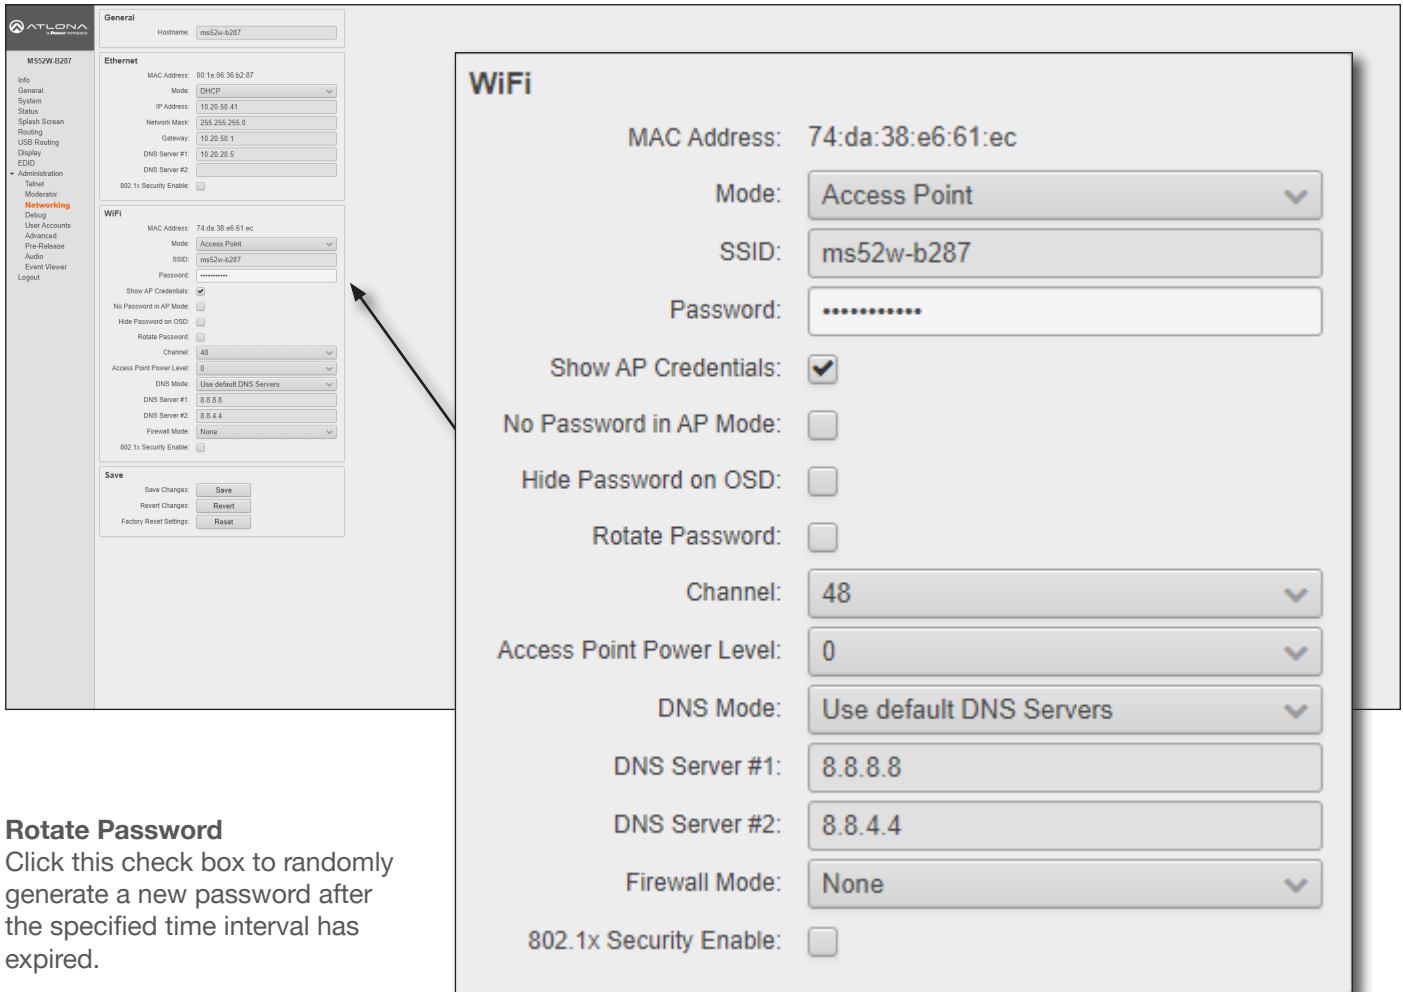

General

Hostname: ms52w-b287

Ethernet

MAC Address: 00:1e:06:36:b2:87

Mode: DHCP

IP Address: 10.20.50.41

Network Mask: 255.255.255.0

Gateway: 10.20.50.1

DNS Server #1: 10.20.20.5

DNS Server #2:

802.1x Security Enable: ☐

WiFi

MAC Address: 74:da:38:e6:61:ec

Mode: Access Point

SSID: ms52w-b287

Password:

Show AP Credentials: ☒

No Password in AP Mode: ☐

Hide Password on OSD: ☐

Rotate Password: ☐

Channel: 48

Access Point Power Level: 0

DNS Mode: Use default DNS Servers

DNS Server #1: 8.8.8.8

DNS Server #2: 8.8.4.4

Firewall Mode: None

802.1x Security Enable: ☐

Save

Save Changes:

Revert Changes:

Factory Reset Settings:

Rotate Password

Click this check box to randomly generate a new password after the specified time interval has expired.

Channel

Click this drop-down list to select the desired wireless channel. Channels 1 through 11 are 2.5 GHz channels. Channels 36 and above are 5 GHz channels. Contact the network administrator if necessary.

Access Point Power Level

Sets the transmission power of the USB WiFi antennas. Click the drop-down list to select the power level. Available values are integers 0 through 13. Lower values will reduce transmission power of the USB WiFi antenna, thus limiting the range of the Access Point on the AT-OME-MS52W.

DNS Mode

Click this drop-down list to select the desired DNS mode.

DNS Server #1 / DNS Server #2

Enter the DNS server addresses in the **DNS Server #1** and **DNS Server #2** fields. If the AT-OME-MS52W will be used within an internal LAN, this information is not required.


Firewall Mode

This feature is only available when the WiFi mode is set to Access Point. Click the **Firewall Mode** drop-down list to select the desired mode. This feature allows control of incoming and outgoing network traffic. The AT-OME-MS52W provides the following firewall modes: **Block Private Network**, **Block Internet**, **Block All**, and **None**. Refer to [Firewall Mode \(page 50\)](#) for more information.

802.1x Security Enable

Click this checkbox to enable 802.1x authentication mode. When enabled, the Radius server, Radius port, and Radius secret fields will be available. Refer to [802.1X Authentication \(page 55\)](#) for more information.

Configuration and Management Interfaces

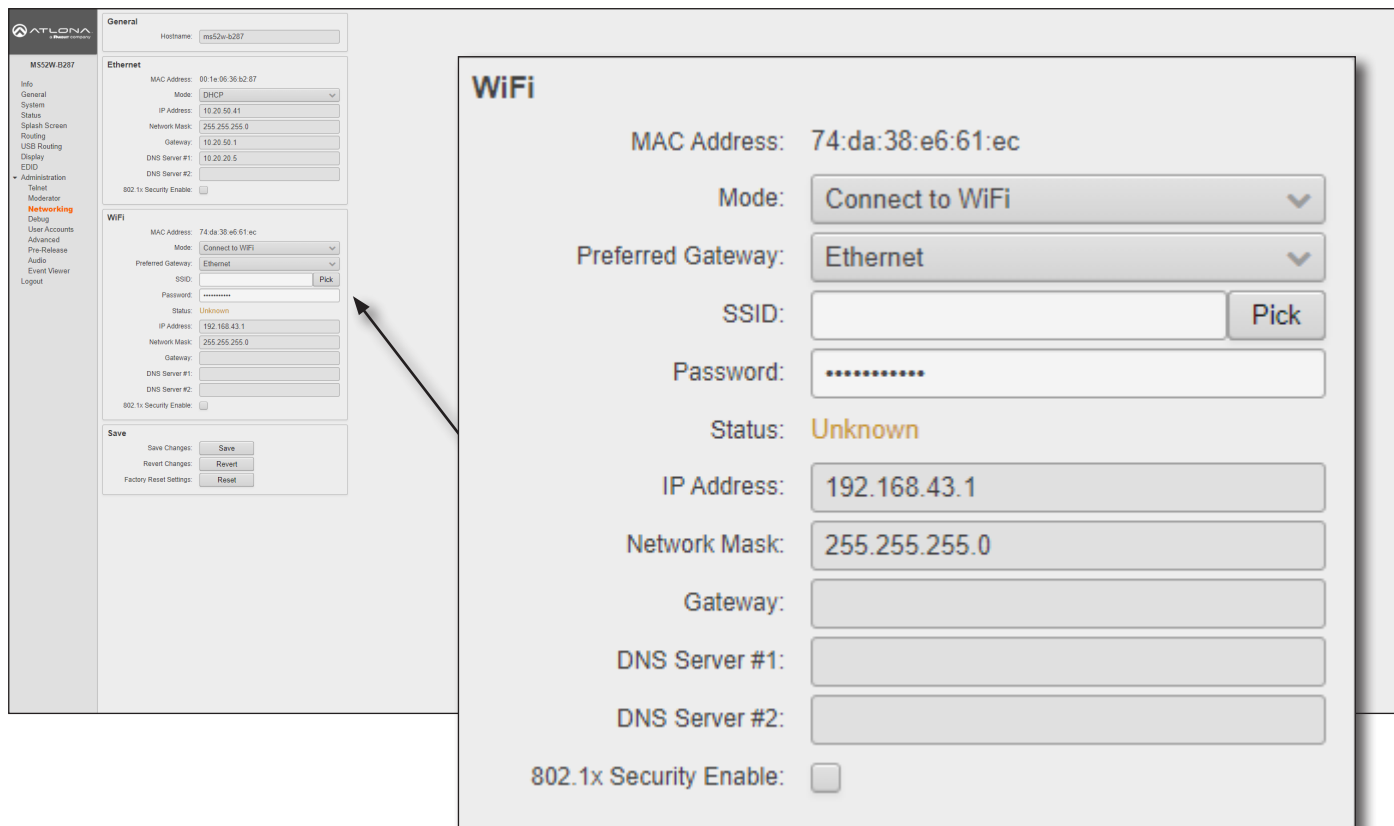

WiFi

MAC Address: 74:da:38:e6:61:ec

Mode: **Connect to WiFi**

Preferred Gateway: **Ethernet**

SSID: **Pick**

Password:

Status: **Unknown**

IP Address: 192.168.43.1

Network Mask: 255.255.255.0

Gateway:

DNS Server #1:

DNS Server #2:

802.1x Security Enable: ☐

WiFi - Connect to WiFi Mode

Mode

Click this drop-down list to select the desired WiFi mode.

Setting	Description
Access Point	Select this option to configure the AT-OME-MS52W as a Wireless Access Point, allowing other wireless devices to connect to the same wired network as the AT-OME-MS52W.
Connect to WiFi	Select this mode to connect the AT-OME-MS52W to the specified SSID of a wireless host.
Disabled	Select this mode to disable Wi-Fi on the AT-OME-MS52W.

Preferred Gateway

When set to **Connect to WiFi** mode, the AT-OME-MS52W can only be accessed though the same network, over Ethernet or WiFi, not both. For example, if **Ethernet** is selected, then the AT-OME-MS52W can only be accessed from the same network over Ethernet. However, it should be noted that casting is supported on *both* interfaces, simultaneously.

SSID

Click the **Pick** button to display a pop-up dialog displaying all available WiFi networks. Click the desired WiFi network from the list and click the **OK** button to accept the selection or click **Cancel** to return without making a WiFi network selection. When a wireless network is selected, its name will appear in the **SSID** field.


Password

Enter the password required to connect to the wireless network, in this field.

Status

This field indicates the connection state. If no connection is present, then this field will indicate **Unknown**. Once a valid wireless connection has been established, this field will indicate **Connected**.

Configuration and Management Interfaces

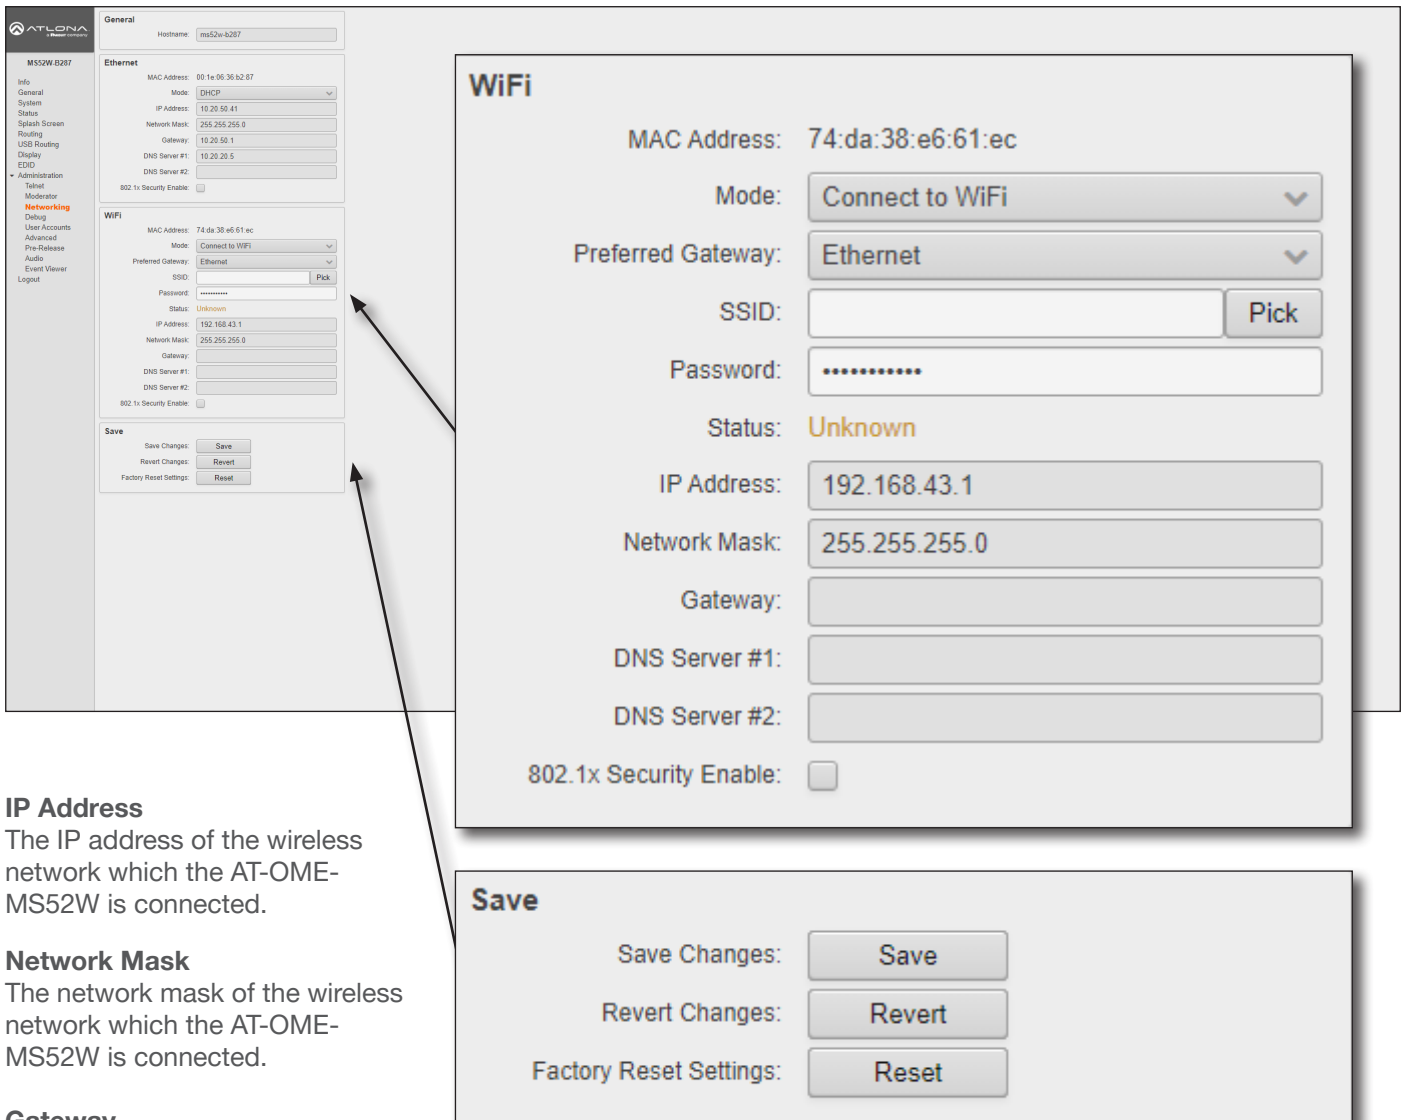

WiFi

MAC Address: 74:da:38:e6:61:ec

Mode: Connect to WiFi

Preferred Gateway: Ethernet

SSID: Pick

Password:

Status: Unknown

IP Address: 192.168.43.1

Network Mask: 255.255.255.0

Gateway:

DNS Server #1:

DNS Server #2:

802.1x Security Enable: ☐

Save

Save Changes: Save

Revert Changes: Revert

Factory Reset Settings: Reset

IP Address

The IP address of the wireless network which the AT-OME-MS52W is connected.

Network Mask

The network mask of the wireless network which the AT-OME-MS52W is connected.

Gateway

This field cannot be changed.

DNS Server #1 / DNS Server #2

These fields cannot be changed.

802.1x Security Enable

Click this checkbox to enable 802.1x authentication mode. When enabled, the Radius Server, Radius Port, and Radius Secret fields will be available. Refer to [802.1X Authentication \(page 55\)](#) for more information.

Save

Save

Click this button to commit changes within the **Network** menu.

Revert

Click to abort changes.


Reset

Click this button to reset the network settings to factory-default settings.

Configuration and Management Interfaces

Administration > Debug page

Click the **Download Logs** button to download the debug logs. Debug logs are downloaded in a .zip file. Debug logs are used by Atlona Technical Support Engineers to identify functionality issues.

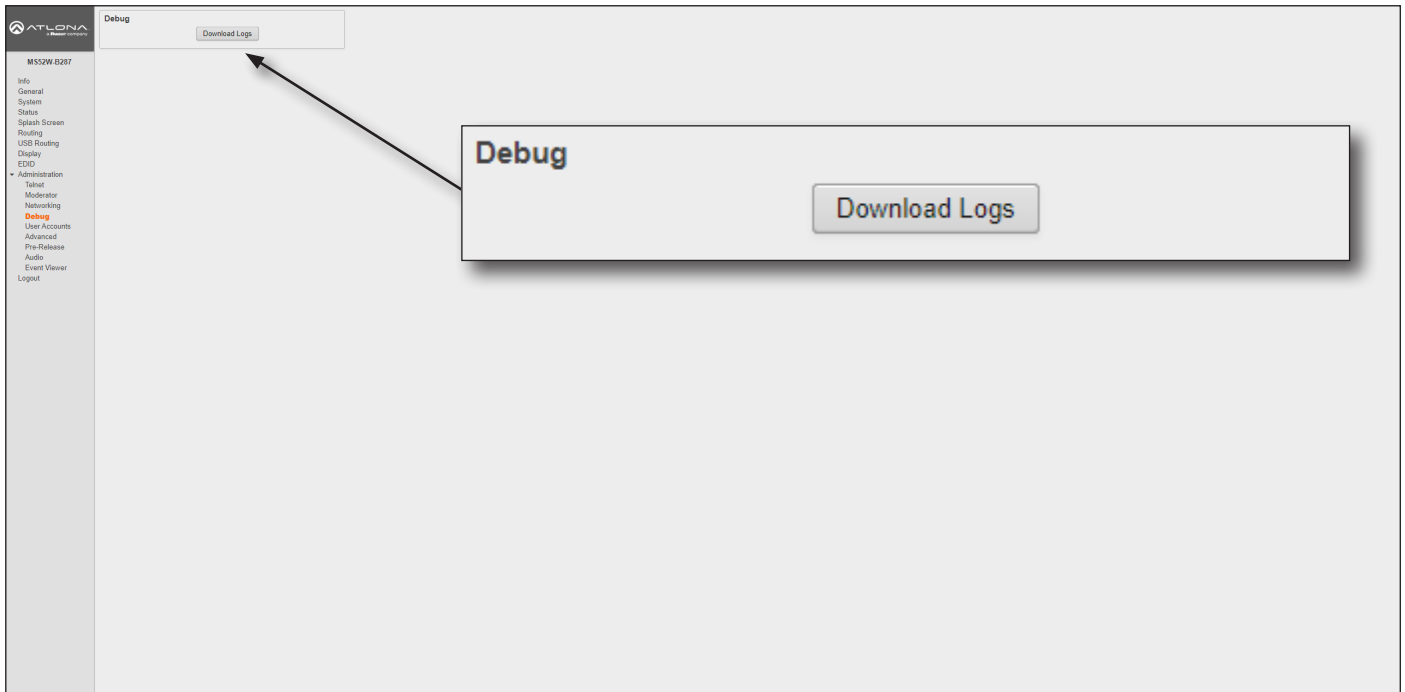


1. Click **Debug** on the side menu bar.
2. Click the **Download Logs** button to display the **Save As** dialog box.
3. Browse to the desired folder where the .zip file will be downloaded.
4. Click the **Save** button on the **Save As** dialog to save the debug log file.


Configuration and Management Interfaces

Administration > User Accounts page

This page allows the default password to be changed.

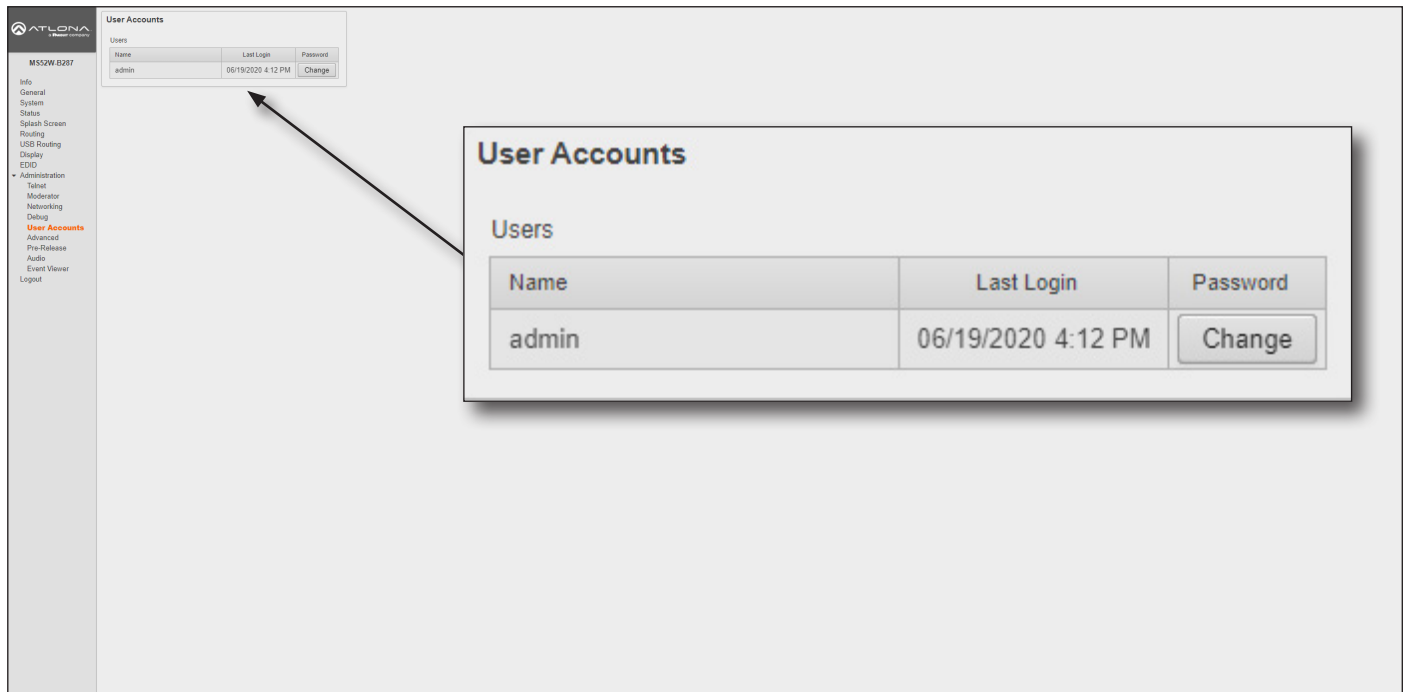

1. Click the **Change** button to display the **Change Password** dialog box.

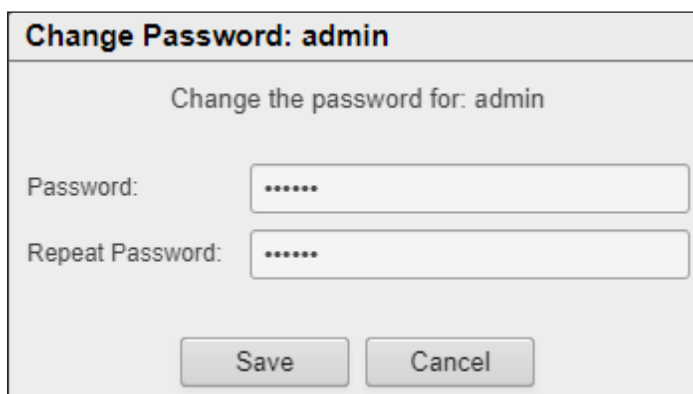


The dialog box is titled 'Change Password: admin'. It contains the text 'Change the password for: admin'. Below this are two input fields: 'Password:' and 'Repeat Password:', both containing six dots. At the bottom are 'Save' and 'Cancel' buttons.

2. Enter the new password in the **Password** field.
3. Re-enter the same password in the **Repeat Password** field.
4. Click the **Save** button to commit changes or click **Cancel** to abort the process.

Configuration and Management Interfaces

Administration > Advanced page

This page provides options for advanced functionality.

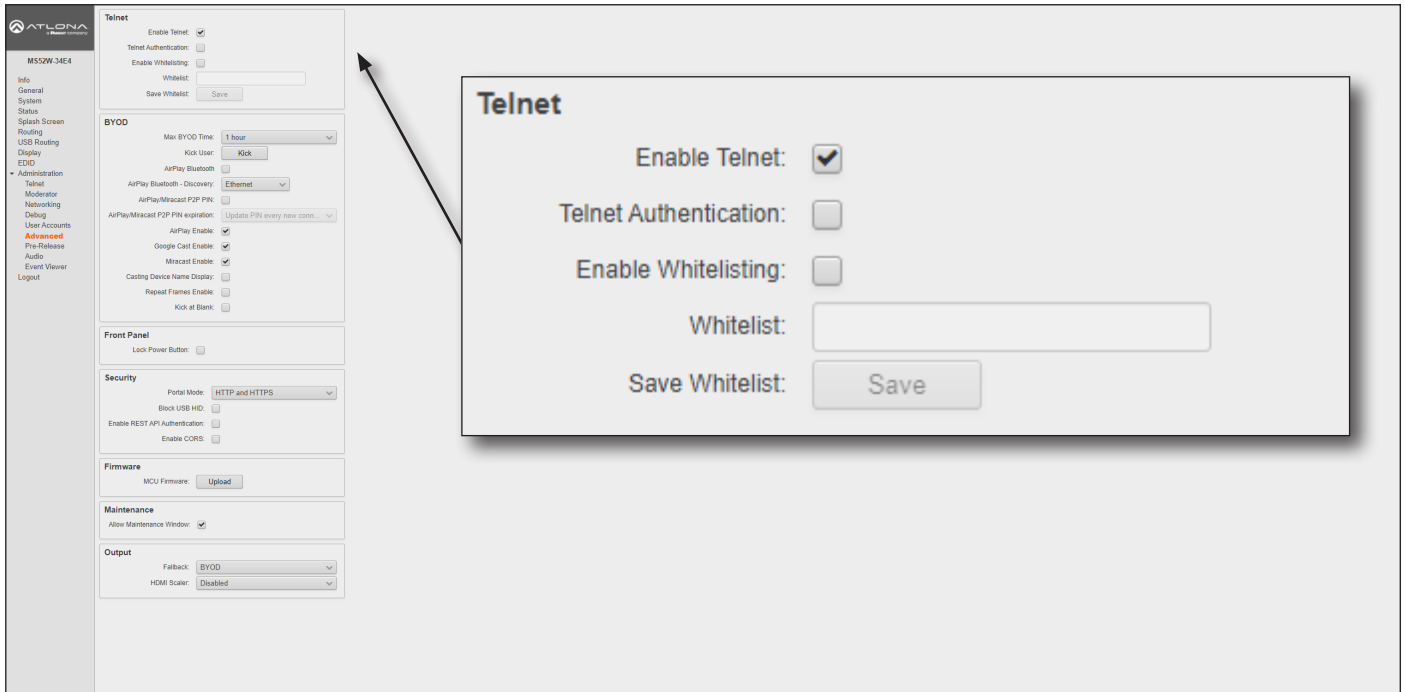

Telnet

Enable Telnet

Click this check box to enable or disable the Telnet protocol for the AT-OME-MS52W. When checked, Telnet is enabled.

Telnet Authentication

Click this check box to enable or disable the Telnet authentication. When checked, Telnet is enabled. When this feature is enabled, username and password credentials will be required at the beginning of the Telnet session.

Enable Whitelisting

Click this check box to enable whitelisting. Whitelisting only allows Telnet access to those users within the specified network. Users outside the network will not be granted access.


Whitelist

Enter the network IP address using CIDR notation (e.g. 192.168.11.1/24), in this field. Multiple network IP addresses can be specified with a comma and space: 192.168.11.1/24, 10.0.1.1/24.

Save Whitelist

Click the **Save** button to save the whitelist field.

Configuration and Management Interfaces

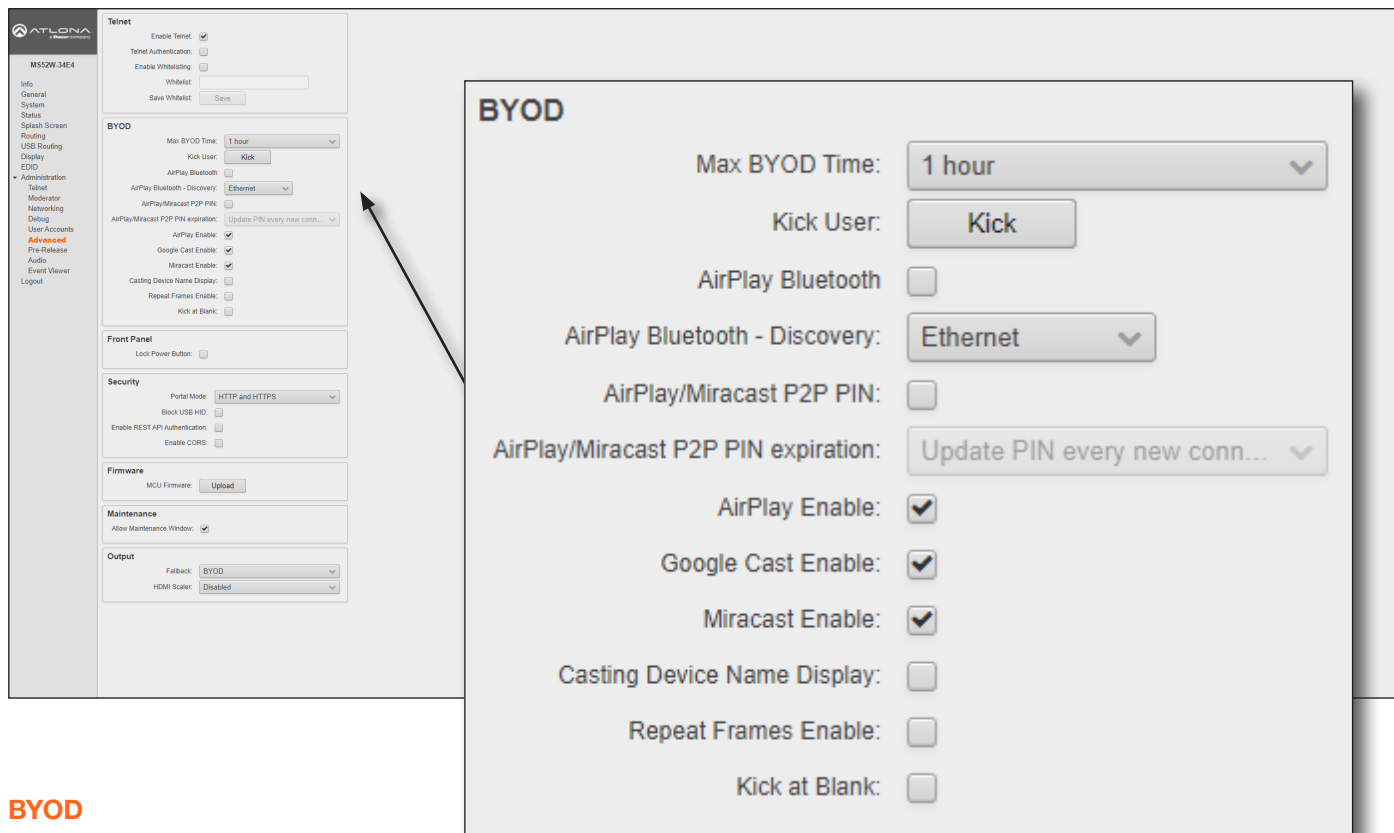

BYOD

Max BYOD Time

Click this drop-down list to select the desired time interval before the connected BYOD is automatically disconnected from the AT-OME-MS52W. Available options are 35 minutes to 5 hours.

Kick User

Click this button to disconnect the current BYOD.

Airplay Bluetooth - Ethernet

Click this check box to enable Bluetooth discovery when using an Ethernet connection. Refer to [AirPlay Bluetooth Discovery \(page 64\)](#) for more information.

Airplay Bluetooth - WiFi

Click this check box to enable Bluetooth discovery when using a WiFi connection. Refer to [AirPlay Bluetooth Discovery \(page 64\)](#) for more information.

Airplay/Miracast P2P PIN

Click this check box to allow the ability to add randomized PIN codes when connecting using AirPlay.

Airplay/Miracast P2P PIN expiration

Click this drop-down list to select the time interval before a new PIN code is requested by the system. This drop-down list is only available if the **Airplay/Miracast P2P PIN** check box is checked.

Setting	Description
Update Pin every new connection	A new PIN code is generated each time a device attempts to connect to the AT-OME-MS52W.
Update Pin every 15 minutes	A new PIN is generated every 15 minutes, whether or not a connection request is made.
Update Pin every 60 seconds	A new PIN is generated every 60 minutes, whether or not a connection request is made.

Configuration and Management Interfaces

Airplay Enable

Click this check box to enable AirPlay. This option is enabled by default.

Google Cast Enable

Click this check box to enable Google Cast™. This option is enabled by default.

Miracast Enable


Click this check box to enable Miracast. This option is enabled by default.

Casting Device Name display

Check this box to show the hostname of the casting device on the splash screen.

Kick at Blank

Click this check box to allow the AT-OME-MS52W to kick the wireless BYOD client when the device goes to sleep.

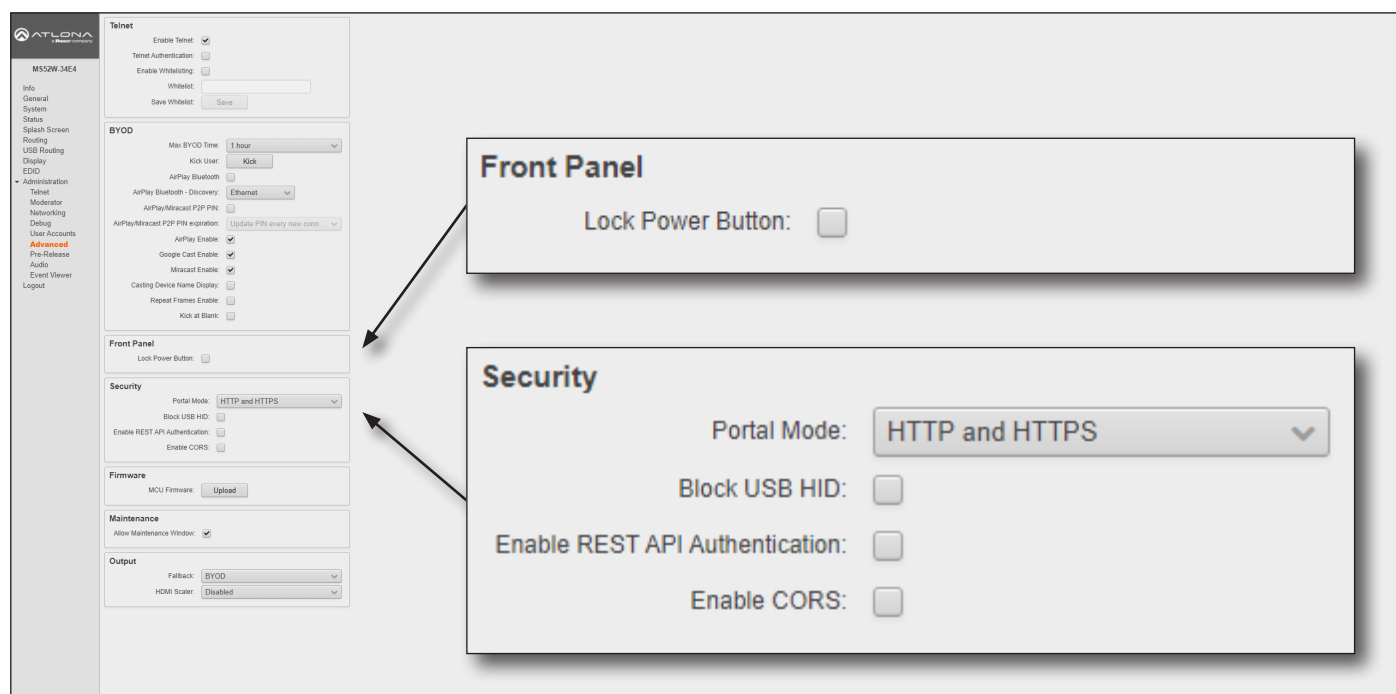

Front Panel

Lock Power Button

Check this box to enable or disable the locking of the **POWER** button on the front panel. Locking this button will prevent accidental pressing of the **POWER** button and powering-off the unit.

Security

Portal Mode

Click this drop-down list to select the desired HTTP protocol.

Setting	Description
HTTP and HTTPS	Provides either HTTP or HTTPS connections at the login screen.
HTTPS	Used for secure connections only.

Block USB HID

Deactivates / disables the USB ports on the rear panel of the AT-OME-MS52W.


Configuration and Management Interfaces

Enable REST API Authentication

Enables or disables REST authentication when using the AT-OME-MS52W API. Click this check box to enable the feature.

Enable CORS

Check this box to enable Cross-Origin Resource Sharing (CORS). This allows the AT-OME-MS52W to connect with certain servers. CORS is a method which allows restricted resources on a web page to be requested from another domain. Resources can include stylesheets (CSS), scripts, and other embedded elements.

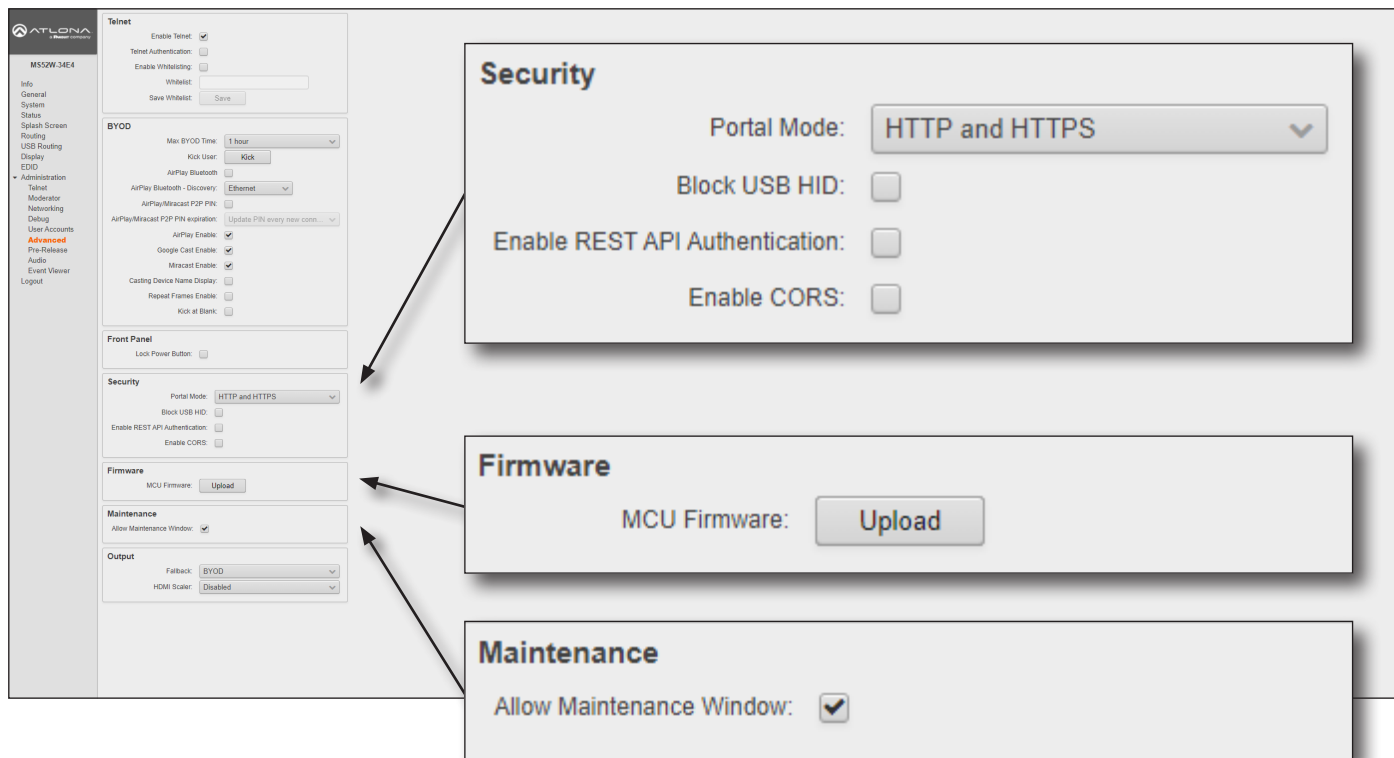

The screenshot shows the AT-OME-MS52W configuration interface. On the left is a sidebar menu with categories like Info, General, System, Status, and Administration. The main area displays various configuration sections. Three callout boxes highlight specific settings:

- Security:** Shows 'Portal Mode' set to 'HTTP and HTTPS', 'Block USB HID' (unchecked), 'Enable REST API Authentication' (unchecked), and 'Enable CORS' (unchecked).
- Firmware:** Shows the 'MCU Firmware' section with an 'Upload' button.
- Maintenance:** Shows the 'Allow Maintenance Window' checkbox, which is checked.

Firmware

Upload


Click this button to upload the latest MCU firmware to the AT-OME-MS52W. Refer to [Updating the Firmware \(page 116\)](#) for more information.

Maintenance

Allow Maintenance Window

Check this box to enable maintenance mode. This feature can only be enabled if the local time has been set. Refer to [Setting the System Date and Time \(page 24\)](#) for more information. When enabled, the system will automatically restart all of its processes at 3:30 PM, every day.

Configuration and Management Interfaces

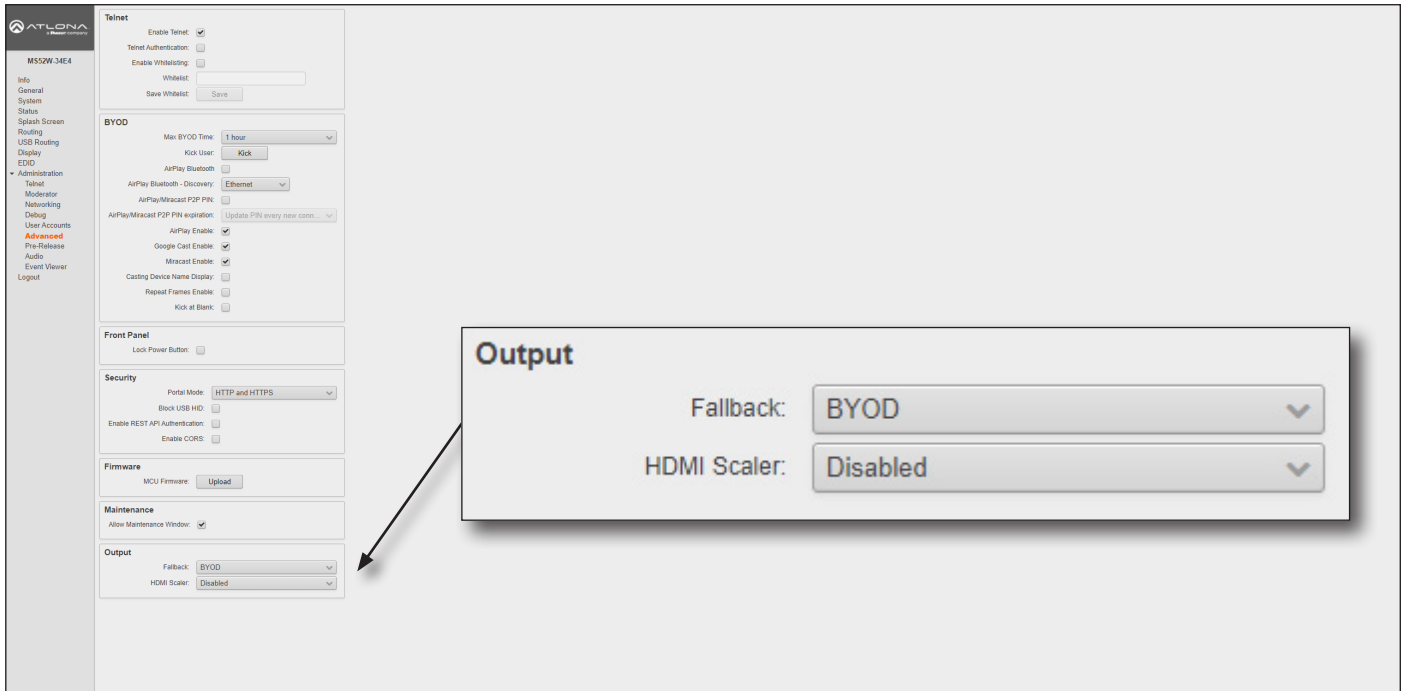

Output

Fallback

This bypasses the default behavior of the system to fallback to the BYOD splash screen. If no video is detected, the AT-OME-MS52W immediately mutes the output instead of falling back to the splash screen.

HDMI Scaler

Click this drop-down list to enable or disable the scaler on the HDMI output. The default setting is disabled.

Configuration and Management Interfaces

Administration > Pre-Release page

This page lists beta features, which are currently in the pre-release / testing stage. It should be noted that these features may not function reliably.

The screenshot shows the ATLONA web interface. On the left is a sidebar menu with the following items: Info, General, System, Status, Splash Screen, Routing, USB Routing, Display, EDD, Administration, Tablet, Moderator, Networking, Debug, User Accounts, Advanced, **Pre-Release** (highlighted in orange), Audio, Event Viewer, and Logout. The main content area is titled 'Pre-Release' and contains the following settings:

- Calendar: ☐
- Velocity Gateway:
- Room:
- Show Subject: ☒
- Show Organizer: ☒
- Save:


Pre-Release

Features listed under this window group can change between versions. As these features are not officially released, they are not documented.

Configuration and Management Interfaces

Administration > Audio page

This page provides control over the audio output level, as well as selecting analog or digital audio sources for each input.

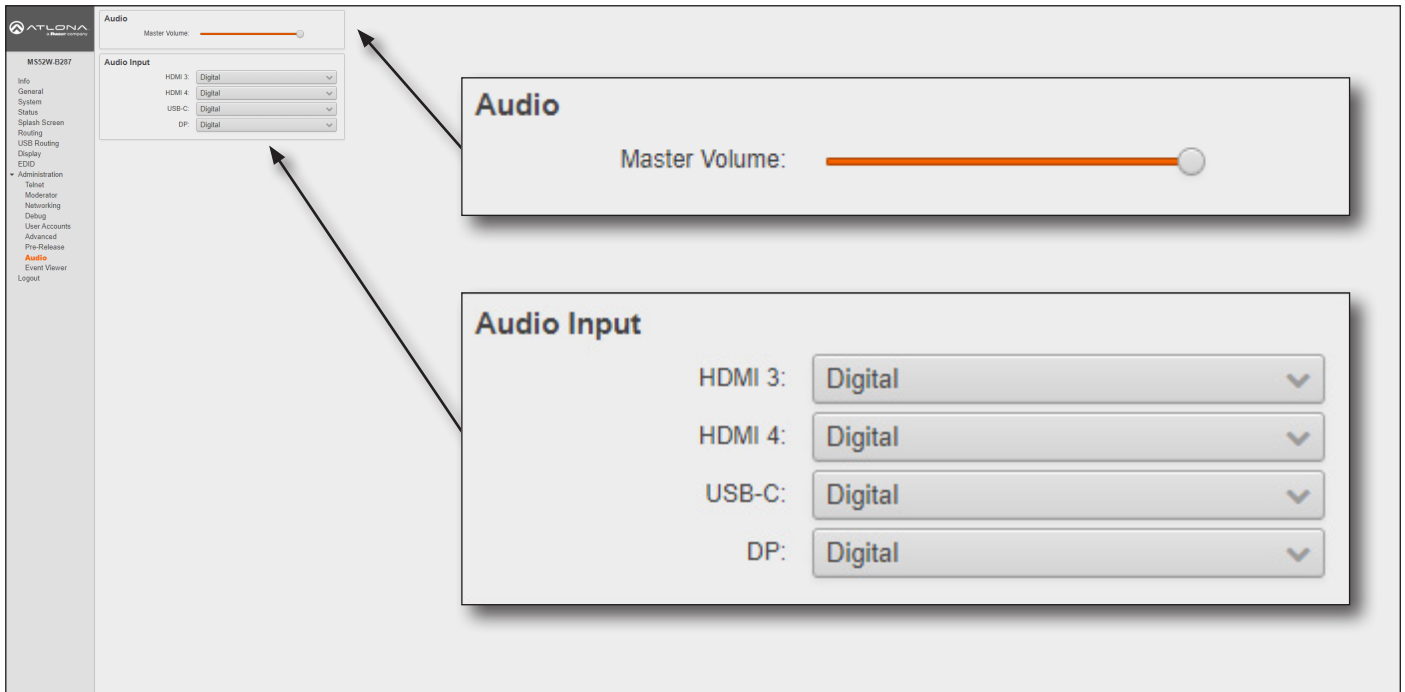

Audio

Master Volume

Click and drag this slider to adjust the output volume. Output is adjustable from -80 to 0 dB.

Audio Input


HDMI 3, HDMI 4, USB-C, DP

Click these drop-down lists to select the desired audio input source. If **Analog** is selected, then the analog audio source, connected to the 3.5 mm **AUDIO IN** port, will be heard on that output. Refer to [Audio Management \(page 63\)](#) for more information.

Configuration and Management Interfaces

Administration > Event Viewer page

This page displays a dynamic list of events, returned in JSON format. The image below, shows a list of sample events. This page is useful for monitoring events and troubleshooting the AT-OME-MS52W.

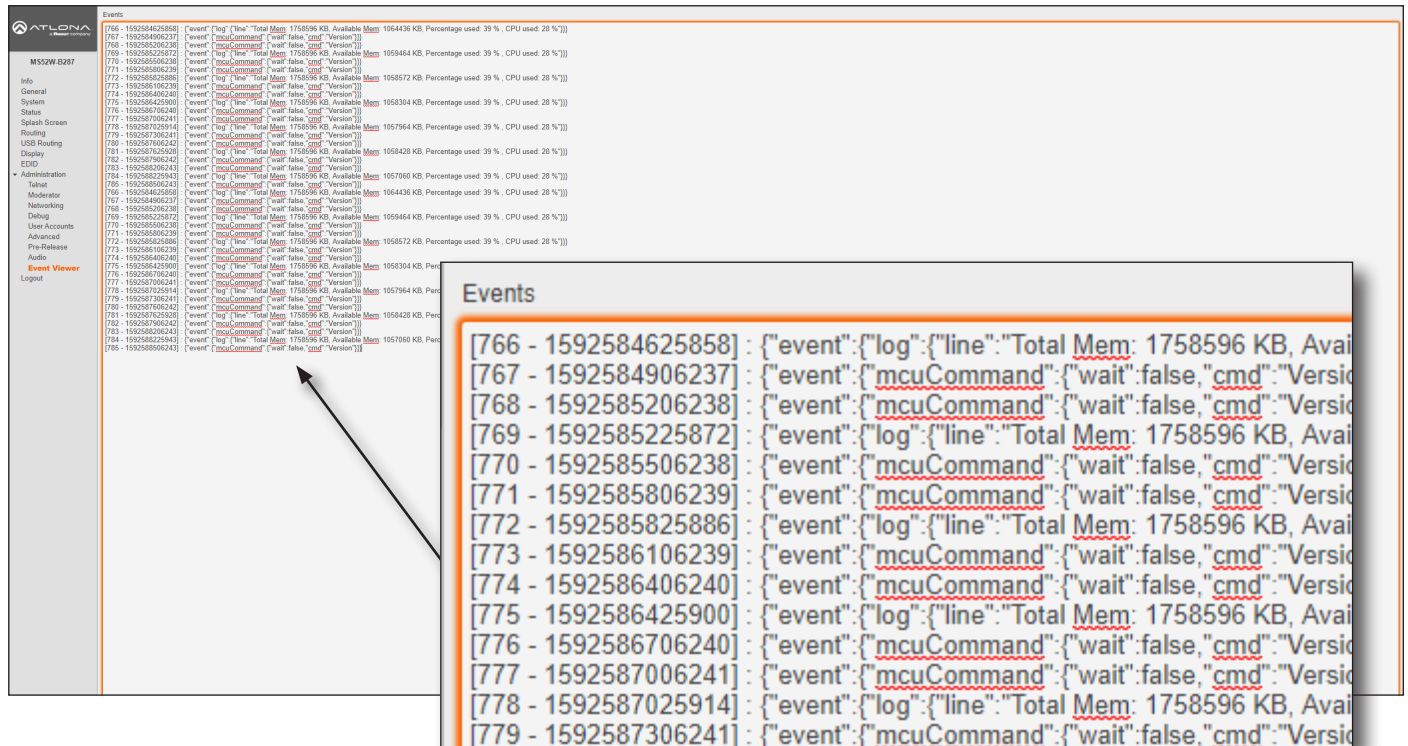

The screenshot shows the AT-OME-MS52W Event Viewer interface. On the left is a navigation menu with categories like Info, General, System, Status, Splash Screen, Routing, Display, EDD, Administration, Tablet, Moderator, Networking, Debug, User Accounts, Advanced, Pre-Release, Audio, and Event Viewer. The main area displays a list of events in JSON format. An inset box titled 'Events' provides a closer look at the data, showing events with IDs, timestamps, and JSON payloads. A black arrow points from the 'Event Viewer' menu item to the inset box.

Events

```
[766 - 1592584625858] : {"event":{"log":{"line":"Total Mem: 1758596 KB, Available Mem: 1064436 KB, Percentage used: 39 %, CPU used: 28 %"}}}
[767 - 1592584906237] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
[768 - 1592585206238] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
[769 - 1592585225872] : {"event":{"log":{"line":"Total Mem: 1758596 KB, Available Mem: 1058464 KB, Percentage used: 39 %, CPU used: 28 %"}}}
[770 - 1592585506238] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
[771 - 1592585806239] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
[772 - 1592585825886] : {"event":{"log":{"line":"Total Mem: 1758596 KB, Available Mem: 1058572 KB, Percentage used: 39 %, CPU used: 28 %"}}}
[773 - 1592586106239] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
[774 - 1592586406240] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
[775 - 1592586425900] : {"event":{"log":{"line":"Total Mem: 1758596 KB, Available Mem: 1058304 KB, Percentage used: 39 %, CPU used: 28 %"}}}
[776 - 1592586706240] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
[777 - 1592587006241] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
[778 - 1592587025914] : {"event":{"log":{"line":"Total Mem: 1758596 KB, Available Mem: 1057964 KB, Percentage used: 39 %, CPU used: 28 %"}}}
[779 - 1592587306241] : {"event":{"mcuCommand":{"wait":false,"cmd":"Version"}}}
```


Appendix

Updating the Firmware


Updating the firmware is performed using the built-in web server.

Requirements:

- AT-OME-MS52W
 - Firmware files
 - Computer on the same network as the AT-OME-MS52W
1. Download the firmware from atlona.com and extract the contents of the .zip file to a folder on the computer desktop.
 2. Connect an Ethernet cable from the computer, containing the firmware, to the same network where the AT-OME-MS52W is connected.
 3. Login to the web server. Refer to [Logging in to the Web Server \(page 22\)](#) for more information.
 4. Click **System** in the side menu bar.

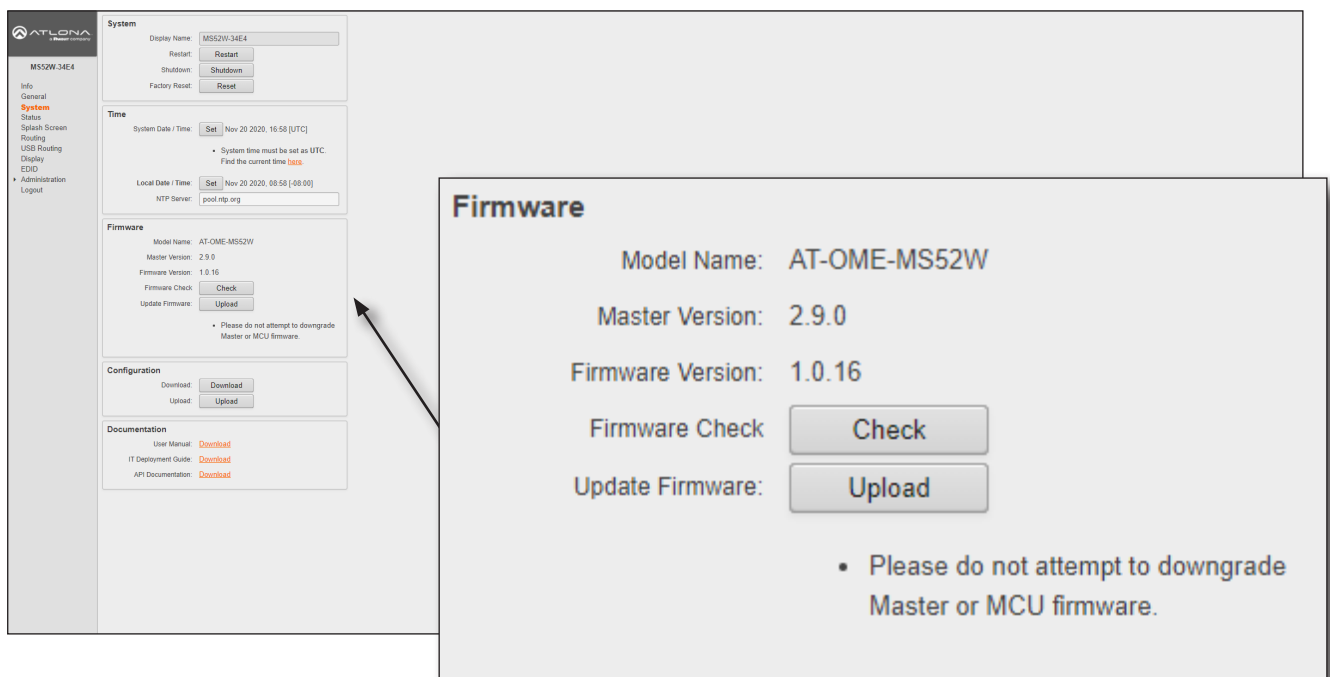

 5. Under the **Firmware** window group, click the **Upload** button.
6. Browse to the location of the SW52-[version].bin firmware file, select it, and click the **Open** button.
7. During the update process, the following message will appear in the upper-right corner of the screen. The unit will automatically reboot as part of the update process.



IMPORTANT: Note that the firmware update process could take anywhere from 8 to 10 minutes to complete. Do not disconnect power or touch the unit during the firmware update process.

8. After the firmware process has completed, the AT-OME-MS52W will automatically reboot and the following message will appear at the top of the screen.

Communication problem Take note of any unsaved data, and click here or press ESC to continue.

9. Click the message or press the ESC key to return to the **Login** screen. Enter the login credentials.
10. The firmware update process is complete.

Mounting Instructions

The AT-OME-MS52W can be mounted in different ways, based on the number of units that are being installed. The AT-OME-MS52W can be mounted in a rack or on/under any flat surface.



NOTE: Rack ears (Atlona part no. AT-UHD-SW-510W-RM) are sold separately. Contact Atlona for more information.


Single-unit Rack Installation

1. Attach the included small rack ear (sold separately) to one side of the AT-OME-MS52W, using the included screws.
2. Attach the included longer rack ear (sold separately) to the opposite side of the AT-OME-MS52W using the included screws.



Dual-unit Rack Installation

1. Turn both units upside-down on a flat surface, next to each other, as shown.
2. Position the included mounting plates over the holes on the bottom of the enclosure.
When attaching mounting plates, the countersink bevels on the mounting plate should face upward.

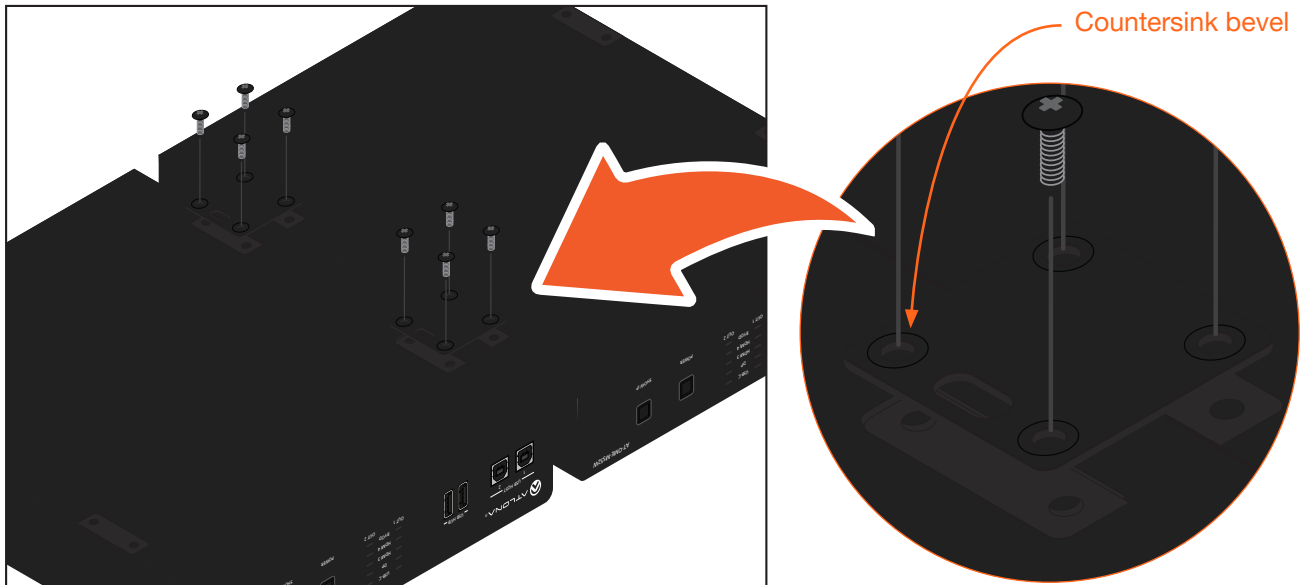


3. Turn the attached units over and install the rack ears (sold separately) to one side of each enclosure using the included screws.




Flat Surface

1. Turn the unit upside down, on a flat surface.
2. Position the included mounting plates over the pre-drilled holes on the bottom of the enclosure. When attaching mounting plates, the countersink bevels on the mounting plates should face upward.

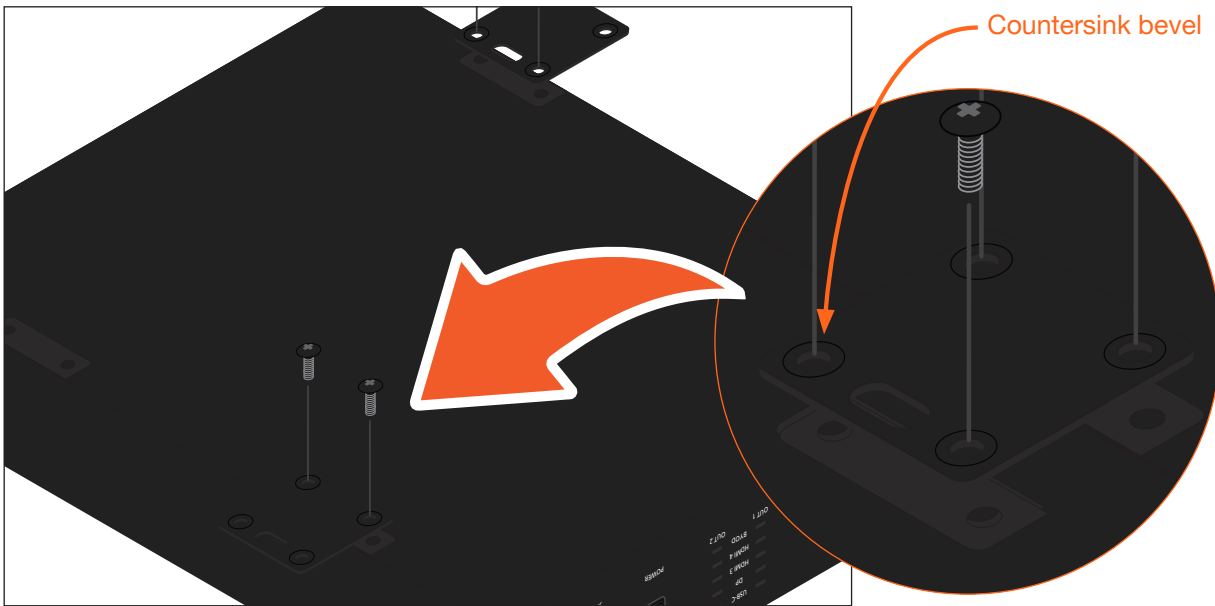

3. Mount the unit using the circular holes, on each mounting plate. If using a drywall surface, a #6 drywall screw is recommended. Mounting screws are not included.

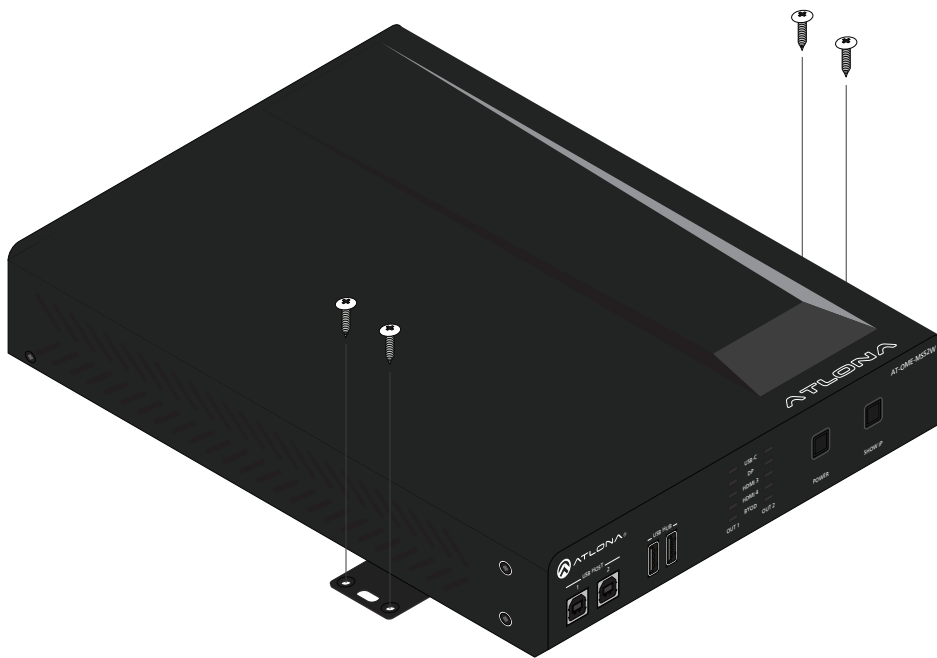

NOTE: The unit can also be mounted under a flat surface, such as a table, by turning the unit upside down.

Specifications

Video			
HDMI	2.0 ⁽¹⁾		
HDCP	2.2 (wired-device connections, only)		
UHD/HD	4096×2160 @ 60 ⁽²⁾ /50/30/25/24 Hz 3840×2160 @ 60 ⁽²⁾ /50/30/25/24 Hz 1920×1080p @ 60/59.9/50/30/29.97/25/24/23.98 Hz 1920×1080i @ 30/29.97/25 Hz 1280×720p @ 60/59.94/50 Hz	720×576p @ 50 Hz 720×576i @ 50 Hz 640×480p @ 60/59.96 Hz 640×480i @ 30 Hz	
VESA All resolutions are 60 Hz	2560×1600 2048×1536 1920×1200 1680×1050 1600×1200 1440×900 1400×1050 1280×1024	1280×800 1366×768 1360×768 1152×864 1024×768 800×600 640×480	
USB-C ⁽³⁾	Up to 4K/UHD @ 60 Hz for devices supporting USB-C Alternate Mode video output		
Wireless	Up to 1080p @ 30 Hz 4:2:0 (up to 1080p @ 60 Hz with Miracast™); dependent on wireless signal quality		
Color Space	YUV, RGB		
Chroma Subsampling	4:4:4, 4:2:2, 4:2:0		
Color Depth	8-bit, 10-bit, 12-bit		
HDR ⁽⁴⁾	HDR10, Hybrid-Log Gamma (HLG), and Dolby® Vision™ @ 60 Hz		

Audio			
HDMI / HDBaseT Pass-Through Formats	LPCM 2.0 LPCM 5.1 LPCM 7.1	Dolby® Digital Dolby Digital Plus™ Dolby TrueHD Dolby Atmos®	DTS® Digital Surround™ DTS-HD Master Audio™ DTS:X®
Bit Rate	24 Mbits/s max		
Analog Audio			
Format	2-channel stereo		
Balanced Output	+4 dBu, nominal gain; +20 dBu headroom		
Frequency Response	20 Hz to 20 kHz, ±0.5 dB		
THD + N	< 0.009% @ 20 Hz to 20 kHz		
SNR	> 94 dB @ 1 kHz, zero clipping @ 0 dBFS, unweighted		
Sample Rate	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz		

USB	
Signal	2.0
Maximum Data Rate	120 Mbps
USB-C	Supports Audio, Video, device and host data, and up to 60W power charging
USB-C Device Charging Capability	Up to 20 V, 3 A Output: 60 W @ 20 V, 36 W @ 12 V, 15 W @ 5 V

Protocols	
Addressing	DHCP, static
Security	HTTPS, SSL, TLS
Authentication	IEEE 802.1x
Wi-Fi	IEEE 802.11n/ac 2.5 GHz / 5 GHz
Wi-Fi Security	WPA, WPA2, PSK

Control	
RS-232	Device control and configuration Bidirectional pass-through from control system over HDBaseT Supported baud rates: 2400, 4800, 9600, 19200, 38400, 57600, 115200
IP	Protocols: HTTPS, Telnet, mDNS Modes: DHCP, Static – selectable through front panel and built-in web server
CEC	Yes

Resolution / Distance	4K/UHD - Feet / Meters		1080p - Feet / Meters	
HDMI IN/OUT	15	5	30	10
CAT5e/6	295	90	330	100
CAT6a/7	330	100	330	100

Connectors	
HDMI IN	2 - Type A, 19-pin female
HDMI OUT	1 - Type A, 19-pin female
DP IN	1 - 20-pin female
USB-C IN	1 - USB Type-C v3.1, 24-pin female, AV input (Alternate Mode)
USB	3 - USB 2.0 Type A for Wi-Fi® antenna modules
USB HOST	2 - Type B, female
USB HUB	2 - Type A, 4-pin female
RS-232	1 - 3-pin captive screw (bidirectional)
RELAY	1 - 3-pin captive screw, normally open (NO), with adjustable Toggle and Pulse modes Electrical rating: 48 V @ 1 A (max.)
TRIGGER I/O	1 - 4-pin captive screw, electrical rating: 30 V @ 1 A (max.)
AUDIO IN	1 - 3.5 mm, unbalanced 2-channel
AUDIO OUT	1 - 5-pin captive screw, balanced / unbalanced 2-channel
HDBaseT OUT	1 - RJ45
LAN	1 - RJ45, 10/100/1000 Mbps
DC 24V	1 - 4-pin DIN, locking

Indicators and controls	
Output Indicators USB-C, DP, HDMI 3, HDMI 4, BYOD	5 - LED, blue (OUT1: HDMI) 5 - LED, blue (OUT2: HDBaseT)
Control Buttons	4 - momentary, tact-type POWER: Power-off the unit SHOW IP: Displays the IP address of the unit on the connected display IP MODE: Toggles IP mode RESET: Resets the unit to factory-default settings

Environmental	Fahrenheit	Celsius
Operating Temperature	+32 to +122 °F	0 to 50 °C
Storage Temperature	-4 to +140 °F	-20 to 60 °C
Operating Humidity (RH)	20% to 90%, non-condensing	

Power	
Consumption	143 W
External Power Supply	100 - 240 V AC, 50/60 Hz Output: 24 V / 6.25 A DC

Appendix

Dimensions (H x W x D)	Inches	Millimeters
Device	1.65 x 8.62 x 10	42 x 219 x 254
Power Supply (AT-PS-245-D4)	1.6 x 2.6 x 6.2	40.6 x 66 x 157.4

Weight	Pounds	Kilograms
Device	3.89	1.77

Certification	
Device	CE, FCC
Power	CE, FCC, UL

(1) 18 Gbps supported for HDMI 2.0 output.

(2) HDMI output supports 4K/UHD @ 50 or 60Hz with 4:4:4 chroma sampling. HDBaseT output supports 4K/UHD @ 50 or 60 Hz with 4:2:0 chroma subsampling.

(3) USB-C does not support the following input resolutions: 2560x2048, 2048x1536, 2028x1080, and 1440x1050.

(4) HDR not supported on HDBaseT output.

